

***TravelMate4220/2480 & Aspire5600  
Service Guide***

Service guide files and updates are available  
on the AIPG/CSD web; for more information,  
please refer to <http://csd.acer.com.tw>

---

# Revision History

Please refer to the table below for the updates made on TravelMate4220/2480 & Aspire5600 service guide.

Date	Chapter	Updates

---

## ***Copyright***

Copyright © 2005 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

## ***Disclaimer***

The information in this guide is subject to change without notice.

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Acer is a registered trademark of Acer Corporation.

Intel is a registered trademark of Intel Corporation.

Pentium 4 and Celeron are trademarks of Intel Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

---

## ***Conventions***

The following conventions are used in this manual:

<b>Screen messages</b>	Denotes actual messages that appear on screen.
<b>NOTE</b>	Gives bits and pieces of additional information related to the current topic.
<b>WARNING</b>	Alerts you to any damage that might result from doing or not doing specific actions.
<b>CAUTION</b>	Gives precautionary measures to avoid possible hardware or software problems.
<b>IMPORTANT</b>	Reminds you to do specific actions relevant to the accomplishment of procedures.



---

## ***Preface***

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

---

## **Chapter1 System Specifications 1**

- Features 1
- Block Diagram 3
- TM 4220/2480 Outlook View 4
- Aspire 5600 Outlook View 9
- Indicators 14
- Easy-Launch Buttons 15
- Touchpad 16
- Using the Keyboard 17
- Using the System Utilities 22
- Acer Empowering Technology 25
- Hardware Specifications and Configurations 35

## **Chapter2 System Utilities 46**

- BIOS Setup Utility 46
- Information 47
- Main 48
- Security 50
- Boot 53
- Exit 54
- BIOS Password Removal 55

## **Chapter3 Machine Disassembly and Replacement 57**

- General Information 58
- Disassembly Procedure Flowchart 59
- Removing the Adapter and Battery Pack 60
- Removing the TV Tuner, Heatsink Module, CPU, and HDD Module 61
- Removing the Memory and Wireless Card 64
- Removing the Bluetooth Module 65
- Disassembling the Main Unit into Upper Case and Lower Case 66
- Disassembling the LCD Module 69
- Reassembling the LCD Module 72
- HDD disassembly & Reassembly 74
- ODD disassembly & Reassembly 75
- Main Unit Reassembly 76

## **Chapter4 Troubleshooting 85**

- System Check Procedures 86
- Power-On Self-Test (POST) Error Message 89
- Index of Error Messages 90
- Phoenix BIOS Beep Codes 92
- Index of Symptom-to-FRU Error Message 96
- Intermittent Problems 100
- Undetermined Problems 101

## **Chapter5 Jumper and Connector Locations 102**

- Top View 102
- Bottom View 103

## **FRU (Field Replaceable Unit) List 104**

- Exploded Diagram 105
- Part List 108

# System Specifications

---

## Features

This computer was designed with the user in mind. Here are just a few of its many features:

### Performance

- Intel® Pentium® M Yonah Processor dual core at 1.66~2.16 GHz
- Intel® Pentium® M Yonah Processor single core at 1.66~1.83 GHz
- Intel® Celeron® M Yonah Processors at 1.66~1.83 GHz

### Chipset

- North Bridge:
  - 945GM/945PM/940GML
- South Bridge:
  - ICH7M

### Memory

- 256MB or 512MB of DDRII 533/667 SDRAM
- Two DDR SODIMM slots
- Upgradeable to 2GB Memory for 32bit OS

### Display

- 15.4" TFT WXGA, WXGAG
- 15" TFT XGA

### Graphics

- UMA
- Discrete
  - ATI MOBILITY™ RADEON® X1400(M54P), X1300(M52P)

### VRAM

- UMA
  - DVMT3.0, share 8MB, up to 128MB in OS
- Discrete
  - M54P:128MB, up to 256MB, 512MB in OS
  - M52P:128MB, up to 256MB, 512MB in OS

### Audio

- Realtek ALC883 Audio Codec
- HD(High Definition) Audio
- SNR > 85
- Internal Microphone

- 
- Two speakers, at least 1W/9cc for each
  - Enable VoIP function

### ***Storage***

- PATA(SATA ready)
- 9.5mm height, 2.5" HDD
- Easily removable
- 60/80/100/120GB
- PCI Bus Master Enhanced IDE
- Support Ultra DMA100, S.M.A.R.T

### ***Communication***

- 56Kbps V.90/V.92 AC-Link modem card (MDC1.5)
- 10/100Mbps on board
- WLAN 802.11b/g or 802.11 a/b/g dual-band tri-mode Wireless with Mini-card/Mini-PCI interface
- Built-in 2 Antenna (which has to be placed on the top of LCD on the sides of LCD latch)


### ***I/O Ports***

- 3 external USB 2.0 ports
- Ethernet (RJ-45) port
- Modem (RJ-11) port
- External display (VGA) port(15-pin)
- One Microphones-in
- One Line-in jack
- Headphones/Line-out jack with SPDIF support
- DC-in jack for AC adaptor
- 1 PCMCIA

### ***Battery***

- 8-cell of 18650 Li-ion battery pack, (2400mAh)
- 4-cell of 18650 Li-ion battery pack, (2000mAh)
- 6-cell of 18650 Li-ion battery pack, (2000mAh)
- 3-pin 90W AC adaptor


# Block Diagram

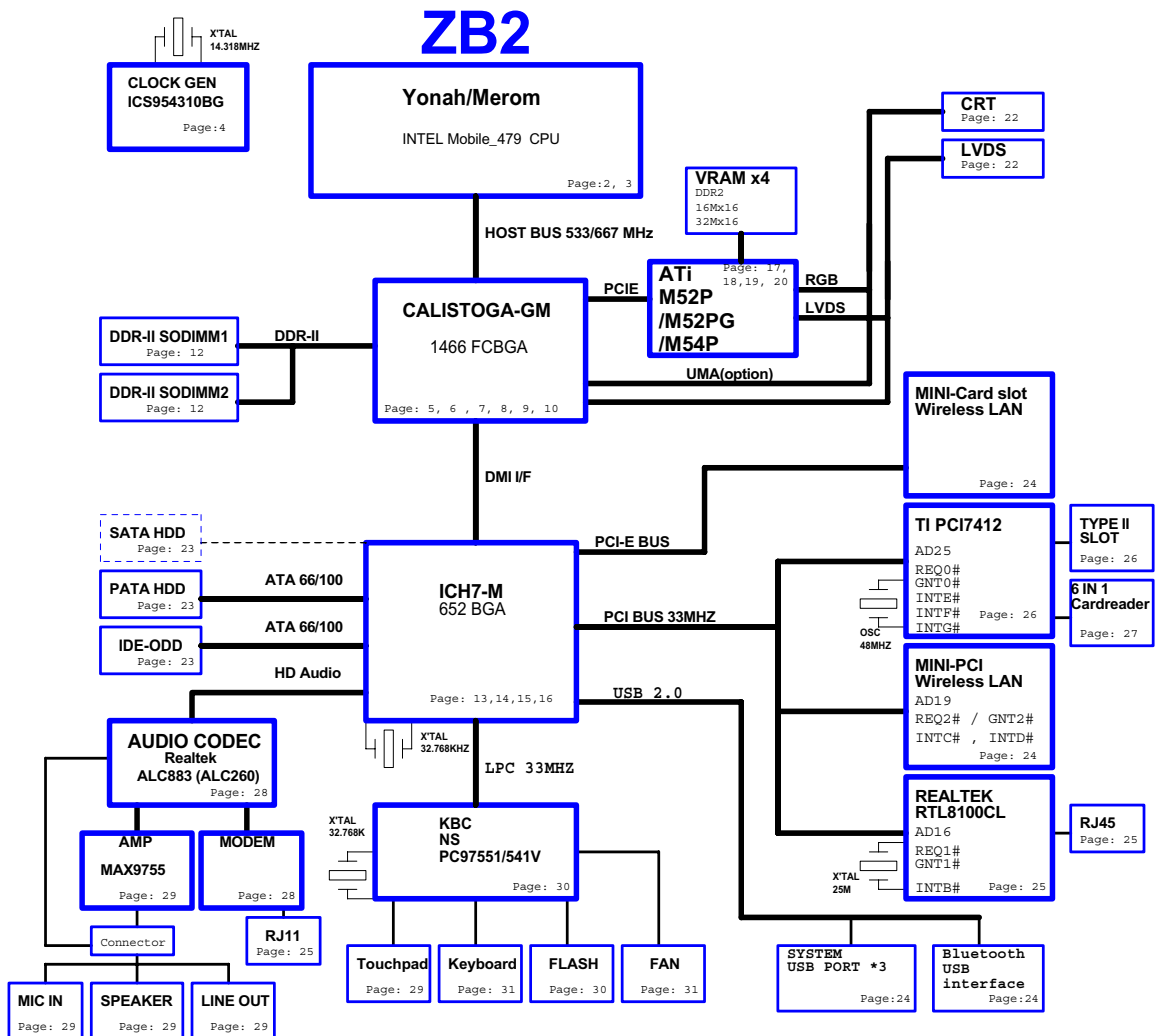

# TM 4220/2480 Outlook View


A general introduction of ports allow you to connect peripheral devices, as you would with a desktop PC.



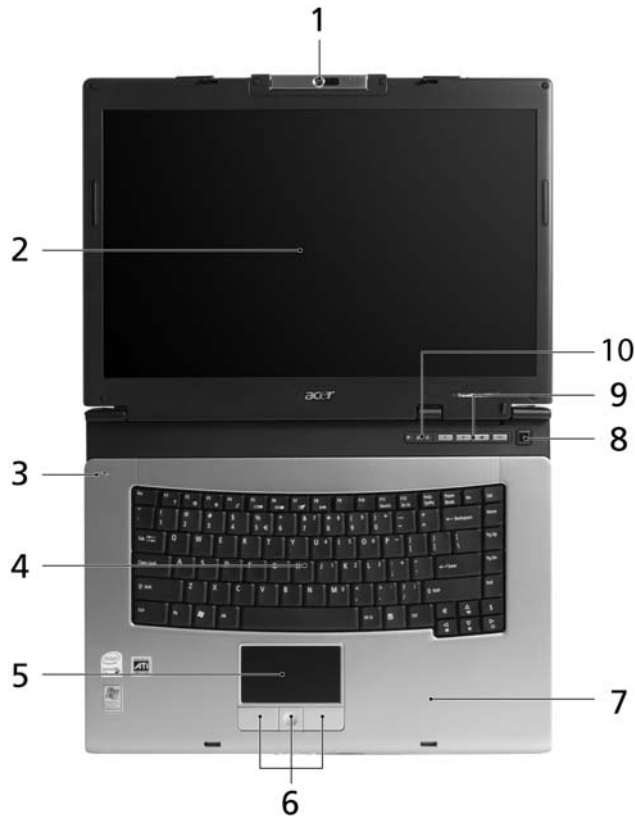





## Open View

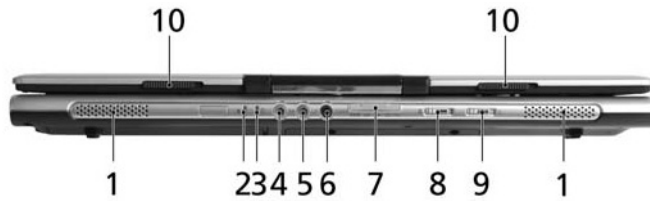

#	Item	Description
1	Built-in camera	1.3/0.31 megapixel web camera for video communication(for selected models)
2	Display screen	Also called Liquid-Crystal Display (LCD), displaying computer output.
3	Microphone	Internal microphone for sound recording.
4	Keyboard	Inputs data into your computer.
5	Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
6	Click buttons (Left, center and right)	The left and right buttons function like the left and right mouse buttons; the center button serves as a 4-way scroll button.
7	Palmrest	Comfortable support area for your hands when you use the computer.
8	Power button	Turns the computer on and off.
9	Easy-launch buttons	Buttons for launching frequently used programs.
10	Status indicators	Light-Emitting Diodes (LEDs) that turn on and off to show the status of the computer's functions and components.

## Front View



#	Icon	Item	Description
1	N/A	Speakers	Left and right speakers deliver stereo audio output.
2		Power indicator	Indicates the computer's power status.
3		Battery indicator	Indicates the computer's battery status.
4		Line-in jack	Accepts audio line-in devices (e.g., audio CD player, stereo walkman).
5		Mic-in jack	Accepts inputs from external microphones.
6		Headphones/ speaker/line-out jack with SPDIF support	Connects to audio line-out devices(e.g., speakers, headphones)
7		5-in-1 card reader	Accepts Memory Stick(MS), Memory Stick PRO(MS PRO), MultiMediaCard(MMC), Secure Digital (SD) and xD-Picture Card(xD) (for TravelMate 4270/4670 Series) <b>NOTE:</b> Only one card can operate at any given time.
8		Bluetooth communication button/indicator	Press to enable/disable Bluetooth function. Lights to indicate the status of Bluetooth communications.
9		Wireless communications button/indicator	Press to enable/disable Wireless function. Lights to indicate the status of wireless LAN communications. (manufacturing option)
10	N/A	Latch	Locks and releases the lid.




## Left View



#	Icon	Item	Description
1	N/A	Optical drive	Internal optical drive; accepts CDs or DVDs
2	N/A	Optical disk access indicator	Lights up when the optical drive is active.
3	N/A	Optical drive eject button	Ejects the optical disk from the drive.
4	N/A	Emergency eject hole	Ejects the optical drive tray when the computer is turned off.

## Right View








#	Icon	Item	Description
1		PC Card slot eject button	Ejects the PC Card from the slot.
2		PC Card slot	Connects to one Type II CardBus PC Card.
3		Two USB 2.0 ports	Connect to Universal Serial Bus (USB) 2.0 devices (e.g., USB mouse, USB camera).
4		Ventilation slots	Enable the computer to stay cool, even after prolonged use.
5		External display(VGA) port	Connects to a display device(e.g., external monitor, LCD projector)



## Rear View



#	Icon	Item	Description
1		DC-in Jack	Connects to an AC adapter.
2		USB2.0 ports	Connect to USB 2.0 devices(e.g., USB mouse, USB camera)
3		Ethernet(RJ-45) port	Connects to an Ethernet 10/100/1000 based network.
4		Modem(RJ-11) port	Connects to a phone line.
5		Battery	Powers the computer
6		Kensington lock slot	Connects to a Kensington-compatible computer security lock.

---

## Bottom View




#	Item	Description
1	Battery release latch	Unlatches the battery to remove the battery pack.
2	Cooling fan	Helps keep the computer cool. <b>NOTE:</b> Do not cover or obstruct the opening of the fan.
3	Memory compartment	Houses the computer's main memory
4	Hard disk bay	Houses the computer's main memory
5	Battery lock	Locks the battery in position.
6	Battery bay	Houses the computer's battery pack.

---

# Aspire 5600 Outlook View

## Open View

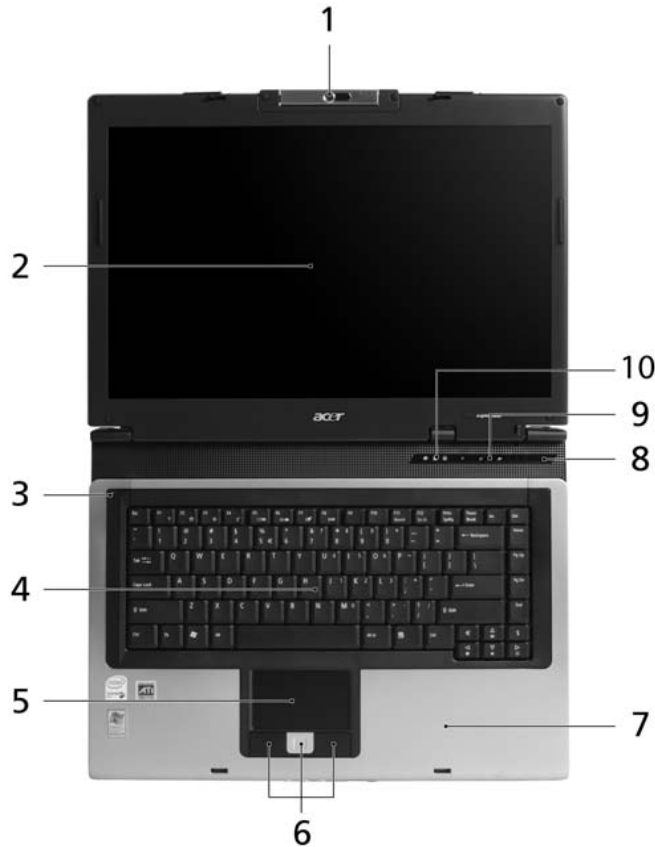


#	Item	Description
1	Built-in camera	1.3 megapixel web camera for video communication(for select models)
2	Display screen	Also called Liquid-Crystal Display (LCD), displaying computer output.
3	Microphone	Internal microphone for sound recording.
4	Keyboard	Inputs data into your computer.
5	Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
6	Click buttons (Left, center and right)	The left and right buttons function like the left and right mouse buttons; the center button serves as a 4-way scroll button.
7	Palmrest	Comfortable support area for your hands when you use the computer.
8	Power button	Turns the computer on and off.
9	Easy-launch buttons	Buttons for launching frequently used programs.

10	Status indicators	Light-Emitting Diodes (LEDs) that turn on and off to show the status of the computer's functions and components.
----	-------------------	------------------------------------------------------------------------------------------------------------------


## Front View



#	Icon	Item	Description
1	N/A	Speakers	Left and right speakers deliver stereo audio output.
2		Power indicator	Indicates the computer's power status.
3		Battery indicator	Indicates the computer's battery status.
4		Line-in jack	Accepts audio line-in devices (e.g., audio CD player, stereo walkman).
5		Mic-in jack	Accepts inputs from external microphones.
6		Headphones/ speaker/line-out jack with S/PDIF support	Connects to audio line-out devices(e.g., speakers, headphones)
7		5-in-1 card reader	Accepts Memory Stick(MS), Memory Stick PRO(MS PRO), MultiMediaCard(MMC), Secure Digital (SD) and xD-Picture Card(xD) (for Aspire 5670 Series) <b>NOTE:</b> Only one card can operate at any given time.
8		Bluetooth communication button/indicator	Press to enable/disable Bluetooth function. Lights to indicate the status of Bluetooth communications.


9		Wireless communications button/indicator	Press to enable/disable Wireless function. Lights to indicate the status of wireless LAN communications. (manufacturing option)
10	N/A	Latch	Locks and releases the lid.

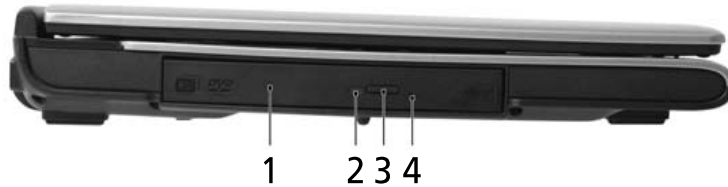

### Left View




#	Icon	Item	Description
1	N/A	Optical drive	Internal optical drive; accepts CDs or DVDs
2	N/A	Optical disk access indicator	Lights up when the optical drive is active.
3	N/A	Optical drive eject button	Ejects the optical disk from the drive.
4	N/A	Emergency eject hole	Ejects the optical drive tray when the computer is turned off.
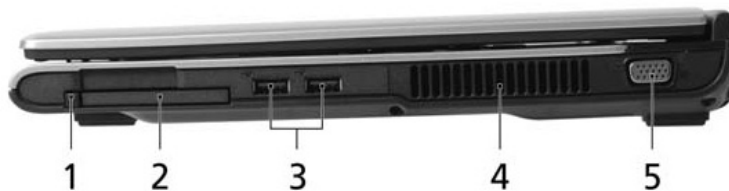
### Right View








#	Icon	Item	Description
1	N/A	PC Card slot eject button	Ejects the PC Card from the slot.
2		PC Card slot	Connects to one Type II CardBus PC Card.
3		Two USB 2.0 ports	Connect to Universal Serial Bus (USB) 2.0 devices (e.g., USB mouse, USB camera).

#	Icon	Item	Description
4	N/A	Ventilation slots	Enable the computer to stay cool, even after prolonged use.
5		External display(VGA) port	Connects to a display device(e.g., external monitor, LCD projector)

## Rear View



#	Icon	Item	Description
1		DC-in Jack	Connects to an AC adapter.
2		USB2.0 ports	Connect to USB 2.0 devices(e.g., USB mouse, USB camera)
3		Ethernet(RJ-45) port	Connects to an Ethernet 10/100/1000 based network.
4		Modem(RJ-11) port	Connects to a phone line.
5		Battery	Powers the computer
6		Kensington lock slot	Connects to a Kensington-compatible computer security lock.

---

## Bottom View










#	Item	Description
1	Battery release latch	Unlatches the battery to remove the battery pack.
2	Cooling fan	Helps keep the computer cool. <b>NOTE:</b> Do not cover or obstruct the opening of the fan.
3	Memory compartment	Houses the computer's main memory
4	Hard disk bay	Houses the computer's main memory(secured with screws)
5	Battery lock	Locks the battery in position.
6	Battery bay	Houses the computer's battery pack.

## Indicators

Your computer provides an array of three indicators located above the keyboard, in addition to four indicators positioned at the front panel. These indicators show the status of the computer and its component.



The power, battery and wireless communication status indicators are visible even when the LCD display is closed.

Icon	Item	Description
	Caps Lock activity	Lights up when Caps Lock is activated.
	Num Lock activity	Lights up when Num Lock is activated.
	HDD	Indicate when the hard disk drive is active.
	Bluetooth	Indicates the status of Bluetooth communication.
	Wireless LAN	Indicates the status of wireless LAN communication.
	Power	Indicates the status of computer's power status.
	Battery	Indicates the computer's battery status. <b>NOTE:</b> The lights shows amber when the battery is charging. <b>NOTE:</b> The lights shows green when in AC mode.



---

## ***Easy-Launch Buttons***

Located at the upper-right, above the keyboard are four easy-launch buttons. They are User-Programmable Button, Mail, Web Browser, Acer Empowering Key from left to right.

**Aspire 5600**



**TravelMate 4220/2480**



<b>Item</b>	<b>Default Application</b>
P	User programmable
e	Acer Empowering Technology(User-programmable)
Web Browser	Internet browser(User -programmable)
Mail	Email application(User-programmable)


# Touchpad

The build-in touchpad is a pointing device that senses movement on its surface.

This means the cursor responds as you move your finger across the surface of the touchpad.

The touchpad is located in the middle of the palm rest area, providing maximum comfort and efficiency.

## Touchpad Basics

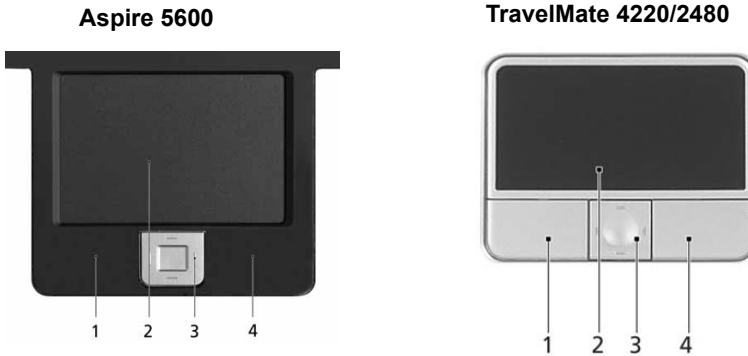

- Move your finger across the touchpad to move the cursor.
- Press the left **(1)** and right **(4)** buttons located beneath the touchpad to perform selection and execution functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad is the same as clicking the left button
- Use the 4-way scroll **(3)** button to scroll up or down and move left or right a page. This button mimics your cursor pressing on the right scroll bar of windows applications.

Function	Left Button(1)	Righ Button(4)	Main touchpad(2)	Center button(3)
Execute	Click twice quickly		Tap twice (at the same speed as double-clicking the mouse button)	
Select	Click once		Tap once	
Drag	Click and hold. Then slide your finger across the touchpad to drag the cursor over the selection.		Tap twice quickly; rest your finger on the touchpad on the second tap and drag the cursor.	
Access context menu		Click once		
Scroll				Click and hold to move up/down/left/right

**NOTE:** When using the touchpad, keep it-and your fingers-dry and clean. The touchpad is sensitive to finger movement; hence, the lighter the touch, the better the response. Tapping harder will not increase the touchpad's responsiveness.

# Using the Keyboard

The full-sized keyboard includes an embedded numeric keypad, separate cursor keys, two Windows keys and twelve function keys.

## Lock keys and Embedded Numeric Keypad

The keyboard has four lock keys which you can toggle on and off.

TravelMate 4220/2480



Aspire 5600



The computer features three lock keys, each with its own status indicator light.

Lock Key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters are typed in uppercase. Toggle on and off by pressing the Caps Lock key on the left side of the keyboard.
Num lock <Fn+F11>	When Num Lock is on, the embedded keyboard is in numeric mode. The keys function as a calculator (complete with the arithmetic operators +, -, *, and /). Use this mode when you need to do a lot of numeric data entry. A better solution would be to connect and external keypad.
Scroll lock <Fn+F12>	When Scroll Lock is on, the screen moves one line up or down when you press the up or down arrow keys respectively. Scroll Lock does not work with some applications.









The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the upper right corner of the keycaps. To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.

Desired access	Num Lock on	Num Lock off
Numer keys on embedded keypad	Type numbers in a normal manner	

Desired access	Num Lock on	Num Lock off
Cursor-control keys on embedded keypad	Hold <Shift> while using cursor-control keys.	Hold <Fn> while using cursor-control keys.
Main keyboard keys	Hold <Fn> while typing letters on embedded keypad.	Type the letters in a normal manner.

## Windows Keys

The keyboard has two keys that perform Windows-specific functions.

<p>Windows logo key</p> 	<p>Pressed alone, this key has the same effect as clicking on the Windows Start button; it launches the Start menu. It can also be used with other keys to provide a variety of functions:</p> <ul style="list-style-type: none"> <li> + Tab (Activates the next Taskbar button)</li> <li> + E (Opens the My Computer window)</li> <li> + F1 (opens Help and Support)</li> <li> + F (opens the Find: All Files dialog box)</li> <li> + M (minimizes all windows)</li> </ul> <p>Ctrl + Windows logo key + M (undoes the minimize all windows action)</p> <ul style="list-style-type: none"> <li> + R (opens the Run dialog box)</li> </ul>
<p>Application key</p> 	<p>This key has the same effect as clicking the right mouse button; it opens the application's context menu.</p>

## Hotkeys

The computer employs hotkeys or key combinations to access most of the computer's controls like screen brightness, volume output and the BIOS utility. To activate hotkeys, press and hold the <Fn> key before pressing the other key in the hotkey combination.







**TravelMate 4220/2480**



**Aspire 5600**



Hot Key	Icon	Item	Description
Fn+F1	?	Hot key help	This key will cause a help message to appear on the display device that describes the definition and functionality of the unit hot keys.
Fn+F2		Acer eSettings	Launches the Acer eSetting in Acer Empowering Technology. See "Acer Empowering Technology"
Fn+F3		Acer ePower Management	Launches the Acer ePower Management in Acer Empowering Technology. See "Acer Empowering Technology"
Fn+F4	Z <sup>z</sup>	Sleep	Puts the computer in Sleep mode
Fn+F5		Display toggle	Switches display output between the display screen, external monitor(if connected)and both .
Fn+F6		Screen blank	Turns the display screen backlight off to save power. Press any key to return

Hot Key	Icon	Item	Description
Fn+F7		Touchpad toggle	Turns the internal touchpad on and off
Fn+F8		Speaker toggle	Turns the speakers on and off
Fn+w		Volume up	Increases the sound volume
Fn+y		Volume down	Decreases the sound volume
Fn+x		Brightness up	Increases the screen brightness
Fn+z		Brightness down	Decrease the screen brightness

## Special Keys

You can locate the Euro symbol and the US dollar sign at the upper-center and/or bottom-right of your keyboard.

**TravelMate 4220/2480**



**Aspire 5600**



---

### ***The Euro Symbol***

1. Open a text editor or word processor.
2. Either press < € > at the bottom-right of the keyboard, or hold <Alt Gr> and then press the <5> key at the upper-center of the keyboard.

**NOTE:** Some fonts and software do not support the Euro symbol. Please refer to [www.microsoft.com/typography/faq/faq12.htm](http://www.microsoft.com/typography/faq/faq12.htm) for more information.

### ***The US Dollar Sign***

1. Open a text editor or word processor.
2. Either press < \$ > at the bottom-right of the keyboard, or hold <Shift> and then press the <4> key at the upper-center of the keyboard.


**NOTE:** This function varies according to the language settings.

---


# Using the System Utilities

## Acer GridVista(dual-display compatible)

To enable the dual monitor feature of your notebook, first ensure that the second monitor is connected, then, select **Start, Control Panel, Display** and click on **Settings**. Select the secondary monitor (2) icon in the display box and then click the check box **Extend my Windows desktop onto this monitor**. Finally, click **Apply** to confirm the new settings and click **OK** to complete the process.

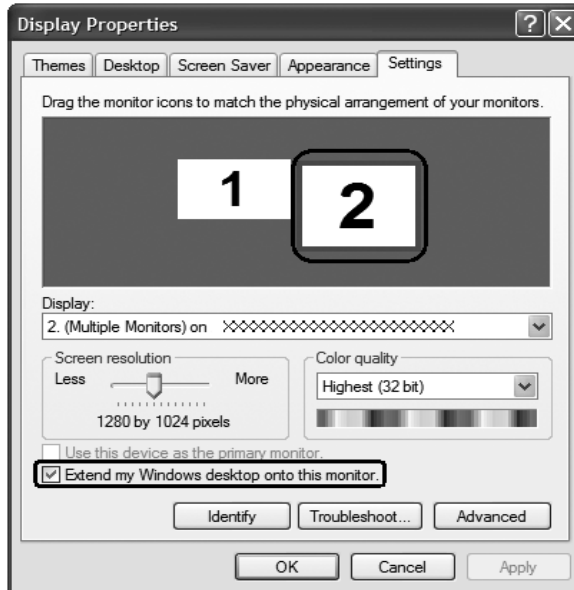

Acer GridVista is a handy utility that offers four pre-defined display settings so you can view multiple windows on the same screen. To access this function, please go to **Start, All Programs** and click on **Acer GridVista**. You may choose any one of the four display settings indicated below:



Double(vertical), Triple(primary at left), Triple(primary at right), or Quad Acer GridVista is dual-display compatible, allowing two displays to be partitioned independently.

### Set up Procedure


1. Run Acer GridVista and select your preferred screen configuration for each display from the taskbar.
2. Drag and drop each window into the appropriate grid.
3. Enjoy the convenience of a well-organized desktop.

**NOTE:** The system utilities work under Microsoft Windows XP only.



---

## Launch Manager

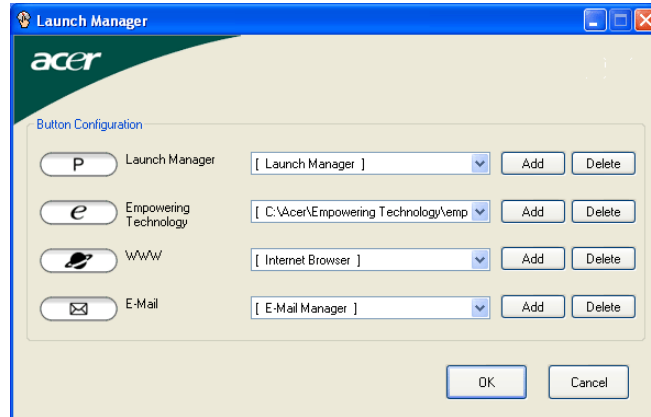

Launch Manager allows you to set the four easy-launch buttons located above the keyboard. You can access the Launch Manager by clicking on **Start, All Programs**, and then **Launch Manager** to start the application.

## Norton AntiVirus

Norton AntiVirus is an anti-virus software that finds and repairs infected files, and protects against viruses to keep your computer data safe and secure.


### How do I check for viruses?

A Full System Scan scans all files on your computer. To perform a system scan:

1. Start Norton AntiVirus.

Double click on the **Norton AntiVirus** icon on the desktop or click on the **Start** menu in the Windows taskbar, highlight **Programs**, and select **Norton AntiVirus**.

2. In the Norton AntiVirus main window, click **Scan for Viruses**.

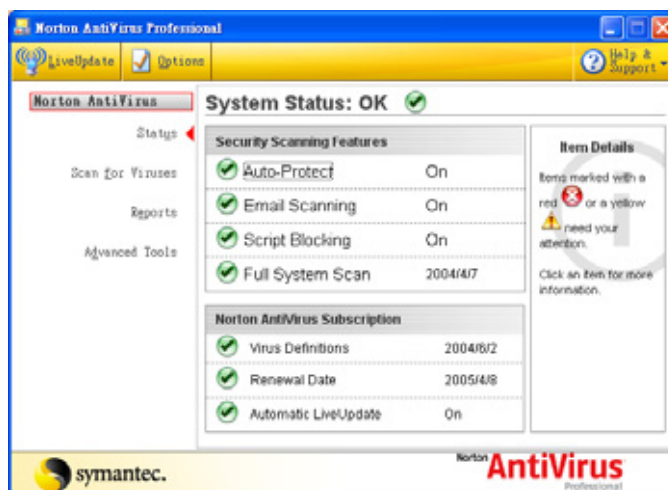

3. In the **Scan for Viruses** panel, click **Scan My Computer**.
4. Under **Actions**, click **Scan**.
5. When the scan is complete, a scan summary appears. Click **Finished**.

---

You can schedule customized virus scans that run unattended on specific dates and times or at periodic intervals. If you are using the computer when the scheduled scan begins, it runs in the background so that you do not have to stop working.

For more information refer to the Norton Antivirus Help menu.

---

## Acer Empowering Technology

Acer's innovative Empowering Technology makes it easy for you to access frequently used functions and manage your new Acer notebook. It features the following handy utilities:

- ❑ **Acer eDataSecurity Management** protects data with passwords and advanced encryption algorithms.
- ❑ **Acer eLock Management** limits access to external storage media.
- ❑ **Acer ePerformance Management** improves system performance by optimizing disk space, memory and registry settings.
- ❑ **Acer eRecovery Management** backs up/recovers data flexibly, reliably and completely.
- ❑ **Acer eSettings Management** accesses system information and adjusts settings easily.
- ❑ **Acer ePower Management** extends battery power via versatile usage profiles.
- ❑ **Acer ePresentation Management** connects to a projector and adjusts display settings conveniently.



For more information, press the < *e* > key to launch the Empowering Technology menu, then click on the appropriate utility and select the Help function.

### Acer eDataSecurity Management


Acer eDataSecurity Management is handy file encryption utility that protects your files from being accessed by unauthorized persons. It is conveniently integrated with Windows explorer as a shell extension for quick and

easy data encryption/decryption and also supports on-the-fly file encryption for MSN Messenger and Microsoft Outlook.

There are two passwords that can be used to encrypt/decrypt a file; the supervisor password and the file-specific password. The supervisor password is a “master” password that can decrypt any file on your system; the file-specific password will be used to encrypt files by default, or you can choose to enter your own file-specific password when encrypting a file.

**NOTE:** The password used to encrypt a file is the unique key that the system needs to decrypt it. If you lose the password, the supervisor password is the only other key capable of decrypting the file. If you lose both passwords, there will be no way to decrypt your encrypted file! **Be sure to safeguard all related passwords!**



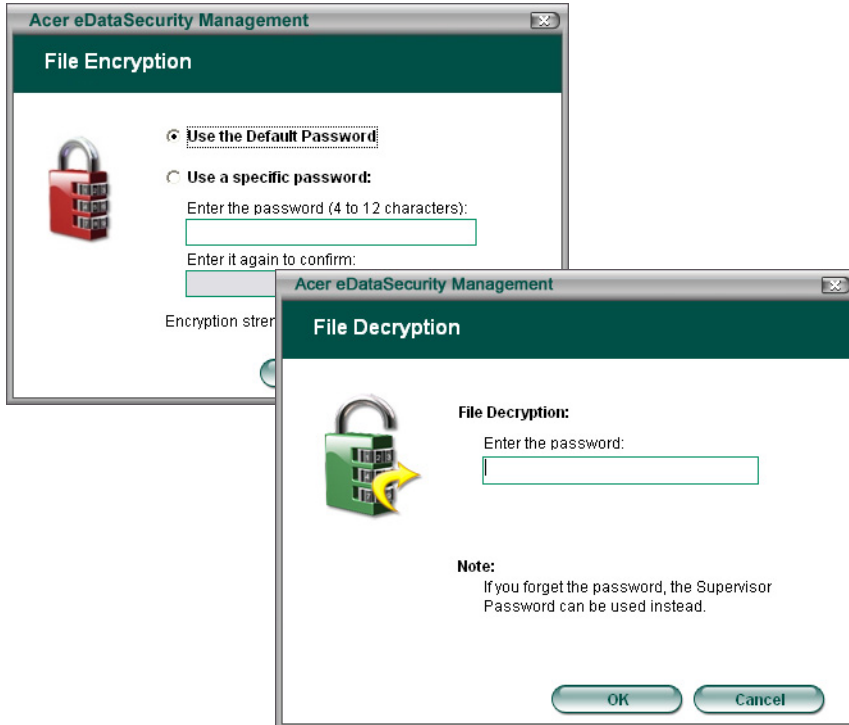

## ***Acer eLock Management***


Acer eLock Management is a security utility that allows you to lock up your removable data, optical and floppy drives to ensure that data can't be stolen while your notebook is unattended.

- ❑ Removable data devices - includes USB disk drives, USB pen drives, USB flash drives, USB MP3 drives, USB memory card readers, IEEE 1394 disk drives and any other removable disk drives that can be mounted as a file system when plugged into the system.
- ❑ Optical drive devices - includes any kind of CD-ROM or DVD-ROM drives.
- ❑ Floppy disk drives - 3.5-inch disks only.

To activate Acer eLock Management, a password must be set first. Once set, you may apply lock to any of the three kinds of devices. Lock(s) will immediately be set without any reboot necessary, and will remain locked after rebooting, until unlocked.

If you do not set a password, Acer eLock Management will reset back to the initial status with all locks removed.


**NOTE:** If you lose your password, there is no method to reset it except by reformatting your notebook or taking your notebook to an Acer Customer Service Center. Be sure to remember or write down your password.

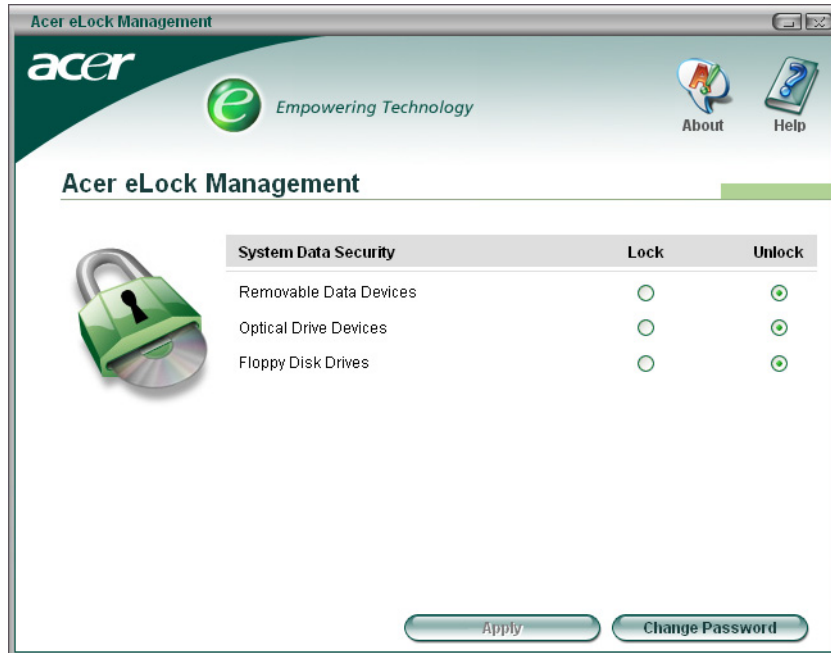

## ***Acer ePerformance Management***

Acer ePerformance Management is a system optimization tool that boosts the performance of your Acer notebook. It provides you with the following options to enhance overall system performance:


- Memory optimization - releases unused memory and check usage.
- Disk optimization - removes unneeded items and files.
- Speed optimization - improves the usability and performance of your Windows XP system.

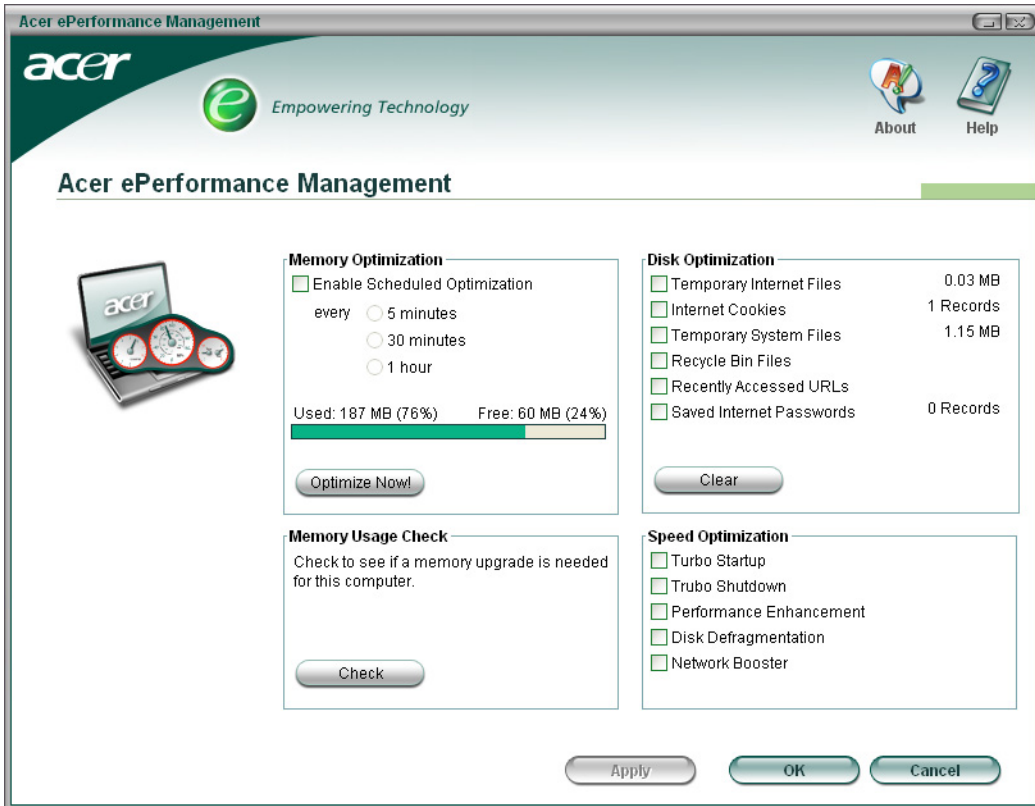

## ***Acer eRecovery Management***

Acer eRecovery Management is a powerful utility that does away with the need for recovery disks provided by the manufacturer. The Acer eRecovery Management utility occupies space in a hidden partition on your system's HDD. User-created backups are stored on D:\ drive. Acer eRecovery Management provides you with:

- Password protection.
- Recovery of applications and drivers.
- Image/data backup:
  - Back up to HDD (set recovery point).
  - Back up to CD/DVD.
- Image/data recovery tools:
  - Recover from a hidden partition (factory defaults).
  - Recover from the HDD (most recent user-defined recovery point).
  - Recover from CD/DVD.

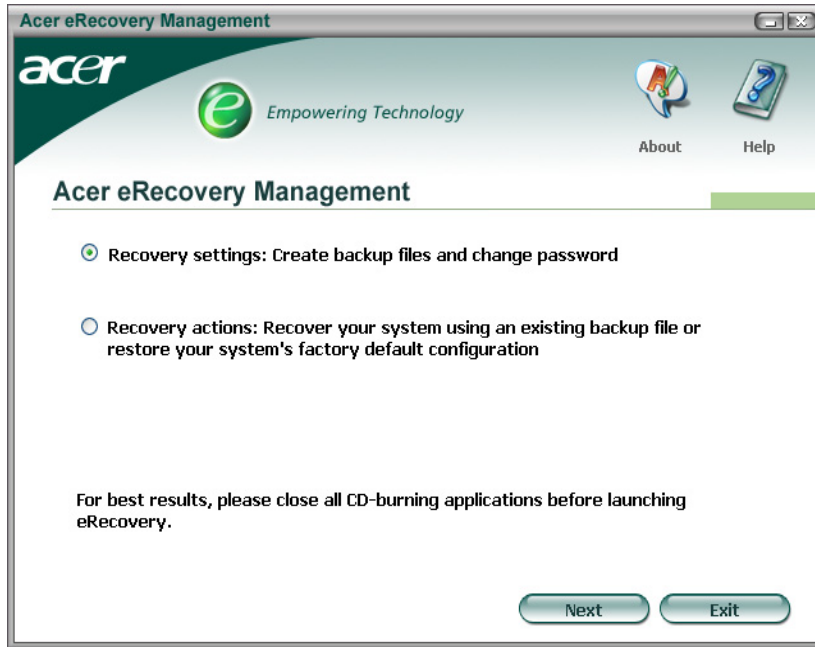

**NOTE:** If your computer did not come with a Recovery CD or System CD, please use Acer eRecovery Management's "System backup to optical disk" feature to burn a backup image to CD or DVD. To ensure the best results when recovering your system using a CD or Acer eRecovery Management, detach all peripherals (except the external Acer ODD, if your computer has one), including your Acer ezDock.

## ***Acer eSettings Management***

Acer eSettings Management allows you to inspect hardware specifications and to monitor the system health status. Furthermore, Acer eSettings Management enables you to optimize your Windows operating system, so your computer runs faster, smoother and better.

Acer eSettings Management also:

- Provides a simple graphical user interface for navigating through the program effortlessly.
- Displays general system status and advanced monitoring for power users.
- Logs when a hardware component has been removed or replaced.
- Permits you to migrate personal settings.
- Keeps a history log of all alerts that were previously issued.





## Acer eNet Management


Acer eNet Management helps you to quickly and easily connect to both wired and wireless networks in a variety of locations. To access this utility, either click on the “Acer eNet Management” icon on your notebook, or start the program from the Start menu. You also have the option to set Acer eNet Management to start automatically when you boot up your PC.

Acer eNet Management automatically detects the best settings for a new location, while offering you the freedom to manually adjust the settings to match your needs, simply by right-clicking on the icon in the taskbar.



Acer eNet Management can save network settings for a location to a profile, and automatically apply the appropriate profile when you move from one location to another. Settings stored include network connection

settings(IP and DNS settings, wireless AP details, etc.), as well as default printer settings. Security and safety concerns mean that Acer eNet Management does not store username and password information.

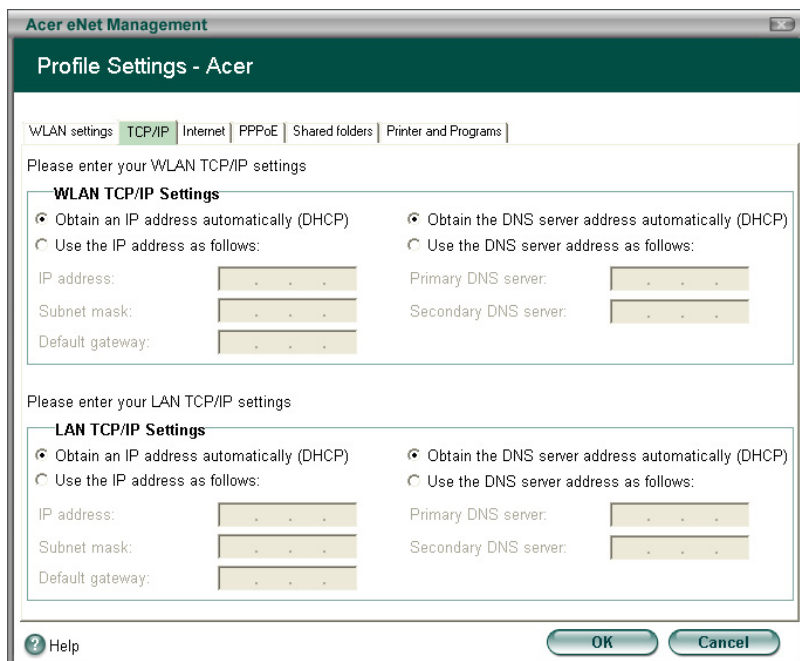

## ***Acer ePower Management***

Acer ePower Management features a straightforward user interface. To launch it, select Acer ePower Management from the Empowering Technology interface, or double-click the Acer ePower Management icon in the task tray.

### ***Acer Mode***

The default setting is “Maximum Performance.” You can adjust CPU speed, LCD brightness and other settings, or click on buttons to turn the following functions on/off: Wireless LAN, Bluetooth, CardBus, Memory Card, Audio, and Wired LAN.

### ***DC Mode***


To suit your usage, there are four pre-defined profiles - Entertainment, Presentation, Word Processing, and Maximum Battery. Or, you can define up to three of your own profiles.

### ***Create new power scheme***

1. Assign a name for the new scheme.
2. Choose existing scheme to use as a template.
3. Select whether used for mains (AC) or battery mode.
4. Choose which power options best fit your needs, then click OK.
5. The new profile will appear on the main screen.


### ***Battery status***

For real-time battery life estimates based on current usage, refer to the panel on the lower left-hand side of the window.

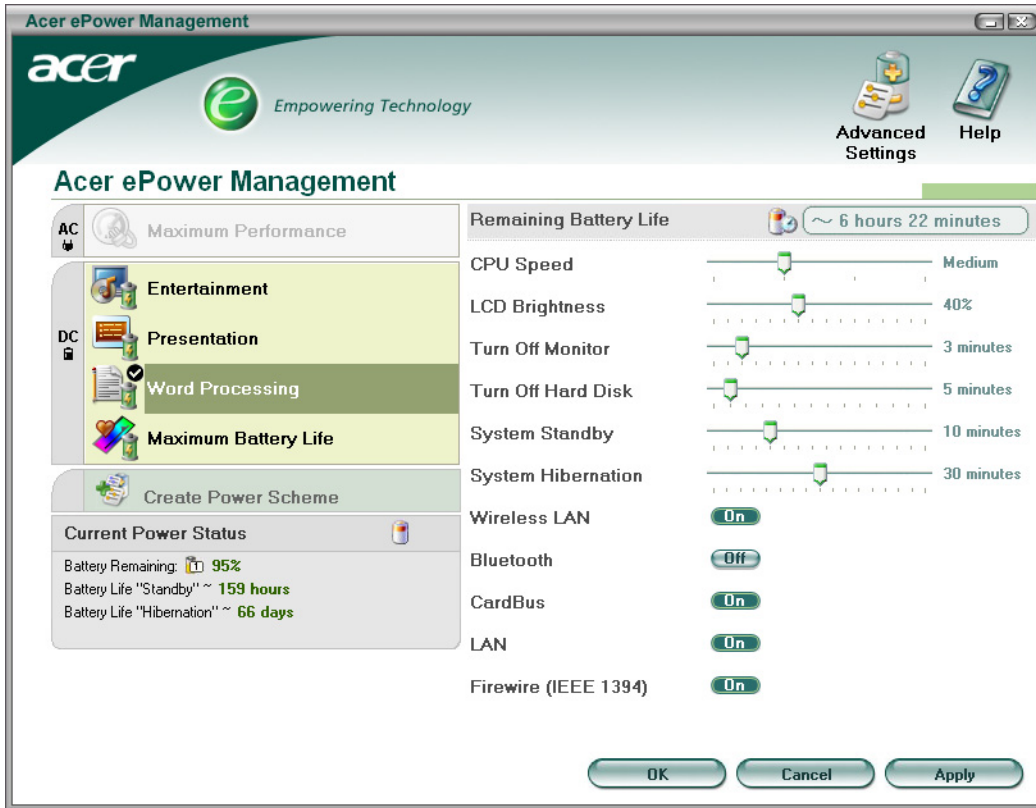


You can also click “Advanced Settings” to:

- Set alarms.
- Re-load factory defaults.
- Select what actions will be taken when the cover is closed, and set passwords for accessing the system after Hibernation or Standby.
- View information about Acer ePower Management.

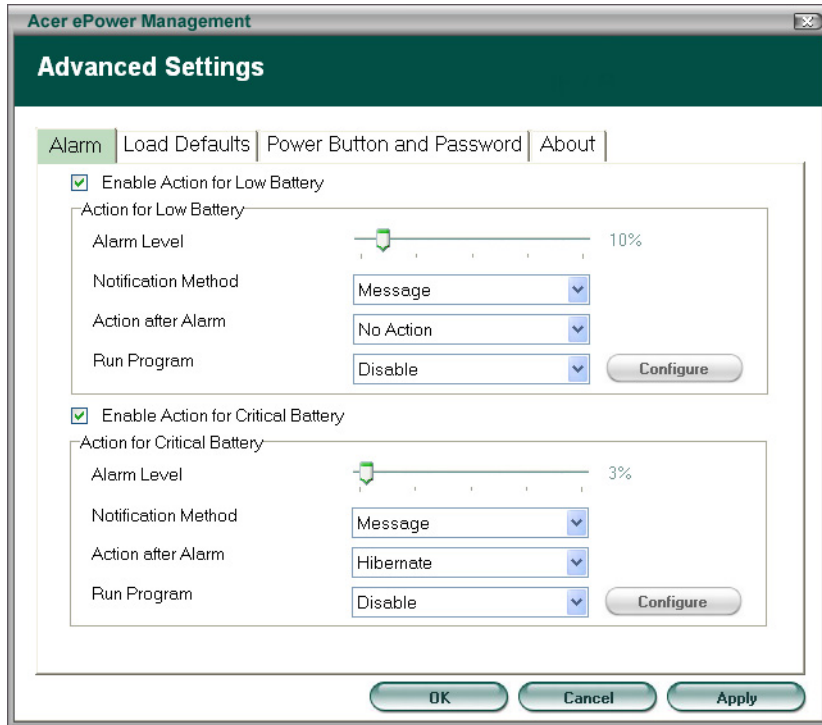

## Acer ePresentation Management

Acer ePresentation Management lets you select from two of the most common projector resolutions: XGA and SVGA.

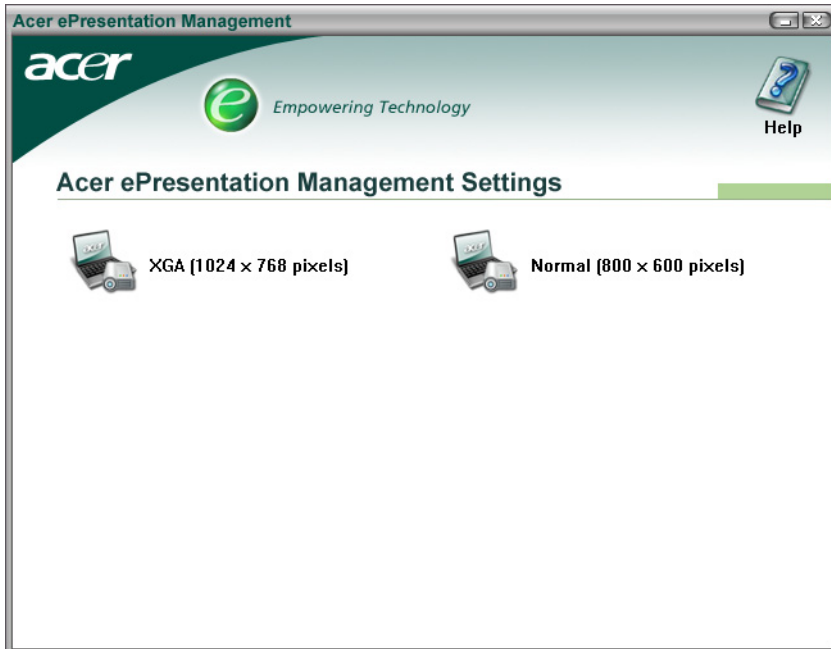

# Hardware Specifications and Configurations

## Processor

Item	Specification
CPU type	Intel® Pentium® M YonahProcessor dual core at 1.66~2.16 GHz Intel® Pentium® M Yonah Processor single core at 1.66~1.83 GHz Intel® Celeron® M Yonah Processosr at 1.66~1.83 GHz
CPU package	uFCPGA
CPU core voltage	Depend on DVI
CPU I/O voltage	VCCA 1.5V VCCP 1.05V

## System Board Major Chips

Item	Controller
System core logic	Intel® 945GM/ICH7M Intel® 945PM/ICH7M Intel® 940GML+ICH7M
Super I/O controller	N/A
Audio controller	Azalia Audio Controller ALC883
Video controller	ATI M54P/52P/52PG UMA
Hard disk drive controller	ICH7M
Keyboard controller	NS PC97551/541V
IrDA controller	N/A
DVI controller	N/A
PCMCIA/ card reader / 1394 controller	TI PCI7412
DDR-soDIMM controller	945PM/945GM/940GML

## BIOS

Item	Specification
BIOS vendor	Phoenix
BIOS Version	Phoenix First BIOS
BIOS ROM type	Flash ROM(SST39VF080)
BIOS ROM size	1MB
BIOS package	40 pins TSOP
BIOS password control	Set by setup manual

Item	Specification
Cache controller	Built-in CPU
Cache size	2 MB
1st level cache control	Always enabled
2nd level cache control	Always enabled
Cache scheme control	Always enabled

### **System Memory**

<b>Item</b>	<b>Specification</b>
Memory controller	945GM/945PM/940GML
Memory size	256MB/512MB/1GB
DIMM socket number	2
Supports memory size per slot	1024 MB
Supports maximum memory size	2GB (with dual soDIMM modules)
Supports DIMM type	DDRII SDRAM Standard
Supports DIMM Speed	533/667 MHz
Supports DIMM voltage	1.8V
Memory module combinations	You can install memory modules in any combinations as long as they match the above specifications.

### **LAN Interface**

<b>Item</b>	<b>Specification</b>
Supports LAN protocol	10/100 Mbps Fast Ethernet connection
LAN chip	RTL8100CL
LAN connector type	RJ45
LAN connector location	Rear side

### **Wireless LAN**

<b>Item</b>	<b>Specification</b>
Card Type	Mini-card/Mini-PCI
Mode	802.11 a/b/g 802.11 b/g
Antenna	Built in 2 antenna(PIFA type)
Support	Wi-Fi, WPA2, WMM, CCX V3/V4

### **Modem Interface**

<b>Item</b>	<b>Specification</b>
Data modem data baud rate (bps)	56K ITU
Supports modem protocol	V.90/V.92 AC-Link modem with PTT approval Wake-on-Ring ready
Modem connector type	RJ11
Modem connector location	Rear side

### **VGA**

<b>Notice</b>	<b>Discrete</b>	<b>UMA</b>
Chipset for suitable VGA type	945PM	945GM/940GML
Video RAM	64/128MB	up to 256MB

### **USB Port**

<b>Item</b>	<b>Specification</b>
USB Controller	Integrated with ICH-7
USB compliancy level	2.0
OHCI	USB 2.0
Number of USB port	3
Location	Rear Side *1 Right Side *2

### **Audio Port**

<b>Item</b>	<b>Specification</b>
Audio Controller	Azalia Audio Controller (Realtek ALC883)
Audio onboard or optional	Built-in
Mono or Stereo	Stereo
Resolution	20 bit stereo Digital to analog converter 18 bit stereo Analog to Digital converter
Compatibility	Microsoft PC99/2100, AC97 2.3 & WHQL/WLP2.0
Mixed sound source	CD
Sampling rate	All DACs support 44.1K/48K/96K/192K sample rate All ADCs support 44.1K/48K/96K sample rate
Internal microphone	Yes
Internal speaker / Quantity	Yes / 2
Support	S/PDIF out / VoIP

### **PCMCIA Port**

<b>Item</b>	<b>Specification</b>
PCMCIA controller	PCI7412
Supports card type	Type II
Number of slots	One
Access location	Right Side
Feature	PC Card Standard 8.1 compliant, ACPI 2.0 compliant, Support PC Card or CardBus with hot insertion and removal, Support 132Mbps burst transfer

### **Keyboard**

<b>Item</b>	<b>Specification</b>
Keyboard controller	NS PC97551/541V
Keyboard vendor & model name	TravelMate series: New Acer Ergo Keyboard Aspire series: New Acer flat keyboard
Total number of keypads	<input type="checkbox"/> 88-89 keys Acer Fine Touch™ keyboard
Touchpad with 4-way integrated scroll button	Yes

## Keyboard

Item	Specification
12 function keys	<input type="checkbox"/> two Windows keys <input type="checkbox"/> Hotkey controls <input type="checkbox"/> embedded numeric keypad <input type="checkbox"/> Multi-Langue support <input type="checkbox"/> Spill-proof
Four easy-launch buttons	<input type="checkbox"/> Internet browser <input type="checkbox"/> email with LED <input type="checkbox"/> Empowering key <input type="checkbox"/> one user-programmable button
Two front access LED buttons	<input type="checkbox"/> WLAN LED button <input type="checkbox"/> Bluetooth LED button

## Battery

Item	Specification
Vendor & model name	Sony/Sanyo/Simplo
Battery Type	Li-ion
Pack capacity	65Wh
Number of battery cell	8-cell 2400mAh 6-cell 2000mAh 4-cell 2000mAh
<b>Package configuration</b>	
Pin 1 Pin 2	BATT+: Battery+, Battery Positive Terminal
Pin 3	ID : Identify Pin (Note 1)
Pin 4	B/I : Battery-In Pin
Pin 5	TS : Connect to Thermister
Pin 6	SMD : SMBus data interface I/O pin
Pin 7	SMC : SMBus clock interface I/O pin
Pin 8 Pin 9	GND : Battery Negative Terminal

## LCD :15.4" WXGA LCD

Item	Specification				
Vendor & model name	CMO N15411-L0C GLARE TYPE/ N15411-L0B NON-GLARE	LPL LP154W01- TLB5 GLARE LEAD-FREE/ LP154W01- TLA1 NON- GLARE LEAD-FREE	Samsung LTN154X3- L01-H00 glare L6-G5/ L01-100 non- glare L6-G5/ LTN154P1- L02-V LEAD- FREE	AUO B154EW01 V9 16MS LEAD-FREE GLARE TYPE	QDI QD15TL07- 02 GLARE / QD15TL02- 03 NON- GLARE TYPE LEAD- FREE
<b>Mechanical Specifications</b>					



**LCD :15.4" WXGA LCD**

Item	Specification				
LCD display area (diagonal, inch)	15.4"	15.4"	15.4"	15.4"	15.4"
Active Area(mm)	331.2(H)x207.0(V)	331.2(H)x207.0(V)	331.2(H)x207.0(V)	331.2(H)x207.0(V)	331.2(H)x207.0(V)
Display technology	TFT	TFT	TFT	TFT	TFT
Resolution	WXGA (1280*800)	WXGA (1280*800)	WXGA (1280*800)	WXGA (1280*800)	WXGA (1280*800)
Pixel Pitch	0.2588(H)x0.2588(V)	0.2588(H)x0.2588(V)	0.2588(H)x0.2588(V)	0.2588(H)x0.2588(V)	0.2588(H)x0.2588(V)
Pixel Arrangement	RGB vertical stripe	RGB vertical stripe	RGB vertical stripe	RGB vertical stripe	RGB vertical stripe
Display Mode	Normally White	Normally White	Normally White	Normally White	Normally White
Typical White Luminance(cd/m <sup>2</sup> ) also called Brightness	200	200/170	200	180	185
Luminance Uniformity	N/A	N/A	N/A	1.25 max.	N/A
Contrast Ratio	400	550/300	300	400	400
Response Time(Optical Rise Time/Fall Time) msec	5/11	16(Tr+Tf)	25(Tr+Tf)	12/4	6/10
Power Supply Voltage	+3.3V	+3.3V	+3.0V	+3.3V	+3.3V
Typical Power Consumption(watt)	4.22	5.23	4.2	6.5	N/A
Weight	600 g	540/575 g	530 g	585 g	585 g
Physical Size(mm) (Typical)	344(H)x222(V)x6.2(D)	344(H)x222(V)x6.2(D)	344(H)x222(V)x6.2(D)	344(H)x222(V)x6.5(D)	344(H)x222(V)x6.35(D)
Electrical Interface	LVDS with 1 pixel/clock	1 channel LVDS	3.3V LVDS	1 channel LVDS	
Support Color	262144	262144	262144	262K	262144
Viewing Angle(degree) Horizontal: Right/Left Vertical: Upper/Lower	45/45 15/35	45/45 15/35	45/45 15/35	45/45 15/35	45/45 15/35
Temperature Range(°C) Operating Storage(shipping)	0~+50 -20~+60	0~+50 -20~+60	0~+50 -20~+60	0~+50 -20~+60	0~+50 -20~+60

**LCD :15" WXGA LCD**

Item	Specification	
Vendor & model name	15.0" XGA NB LCD LPL LP150X08-TLA2 LEAD-FREE/CHINA MADE	15.0" XGA NB LCD CMO N150X3-L09 REV. C2
<b>Mechanical Specifications</b>		

**LCD :15" WXGA LCD**

Item	Specification	
LCD display area (diagonal, inch)	15.0"	15.0"
Active Area(mm)	304.1(H)x 228.1(V)	304.1(H)x 228.1(V)
Display technology	TFT	TFT
Resolution	XGA (1024*768)	XGA (1024*768)
Pixel Pitch(mm)	0.297(H)x 0.297(V)	0.297(H)x 0.297(V)
Pixel Arrangement	RGB Vertical stripe	RGB Vertical stripe
Display Mode	Normally White	Normally White
Typical White Luminance(cd/m <sup>2</sup> ) also called Brightness	170	200
Luminance Uniformity	N/A	N/A
Contrast Ratio	250	250
Response Time(Optical Rise Time/Fall Time) msec	10/20	5/11
Power Supply Voltage	+3.3V	+3.3V
Typical Power Consumption(watt)	4.76	3.96
Weight	530 g	550 g
Physical Size(mm) (Typical)	317(H)x241 (V)x5.9(D)	317(H)x242 (V)x5.7(D)
Electrical Interface	LVDS IS100- C30R-C15	LVDS with 1 pixel/clock
Support Color	262144	262144
Viewing Angle(degree) Horizontal: Right/Left Vertical: Upper/Lower	45/45 15/35	45/45 20/40
Temperature Range(°C) Operating Storage(shipping)	0~+50 -20~+60	0~+50 -20~+60

**AC Adapter**

Item	Specification
Vendor & model name	ROHS DELTA -90W ADP-90SB BBAHF BLACK 1.7X5.5X12.5 LITEON -90W PA-1900-04 QB BLUE 1.7X5.5X11 LF LSE-90W SLS0202C19A157 LF BLUE 1.7X5.5X11 LF
<b>Input Requirements</b>	

Item	Specification
Maximum input current (A, @100Vac, full load)	1.5A @100Vac input and maximum load
Nominal(Rated) frequency (Hz)	50 or 60 and single phase
Frequency variation range (Hz)	47 - 63
Nominal voltages (Vrms)	90 - 265
Efficiency	High efficiency 85% minimum, at 100~240Vac AC input, full load, warm-up condition.
<b>Output Ratings (CV mode)</b>	
Rated output voltage	Offers rated output voltage 19.0V
Voltage Range	18.2V to 19.8V
Noise + Ripple	300mvp-pmax (20MHz bandwidth) for resistor load
Rated Power	90Watts continuously at all specified conditions
Output current	0 A (min.) to 4.74A (max.)
<b>Dynamic Output Characteristics</b>	
Start-up time	2 sec. (@115 Vac and 230Vac full load)
Hold up time	at least 10ms (@115 Vac input, full load)
Over Voltage Protection (OVP)	30V
Over Current Protection(OCP)	Output current limit is 6A(Max mode)
Short circuit protection	Output can be shorted without damage, and auto recovery
Electrostatic discharge (ESD)	15kV (at air discharge) 8kV (at contact discharge)
<b>Dielectric Withstand Voltage</b>	
Primary to secondary	3000 Vac for 1 second
Leakage current	less than 250uA at 240Vac, 50Hz
Regulatory Requirements	1. CISPR 22 Class B 2. VCCI Class B

### Hard Disk Drive Interface

Item	Specification		
Vendor & Model Name	Segate SATAST98823AS/ HGST SATA 1.5G NCQ MORAGA+HTS5410 80G9SA00	Segate SATA ST9100824AS LF/ Toshiba MK1032GSX/ HGST NCQMORAGA+HTS 541010G9SA00	Segate SATA ST9120821AS LF/ Toshiba SATA11.5G W/NCQ MK1234GSX
Capacity (MB)	80000	100000	120000
Bytes per sector	1024/512	512	512
Data heads	3/4	4	4
Drive Format			

### Hard Disk Drive Interface

Item		Specification	
Disks	2	2	2
Spindle speed (RPM)	5400 RPM	5400 RPM	5400 RPM
Performance Specifications			
Buffer size	8192KB	8192KB	8192KB
Interface	Serial ATA	Serial ATA ATA7&SATA1.0&SAT All(for Toshiba)	Serial ATA
Max. media transfer rate (disk-buffer, Mbytes/s)	57.6/61.6	57.6/57.6/61.6	57.6
Data transfer rate (host~buffer, Mbytes/s)	150 MB/Sec. SATA 1.0	150 MB/Sec.	150 MB/Sec.
DC Power Requirements			
Voltage tolerance	5V(DC) +/- 5%	5V(DC) +/- 5%	5V(DC) +/- 5%

### 8X Super Multi Interface

Item	Specification	
Vendor & model name	PHILIPS SDVD8821	PIONEER DVR-K16RS
Performance Specification		
Transfer rate (KB/sec)	Sustained: Max 10.9Mbytes/sec	Sustained: DVD: Max 10.8Mbytes/sec CD: 3.6Mbytes/sec
Access Time(DVD)	Random Access: 130 ms Full Stroke: 240 ms	Random Access: 150 ms Full Stroke: 300 ms
Buffer Memory	2MB	2MB
Interface	Compliant to ATA/ATAPI-5	ATAPI interface(SFF-8020, SFF-8090)
Applicable disc format	DVD(Read): DVD-ROM, DVD-Video, DVD-Audio, DVD-R, DVD-R 3.95GB, DVD-R Multi-Border, DVD-RW, DVD+R, DVD+R DL, DVD+R Multi-Session, DVD+RW, DVD-RAM CD(Read): CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i, CD-i Bridge, Video-CD(MPEG-1), Karaoke CD, Photo-CD, Enhanced CD, CD Plus, CD Extra, itrax CD, CD-Text, CD-R, and CD-RW DVD(Write): DVD Data&Video CD(Write): CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i, Video-CD, CD-Text	KODAK Photo CD Single and Multi-session, CD Extra(CD PLUS), Video CD, CD text data(Read/Write), CD-R discs(Read/Write), CD-RW discs(Read/Write), DVD-ROM, DVD-R ver2.00 for general(Read/Write), DVD-R DL ver3.0(Read/Write), DVD-RW ver1.0&1.1&1.2(Read/Write), DVD+R ver1.0&1.1&1.2(Read/Write), DVD+R DL ver1.0(Read/Write), DVD+RW ver1.1&1.2(Read/Write), DVD+RW high speed ver1.0(Read/Write), DVD-RAM ver2.0&2.1&2.2(Read/Write)
Loading mechanism	Load: Manual	Drawer loading mechanism
Power Requirement		
Input Voltage	5 V +/- 5 % (Operating)	5 V +/- 5 % (Operating)

## DVD-Dual Interface

Item	Specification	
Vendor & model name	PHILIPS SDVD8441	PIONEER DVR-K16RA
Performance Specification		
Transfer rate (KB/sec)	Sustained: Max 10.9Mbytes/sec	Sustained: Max 10.8Mbytes/sec
Access Time(DVD)	Random Access: 130 ms Full Stroke: 240 ms	Random Access: 150 ms Full Stroke: 300 ms
Buffer Memory	2MB	2MB
Interface	Compliant to ATA/ATAPI-5	ATAPI interface
Applicable disc format	DVD(Read): DVD-ROM, DVD-Video, DVD-Audio, DVD-R, DVD-R 3.95GB, DVD-R Multi-Border, DVD-RW, DVD+R, DVD+R DL, DVD+R Multi-Session, DVD+RW CD(Read): CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i, CD-i Bridge, Video-CD(MPEG-1), Karaoke CD, Photo-CD, Enhanced CD, CD Plus, CD Extra, itrax CD, CD-Text, CD-R, and CD-RW DVD(Write): DVD Data&Video CD(Write): CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i, Video-CD, CD-Text	DVD(Read): DVD-5/9/10/18, DVD-R 3.95G/4.7G, DVD-R DL, DVD-RW, DVD+R, DVD+R DL, DVD+RW, DVD+RW high speed, DVD-RAM v2.0/2.1 CD(Read): CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, Photo CD, Video CD, CD-DA, CD-Extra, Mixed-CD, CD-Text, CD-R, CD-RW, HS CD-RW, US CD-RW, US+ CD-RW DVD(Write): DVD-R, DVD-RW, DVD+RW CD(Write): CD-DA, CD-i, Video-CD, CD-Text, Photo CD, CD-Extra, Mixed-CD, CD-R, CD-RW, HS CD-RW, US CD-RW, US+ CD-RW
Loading mechanism	Load: Manual	Drawer loading mechanism
Power Requirement		
Input Voltage	5 V +/- 5 % (Operating)	5 V +/- 5 % (Operating)

## Combo Drive Interface

Item	Specification		
Vendor & model name	QSIPHILIPS SCB5265	PANASONIC UJDA-770	HLDS GCC-4244N
Performance Specification			
Transfer rate (KB/sec)(DVD)	Sustained: Max 11.2Mbytes/sec	Sustained: Max 10.8Mbytes/sec	Sustained: Max 11.8Mbytes/sec
Access Time	DVD: Random Access: 126 ms DVD:Full Stroke: 165 ms	DVD: Typical:180 ms	Average: CD-ROM110ms DVD-ROM 120ms
Buffer Memory	2MB	2MB	2MB
Interface	Compliant to ATA/ATAPI-5	ATAPI interface	ATAPI interface

## Combo Drive Interface

Item	Specification		
Applicable disc format	DVD(Read): DVD 5/9/10/18, DVD-ROM, DVD-Video, DVD-R 3.95G/4.7G, DVD-RW, DVD+R, DVD+RW, Multi-Border DVD-R/DVD-RW, Multi-Session DVD+R, DVD+RW and DVD-RAM CD(Read): CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i Ready, Video-CD(MPEG-1), Karaoke CD, Super Video CD, Photo-CD, Enhanced CD, CD Plus, CD Extra, i-trax CD, CD-Text, CD-R, CD-RW CD(Write): CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 and Mode-2 Form-2, CD-i, Video-CD, CD-Text	CD: CD-DA, CD-ROM, CD-R, CD-RW, CD-ROM XA, PhotoCD(MultiSession) DVD: DVD-ROM, DVD-Video, DVD-RAM(2.6GB/4.7GB), DVD-R, DVD-RW(Ver1.1), DVD+R, DVD+RW	1. Reads and writes data in each CD-ROM, CD-ROMXA, CD-I FMV, Video CD, and CD-EXTRA 2. Reads data in Photo CD( Single and Multi session) 3. Reads and writes standard CD-DA 4. Reads and writes CD-R 5. Reads and writes CD-RW 6. Reads data in DVD-ROM
Loading mechanism	Load: Manual	Load: Manual	Load: Manual
Power Requirement			
Input Voltage	5 V +/- 5 % (Operating)	5 V +/- 5 % (Operating)	5 V +/- 5 % (Operating)

## Power Management

ACPI Mode	Power Management
Mech. Off (G3)	All devices in the system are turned off completely.
Soft Off (S5)	OS initiated shutdown. All devices in the system are turned off completely.
Working (S0)	Individual devices such as the CPU and hard disk may be power managed in this state.
Suspend(S3)	CPU Power Down VGA Power Down PCMCIA Suspend Audio Power Down Hard Disk Power Down Super I/O Power Down
Sleeping State (S4)	Also called Hibernate state. System saves all system states and data onto the disk prior to power off the whole system.

## Dimensions and Weight

Item	Details
<b>Model</b>	<b>AS 5600 &amp; TM 4220/2480</b>
Deminsions	364(W) x 274.75(D) with max. 28/36.3mm(H)
Weight	<2950 g except TV SKU for 15.4" WXGA LCD model <2940 g for 15" XGA LCD model

---

### ***Environmental Requirements***

<b>Item</b>	<b>Specification</b>
Temperature	
Operating	+5 ~ +35°C
Non-operating	-20 ~ +65°C (storage package)
Humidity	
Operating	20% ~ 80% without condensation
Altitude	Operating sea level 0 to 10,000ft
	Storage sea level 0 to 40,000ft

## System Utilities

### BIOS Setup Utility

The BIOS Setup Utility is a hardware configuration program built into your computer's BIOS (Basic Input/Output System).

Your computer is already properly configured and optimized, and you do not need to run this utility. However, if you encounter configuration problems, you may need to run Setup. Please also refer to Chapter 4 Troubleshooting when problem arises.

To activate the BIOS Utility, press **m** during POST (when "Press <F2> to enter Setup" message is prompted on the bottom of screen).

The setup screen displays BIOS as follows: Navigating the BIOS Utility

Function	Item
Information	Display the system informations
Main	Allows the user to specify standard IBM PC AT system parameters
Advanced	Provides advanced settings of the system
Security	Provides security settings of the system
Boot	Allows the user to specify the boot options
Exit	Allows the user to save CMOS setting and exit Setup

During setup, all Fn function keys and power saving functions are disabled.

There are five menu options: Main, Advanced, Security, Boot and Exit.

Follow these instructions:

- To choose a menu, use the cursor left/right keys (zx).
- To choose a parameter, use the cursor up/down keys ( wy).
- To change the value of a parameter, press p or q.
- Press ^ while you are in any of the menu options to go to the Exit menu.
- In any menu, you can load default settings by pressing t. You can also press u to save any changes made and exit the BIOS Setup Utility.

**NOTE:** You can change the value of a parameter if it is enclosed in square brackets. Navigation keys for a particular menu are shown on the bottom of the screen. Help for parameters are found in the Item Specific Help part of the screen. Read this carefully when making changes to parameter values.



# Information

**PhoenixBIOS Setup Utility**

Information	Main	Security	Boot	Exit
-------------	------	----------	------	------

CPU Type:           Genuine Intel(R) CPU T2300@1.66GHz  
 CPU Speed           1600 MHz

IDE1 Model Name:    ST9402112A  
 IDE1 Serial Number: 5PJ0KG0R  
 ATAPI Model Name:  PIONEER DVD-RW DVR-K16RS  
 System BIOS Version: v0.3103  
 VGA BIOS Version:  Napa 1264  
 Serial Number:       ZB2BSK01C16080D33DEM00  
 Asset Tag Number:  
 Product Name:        TravelMate xxxx  
 Manufacturer Name:  Acer  
 UUID:                20DA780745DED811B6C300163623C0E3

F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	←→ Select Menu	Enter Select	▶ Sub-Menu F10 Save and Exit

Parameter	Description
CPU Type	This item will show the CPU information of the system.
CPU Speed	This item will show the CPU clock speed.
IDE1 Model Name	This item will show the Model name of HDD installed on Primary IDE master. The hard disk model name is automatically detected by the system. If there is no hard disk present or unknown type, "None" should be shown on this field
IDE1 Serial Number	This item will show the Serial number of HDD installed on Primary IDE master. If no Hard disk or other devices are installed on Primary IDE master, then it will display a blank line
System BIOS Version	This field reports the BIOS version of system
VGA BIOS Version	This field reports the VGA version of the system
KBC Version	This field reports the keyboard controller version of the system
Serial Number	This item will show the Serial number of system.
Asset Tag Number	This item will show the Asset Tag number of the system.
Product Name	This field will show product name.
Manufacturer Name	This field will show manufacturer name.
UUID	This will be visible only when there is an internal LAN device present.

# Main

This menu provides you the information of the system.

PhoenixBIOS Setup Utility			
Information	Main	Security	Boot Exit
System Time: [11:59:38] System Date: [03/14/2006]  System Memory: 640 KB Extended Memory: 502 KB Video Memory 128 MB  Quiet Boot: [Enabled] Power on Display: [Auto ] Network boot [Enabled] F12 Boot Menu: [Disabled] D2D Recovery: [Enabled]		Item Specific Help  <Tab>, <Shift-Tab>, or <Enter> selects field.	
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	↔ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit

Parameter	Description
System Time / System Date	The hours are displayed with 24 hours format. The values set in these two fields take effect immediately.
System Memory	This field reports the memory size of system base memory. The size is fixed to 640KB.
Extended Memory	This field reports the memory size of the extended memory in the system. Extended Memory size = Total memory size - 1 MB
Video Memory	VGA Memory size = 128MB
Quiet Boot	Customer Logo display will be shown during POST when it is selected.
Power on display	<b>Auto:</b> During power on process, the system will detect if any display device is connected on external video port. If any external display device is connected, the power on display will be in CRT (or projector) only mode. Otherwise it will be in LCD only mode. <b>Both:</b> Simultaneously enable both the integrated LCD screen and the system's external video port (for an external CRT or projector).
Network boot	When this is selected, Boot from LAN feature is enabled. When this is not selected, Boot from LAN feature is then disabled.

---

Parameter	Description
F12 Boot Menu	When this is selected, users can modify device boot priority by pressing F12 key during POST. When this is not selected, device boot priority will not be adjustable during POST.
D2D Recovery	Allow user to enable/disable the Disk-to-Disk recovery

# Security

The Security screen contains parameters that help safeguard and protect your computer from unauthorized use.

PhoenixBIOS Setup Utility				
Information	Main	Security	Boot	Exit
Supervisor Password Is: <b>Clear</b> User Password Is: <b>Clear</b> HDD Password Is: <b>Clear</b>  Set Supervisor Password <b>[Enter]</b> Set User Passord <b>[Enter]</b> Set HDD Password <b>[Enter]</b>  Password on Boot: <b>[Disabled]</b>			Item Specific Help  Supervisor Password controls accesses of the setup utility.	
<b>F1 Help</b> <b>↑ ↓ Select Item</b> <b>F5/F6 Change Values</b> <b>F9 Setup Defaults</b> <b>Esc Exit</b> <b>← → Select Menu</b> <b>Enter Select ▶ Sub-Menu</b> <b>F10 Save and Exit</b>				

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Option
Supervisor Password Is	N/A	N/A
User Password Is	N/A	N/A
HDD Password Is	N/A	N/A
Set Supervisor Password	Press Enter to set the administrator password. When set, this password protects the BIOS Setup Utility from unauthorized access. <b>[Set]:</b> System password is set <b>[Clear]:</b> System password is not set	Length -- No more than 8 characters Characters -- 0-9, A-Z (not case sensitive)
Set User Password		

Parameter	Description	Option
Set HDD Password	When shown as [Locked], the hard drive password currently can not be changed or disabled. To change or disable it, turn off the system and enter Setup immediately after turning it back on. Press [Enter] to input change, or disable hard drive password.	<b>Enter</b>
Password on boot	Defines whether a password is required or not while the events defined in this group happened. The following sub-options are all requires the Supervisor password for changes and should be grayed out if the user password was used to enter setup. Allows the user to specify whether or not a password is required to boot.	<b>Disabled</b> Enabled

### ***Set Supervisor/User Password***

If password on boot is required, the password must be set otherwise it cannot be enabled.

The formats of the password are as follows:

Length      No more than 8 characters

Characters   0-9,A-Z (not case sensitive)

While these fields are highlighted and press “Enter”, a window similar to the following is shown:

Set SupervisorPassword		
Enter New Password	[	]
Confirm New Password	[	]

If there is an old password then setup will prompt with the following window instead and a current password will be required to be entered at first:

Set Supervisor Password		
Enter current password	[	]
Enter New Password	[	]
Confirm New Password	[	]

---

User can now type password in field “Enter New Password”, and re-enter password in field “Confirm New Password” for verification.

If the verification is OK:

The password setting is complete after user presses enter.

Setup Notice  
Changes have been saved.  
[ continue]

If the current password entered does not match the actual current password:

Setup Warning  
Invalid password  
Re-enter Password  
[ continue]

If the new password and confirm new password strings do not match:

Setup Warning  
Password do not match  
Re-enter Password

# Boot

This menu allows the user to decide the order of boot devices to load the operating system. Bootable devices includes the distette drive in module bay, the onboard hard disk drive and the CD-ROM in module bay and onboard LAN device.

PhoenixBIOS Setup Utility			
Information	Main	Security	Boot
<p>Boot priority order:</p> <ul style="list-style-type: none"> <li>1: IDE 0: ST9402112A-(PM)</li> <li>2: IDE CDROM: PIONEER DVD-RW DVR-K16RS</li> <li>3: PCI SCSI:</li> <li>4: Network Boot: Realtek Boot Agent</li> <li>5: USB HDD:</li> <li>6: USB CD-ROM</li> <li>7: USB Floppy:</li> <li>8: USB KEY:</li> </ul> <p>Excluded from boot order:</p>			<p>Item Specific Help</p> <p>Keys used to view or configure devices:            Up and Down arrows select a device.            &lt;+&gt; and &lt;-&gt; moves the device up or down.            &lt;f&gt; and &lt;r&gt; specifies the device fixed or removable.            &lt;x&gt; exclude or include the device to boot.            &lt;Shift + 1&gt; enables or disables a device.            &lt;1- 4 &gt; Loads default boot sequence.</p>
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults
Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit

Parameter	Description
Boot priority order	Keys used to view or configure devices: Up and Down arrows select a device. <+> and <-> movew the device up or down. <f> and <r> specifies the device fixed or removable. > <x> exclude or include the device to boot. <Shift +1> enables or disables a device. <1-4> Loads default boot sequence.

## Exit

The Exit screen contains parameters that help safeguard and protect your computer from unauthorized use.

PhoenixBIOS Setup Utility

Information Main Security Boot Exit

Item Specific Help

Exit Saving Changes  
Exit Discarding Changes  
Load Setup Defaults  
Discard Changes  
Save Changes

Exit System Setup and save your changes to CMOS.

F1 Help    ↑↓ Select Item    F5/F6 Change Values    F9 Setup Defaults  
Esc Exit    ←→ Select Menu    Enter Select    Sub-Menu    F10 Save and Exit

The table below describes the parameters in this screen.

Parameter	Description
Exit Saving Changes	Exit System Setup and save your changes to CMOS
Exit Discarding Changes	Exit utility without saving Setup data to CMOS
Load Setup Default	Load default values for all SETUP items
Discard Changes	Load previous values from CMOS for all SETUP items
Save Changes	Save Setup Data to CMOS




## BIOS Password Removal

1. Press <F2> to enter Setup during POST
2. Go to the "Main" menu
3. Enable the "F12 Boot Menu" function.
4. Press F10 to save the setting and exit.

PhoenixBIOS Setup Utility				
Information	Main	Security	Boot	Exit
System Time: [11:59:38] System Date: [03/14/2006]  System Memory: 640 KB Extended Memory: 502 KB Video Memory 128 MB  Quiet Boot: [Enabled] Power on Display: [Auto ] Network boot [Enabled] F12 Boot Menu: [Disabled] D2D Recovery: [Enabled]				Item Specific Help  <Tab>, <Shift-Tab>, or <Enter> selects field.
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults	
Esc Exit	←→ Select Menu	Enter Select	▶ Sub-Menu	F10 Save and Exit

5. Press F12 during POST
6. Select "USB Floppy" from the Boot Menu
7. Please use a USB disk that can boot from DOS mode and execute the BIOS\_PW.exe file.

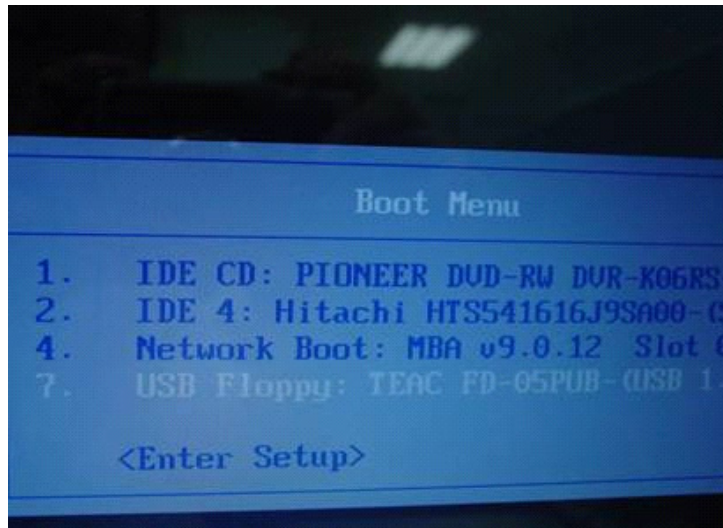



## *Machine Disassembly and Replacement*

---

This chapter contains step-by-step procedures on how to disassemble the notebook computer for maintenance and troubleshooting.

To disassemble the computer, you need the following tools:

- Wrist grounding strap and conductive mat for preventing electrostatic discharge
- Small Philips screw driver
- Philips screwdriver
- Plastic flat head screw driver
- Tweezers

**NOTE:** The screws for the different components vary in size. During the disassembly process, group the screws with the corresponding components to avoid mismatch when putting back the components. When you remove the stripe cover, please be careful not to scrape the cover.

---

## ***General Information***

### ***Before You Begin***


Before proceeding with the disassembly procedure, make sure that you do the following:

1. Turn off the power to the system and all peripherals.
2. Unplug the AC adapter and all power and signal cables from the system.
3. Remove the battery pack.

**NOTE:** There are several types of screws used to secure bottom case and upper case assembly. The screws vary in length. Please refer the picture below, group the same type of screws together during service disassembling. Please also remember the screw location for each screw type. If you fasten the screw to the wrong location, the screw may be too long to damage the main board.

# Disassembly Procedure Flowchart

The flowchart on the succeeding page gives you a graphic representation on the entire disassembly sequence and instructs you on the components that need to be removed during servicing. For example, if you want to remove the main board, you must first remove the keyboard, then disassemble the inside assembly frame in that order.

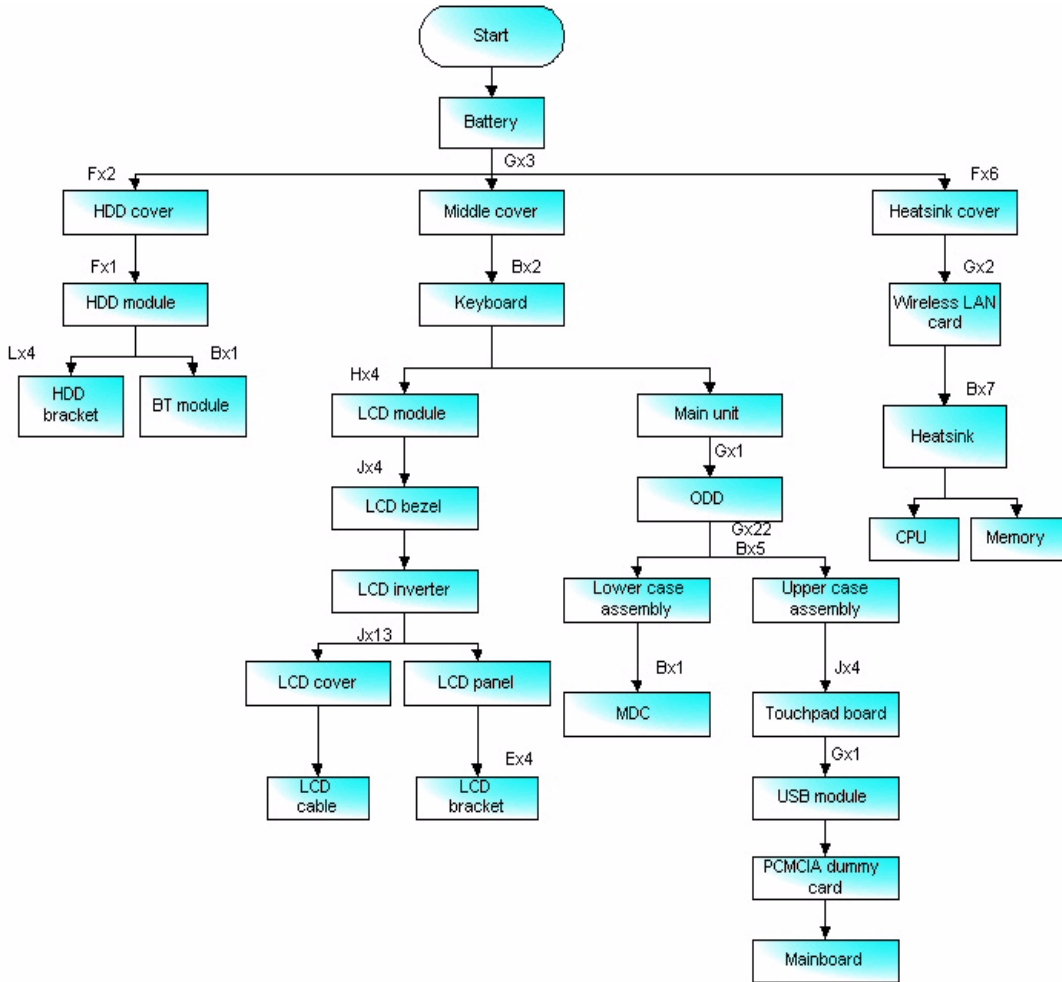

---

## ***Removing the Adapter and Battery Pack***

1. Unplug the adapter.
2. Release the battery lock.
3. Slide the battery latch.
4. Remove the battery pack.





---

# Removing the TV Tuner, Heatsink Module, CPU, and HDD Module




## Remove the Heatsink Cover

1. Release the six screws securing the heatsink cover. (The six screws are attached to the heatsink cover)
2. Lift the heatsink cover up and remove it.

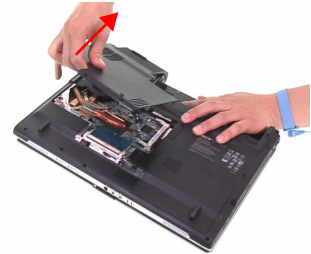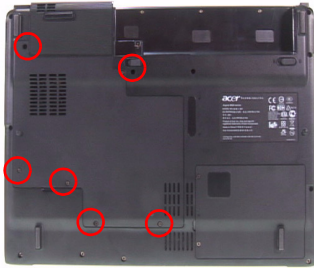


## Remove the TV Tuner Card(for selected models)

1. Disconnect the TV tuner cable and antenna from the TV tuner card.
2. Press the left and right latch to release the TV tuner card.

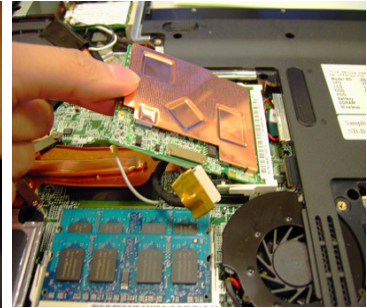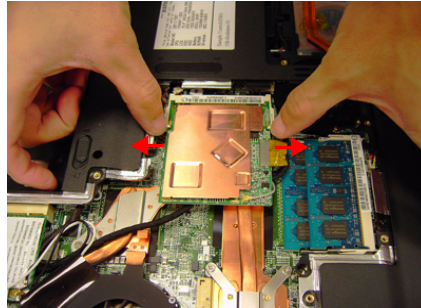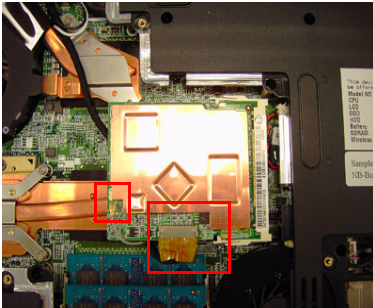


3. Disconnect the TV tuner cable and antenna from the TV board.

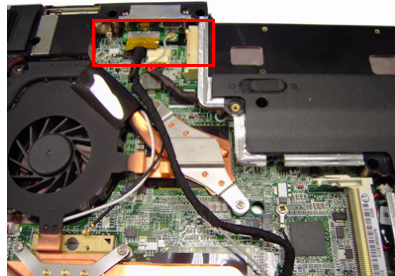


## Remove the Heatsink Module

1. Disconnect the main fan cable from the mainboard.
2. Remove the seven screws securing the heatsink module.



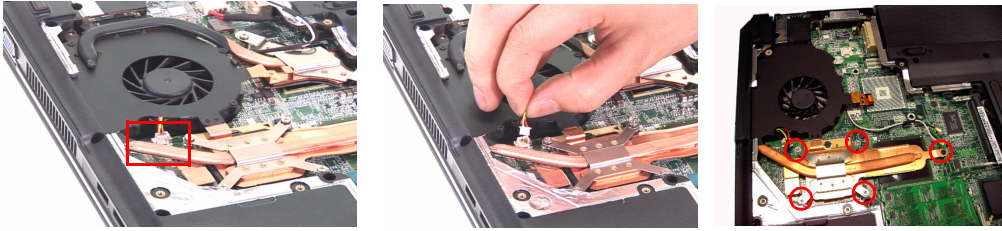


3. Remove the heatsink module from the main unit.



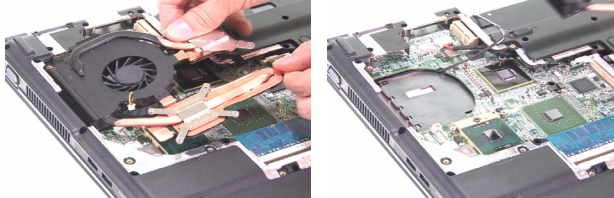


## ***Removing the HDD Module***

1. Release the two screws securing the HDD cover. (One screw is attached to the HDD cover)
2. Remove the HDD cover.


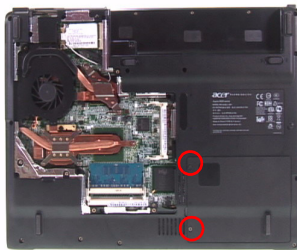


3. Remove the screw securing the HDD.
4. Holding the mylar and pull the HDD module out of the main unit.

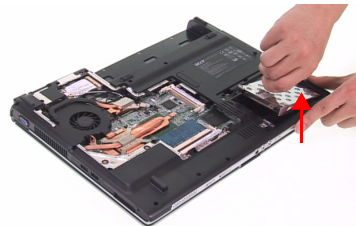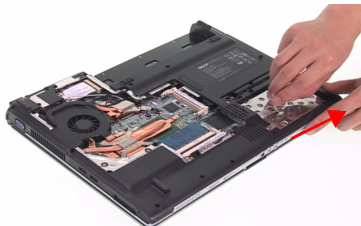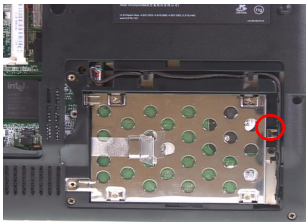

## ***Removing the CPU***

1. Use a flat screw driver and turn the screwdriver counterclockwise to unlock the CPU.
2. Remove the CPU from the mainboard.

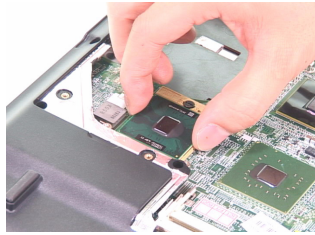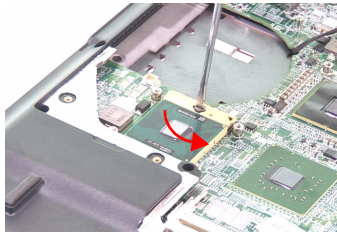


---

## ***Removing the Memory and Wireless Card***


### ***Remove the Memory***

1. Press the latch on left and right side to pop out the memory and remove it.
2. Remove the other memory.

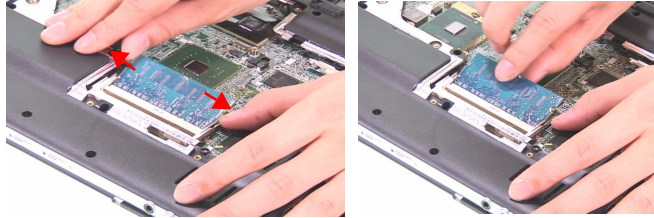


### ***Removing the Wireless Card***

1. Disconnect the wireless antenna from the wireless card.

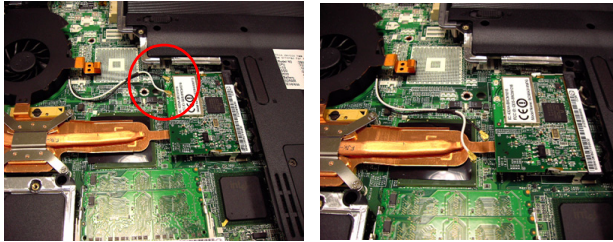


2. Press the latch to pop up the wireless card.
3. Remove the wireless card from the mainboard.

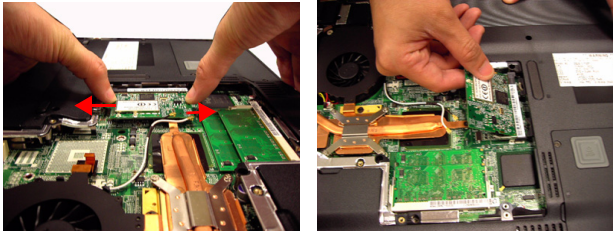

---

## Removing the Bluetooth Module


1. Remove the screw securing the Bluetooth module.
2. Remove the Bluetooth connector from the mainboard.

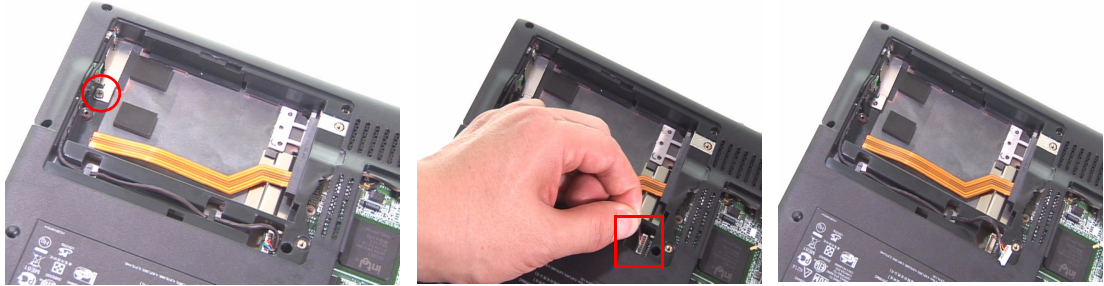


3. Remove the Bluetooth cable from the Bluetooth wire groove.



4. Remove the Bluetooth module from the main unit.

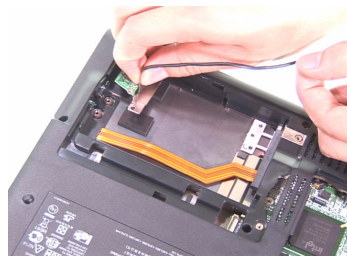


5. Remove the two screws securing the Bluetooth bracket.
6. Remove the Bluetooth module from the Bluetooth bracket.
7. Disconnect the Bluetooth cable from the Bluetooth module.

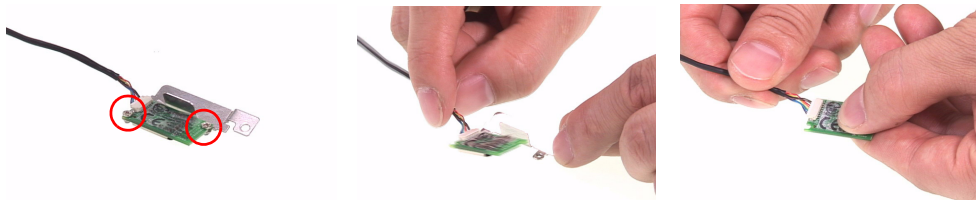



## Disassembling the Main Unit into Upper Case and Lower Case

1. Disconnect the power cable from the mainboard.

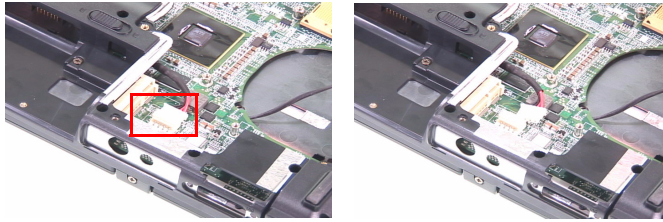

1. Remove the three screws securing the middle cover on the rear panel.
2. Open the notebook.




3. Release the clasp of middle cover and remove the middle cover from the main unit.




4. Remove the two screws securing the keyboard.
5. Turn the keyboard over.



6. Unlatch the keyboard FFC latch and remove the keyboard from the main unit.

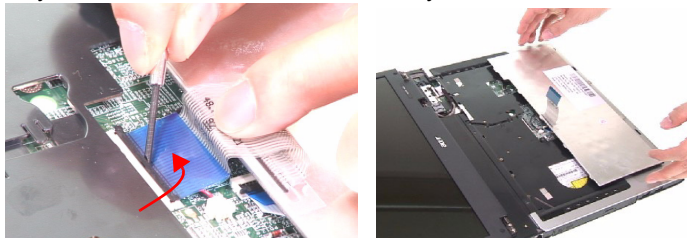

7. Disconnect the LCD cable from the mainboard as shown.

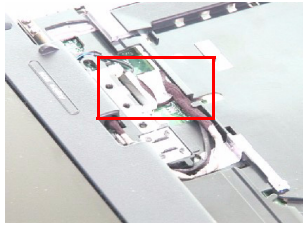


8. Remove the two screws on left and right hinges.
9. Remove the LCD module from the main unit and be careful to pull the antenna out.




10. Remove the screw securing the ODD module.
11. Push the ODD module out of the main unit.




12. Remove the five screws securing the upper case.
13. Remove the 22 screws securing the lower case.

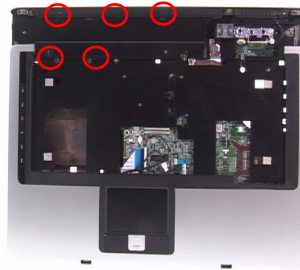


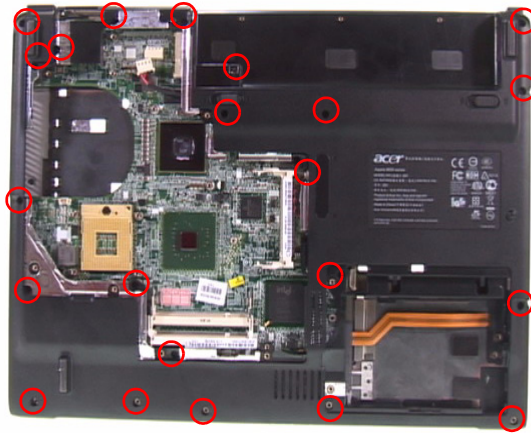


- 14. Disconnect the LID switch cable from the mainboard.
- 15. Disconnect the audio DJ cable from the mainboard. (Aspire series only)

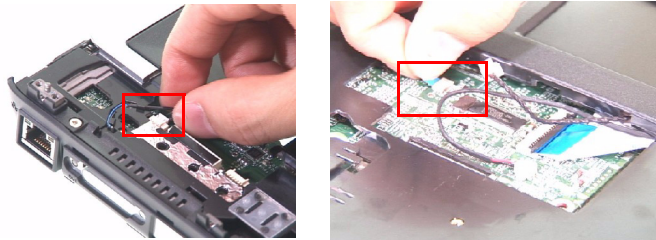

- 16. Disconnect the MIC wire cable from the mainboard.
- 17. Unlatch the touchpad board FFC and disconnect the touchpad board FFC from the mainboard.

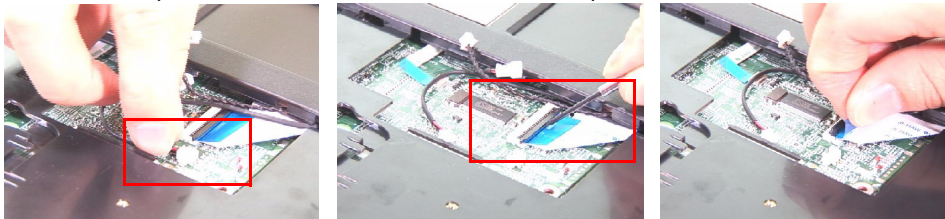


- 18. Lift up the upper case to separate the upper and lower case.

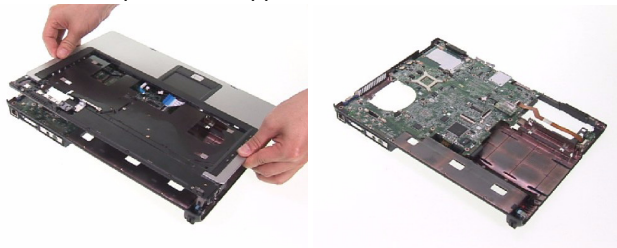

---


## Disassembling the LCD Module

1. Remove the four screw caps from the LCD module.
2. Remove the four screw securing the LCD bezel.

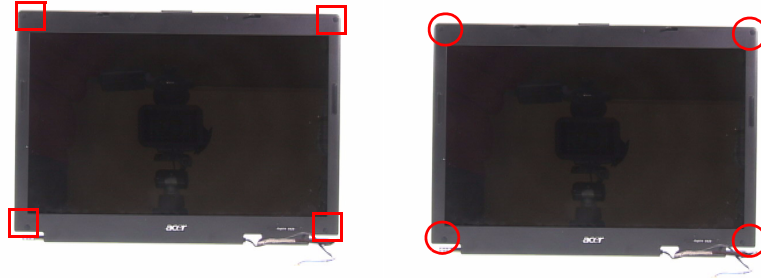


**NOTE:** For LCD module with CCD, please refer to following steps.

1. Remove the six screw caps for the LCD module.
2. Remove the six screws securing the LCD module.

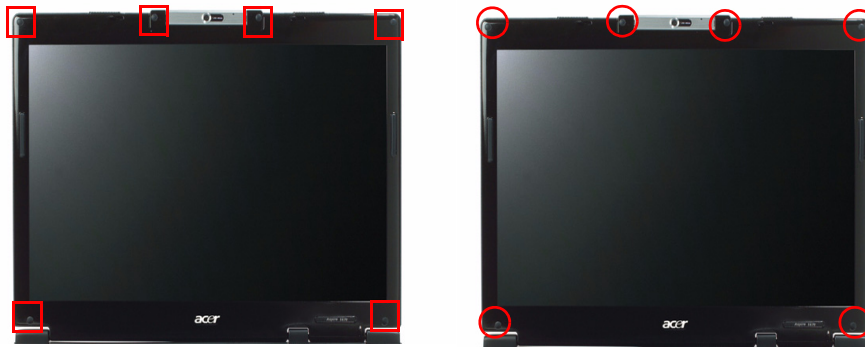

3. Remove the LCD bezel.

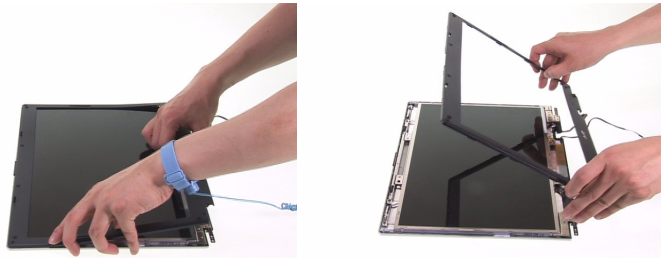


4. Remove the 13 screws securing the LCD panel.







5. For LCD with CCD, remove the 11 screws securing the LCD panel.

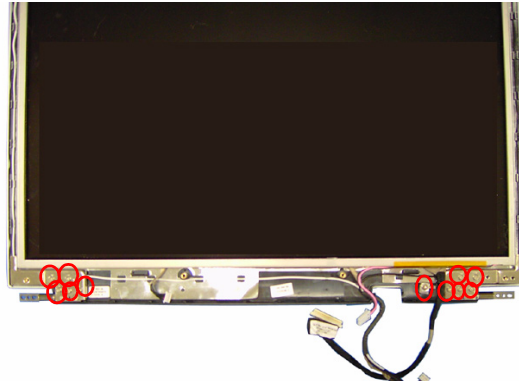


6. Lift up the inverter board.
7. Disconnect the inverter cables from the inverter board and remove the inverter board.

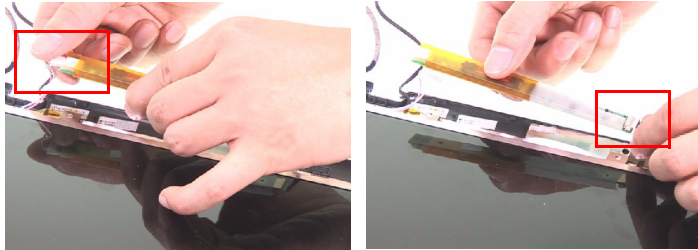


8. Remove the LCD panel from the LCD cover.

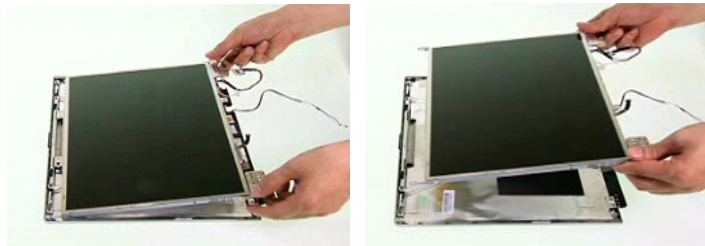

9. Remove the two screws securing the left LCD brackets.
10. Remove the left LCD bracket from the LCD panel.

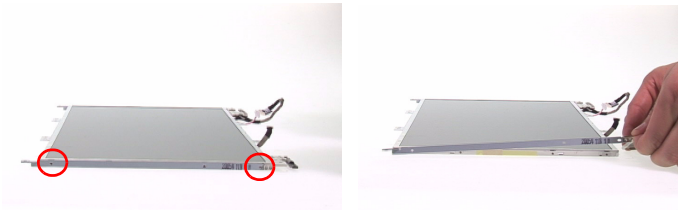


11. Remove the two screws securing the right LCD bracket.
12. Remove the right LCD bracket from the LCD panel.

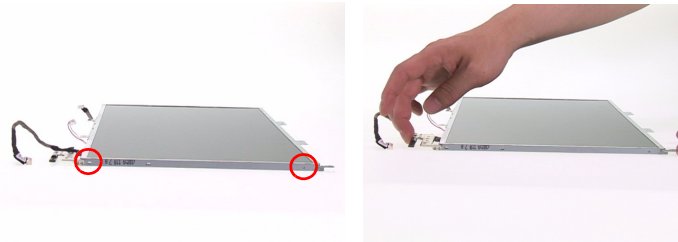

13. Remove the tape on the LCD cable.


14. Disconnect the LCD cable and remove the LCD cable from the LCD panel.

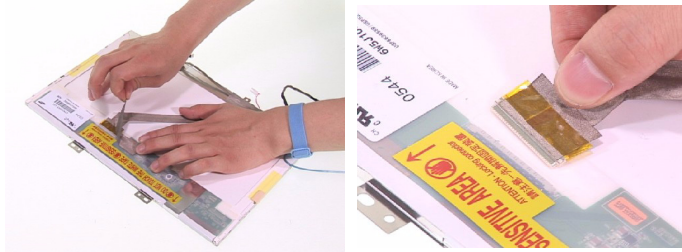


15. This completes the LCD module disassembly.

## ***Remove the CCD module***


1. Remove the five screws securing the CCD brackets and remove the CCD brackets

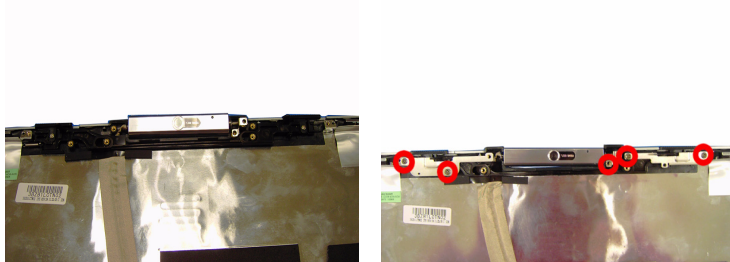


2. Lift the CCD plastic bracket up.

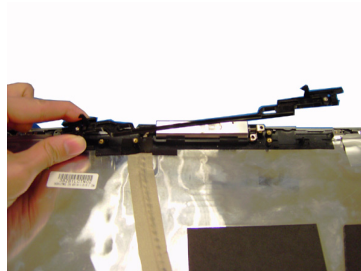

3. Remove the CCD module.

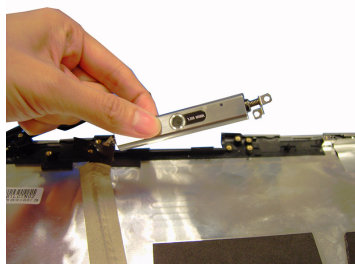


4. Be careful that the CCD cable is combined with the antenna.

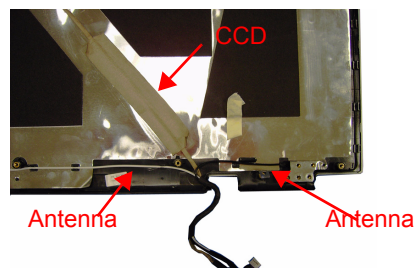

---

## Reassembling the LCD Module


1. Connect the LCD cable to the LCD panel.
2. Place the tape on the LCD cable.

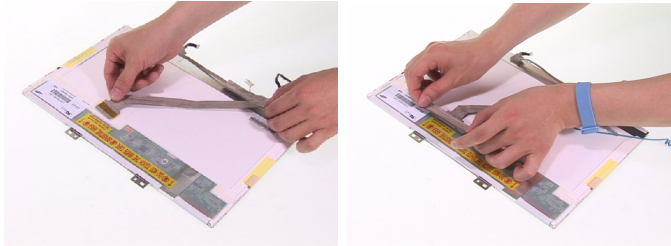

3. Place the right LCD bracket back to the LCD panel
4. Secure the right LCD bracket with the two screws.



5. Place the left LCD bracket back to the LCD panel
6. Secure the left LCD bracket with the two screws.

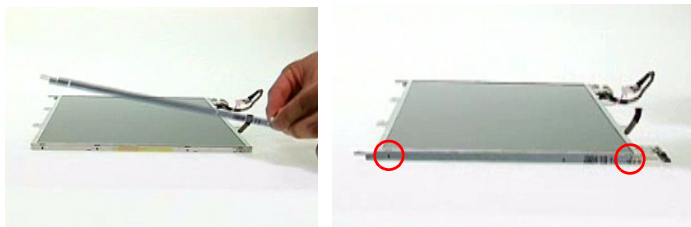


7. Place the LCD panel back to the LCD cover.
8. Place the inverter board back to the LCD module and connect the inverter cables to the inverter board.




9. Secure the LCD panel with the 13 screws.



- 
10. Place the LCD bezel back to the LCD module. Push each side of the bezel to make it clip to the LCD cover well.

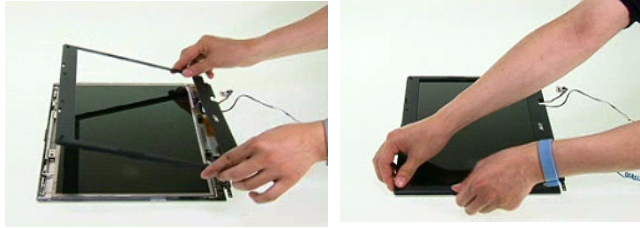

11. Secure the LCD bezel with four screws.  
12. Place the four screw caps back.

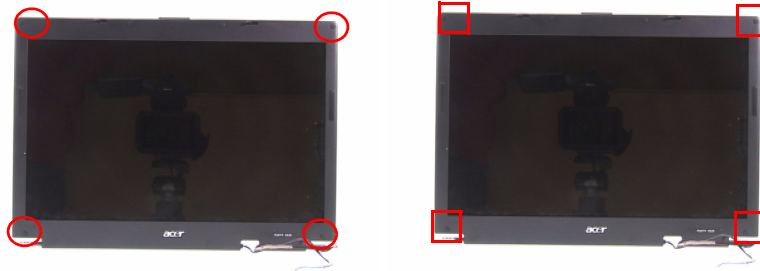


13. This completes the LCD module reassembly.


---

## ***HDD disassembly & Reassembly***


1. Remove the four screws securing the HDD bracket.

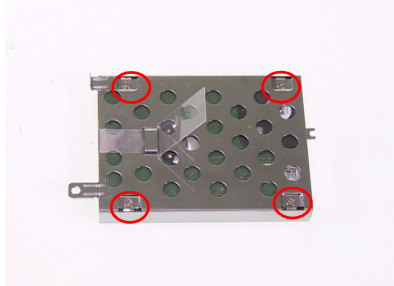


2. Remove the HDD bracket from the HDD.

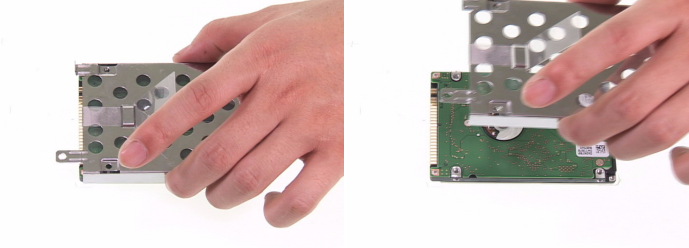

3. Place the HDD bracket back to the HDD.

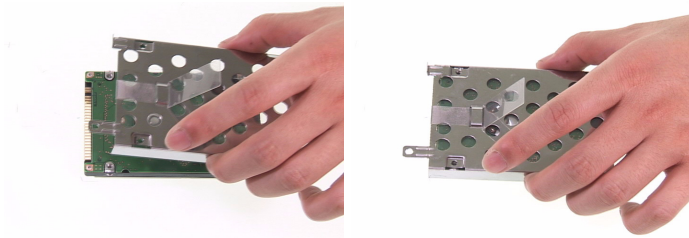

4. Secure the HDD with the four screws.

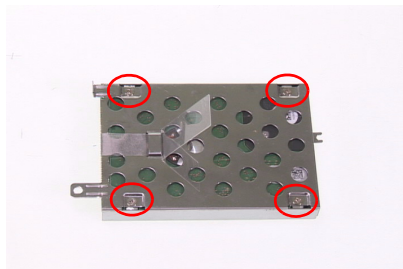


5. This completes HDD module disassembly and reassembly.

---

## ***ODD disassembly & Reassembly***

1. Remove the four screws securing the ODD module.

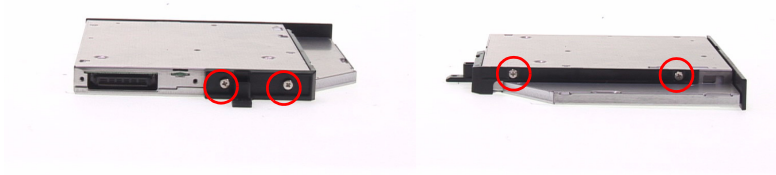


2. Remove the ODD bracket from the ODD.



3. Place the ODD bracket back to the ODD.



4. Secure the ODD with the four screw.

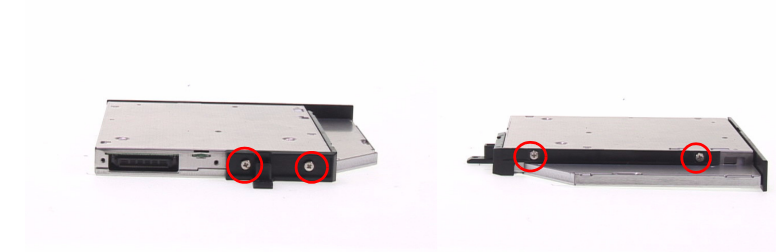

5. This completes ODD module disassembly and reassembly.






---


## Main Unit Reassembly

### Reassembling the Mainboard, Uppercase, and Lowercase


1. Place the mainboard back to the lower case.

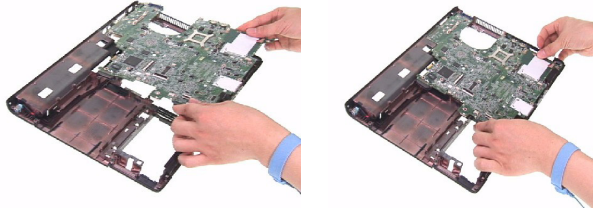


2. Insert the PCMCIA dummy card back to the lower case.

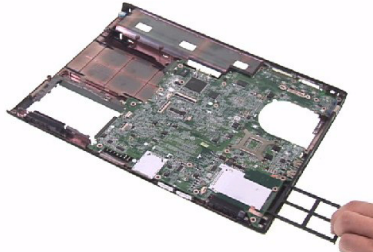


3. Connect the USB FFC to the USB module and latch it well.
4. Place the USB module back to the lower case.

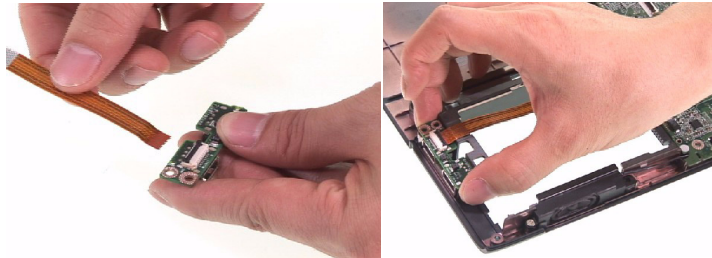

5. Secure the USB module with one screw.
6. Connect the USB FFC to the mainboard and latch it well.

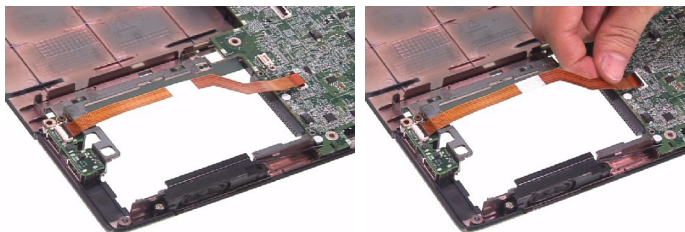


7. Connect the MDC cable to the MDC board.
8. Place the MDC board back to the mainboard.

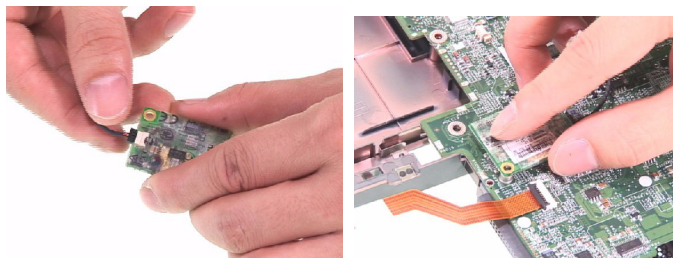




9. Secure the MDC board with one screw.

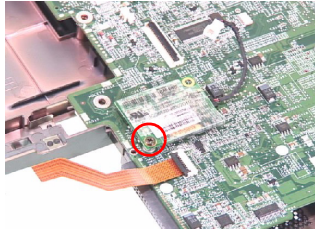


10. Connect the speaker cable to the mainboard.

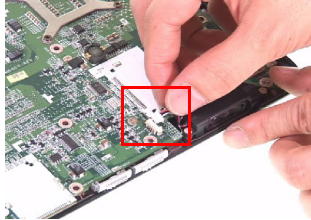


11. Aim the location of Bluetooth and wireless launch button.


12. Place the upper case back to the lower case.

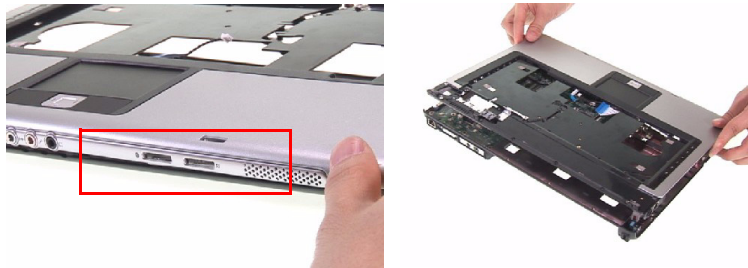


13. Connect the touchpad board FFC to the mainboard and latch it well.

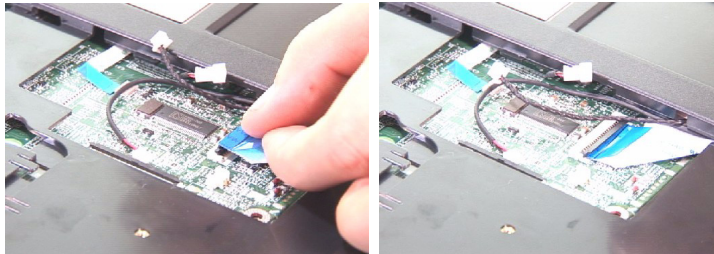

14. Connect the MIC wire cable to the mainboard.

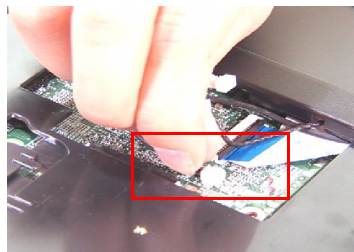


15. Reconnect the MDC cables as shown.

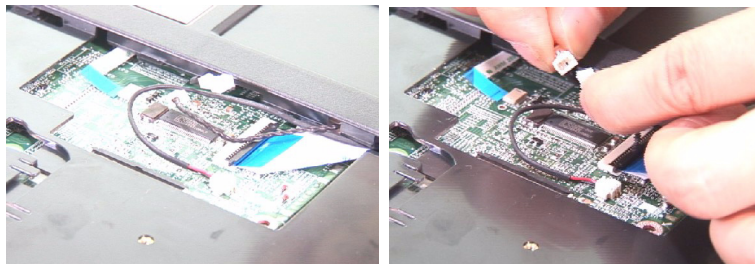


16. Connect the Audio DJ FFC to the mainboard.


17. Connect the LID switch cable back to the mainboard.

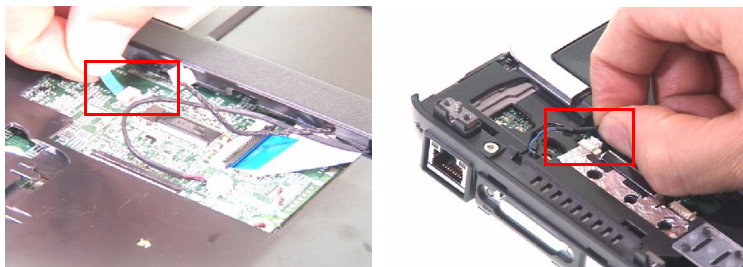

18. Secure the lower case with 22 screws.

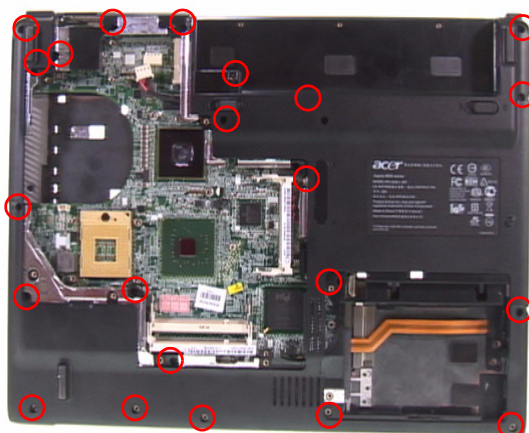


19. Secure the upper case with 5 screws.

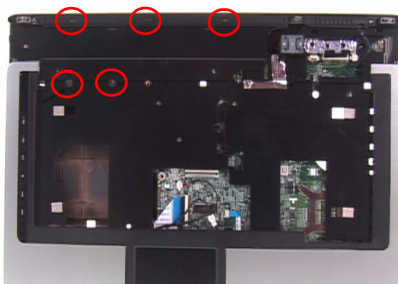

### ***Reassembling the ODD***


1. Place the ODD module back to the main unit.

2. Secure the ODD module with one screw.

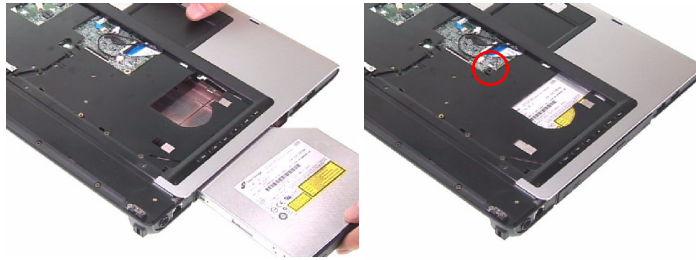

## ***Reassembling the LCD Module to Main Unit***


1. Place the LCD module back to the main unit.
2. Put the antenna through the hole.

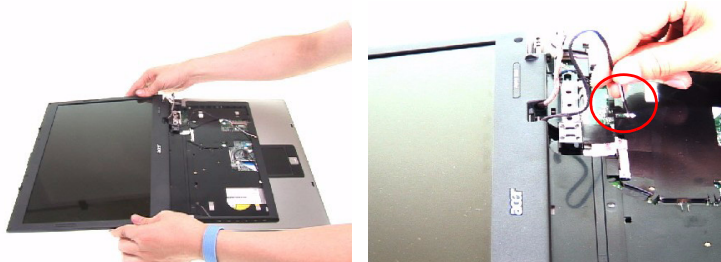


3. Secure the LCD module with two screws on left and right hinges.



4. Connect the LCD cable to the mainboard.

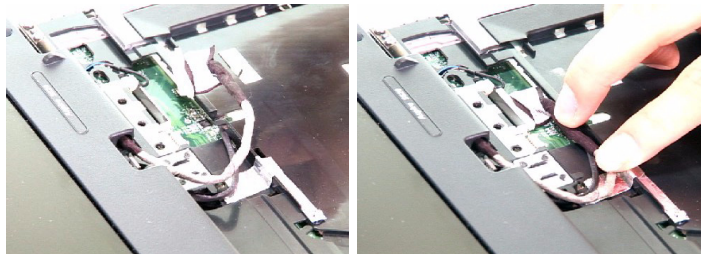


5. Place the keyboard back to the main unit.
6. Connect the keyboard FFC to the mainboard and latch it well.

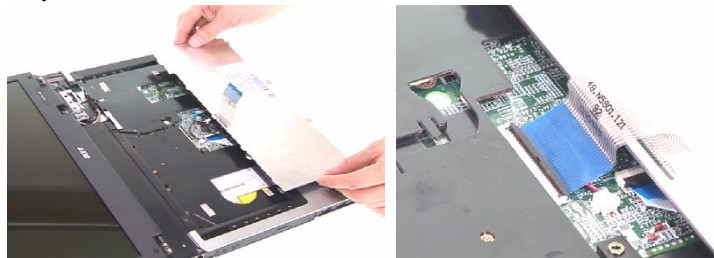

7. Turn the keyboard over.



- Secure the keyboard with two screws.

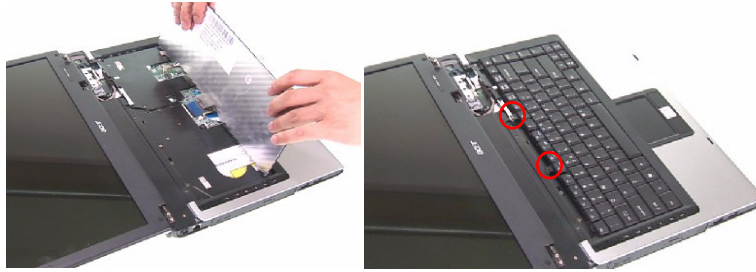


- Place the middle cover back to the main unit.
- Close the notebook.



- Secure the middle cover with three screws on the rear panel.




- Connect the power cable to the mainboard.

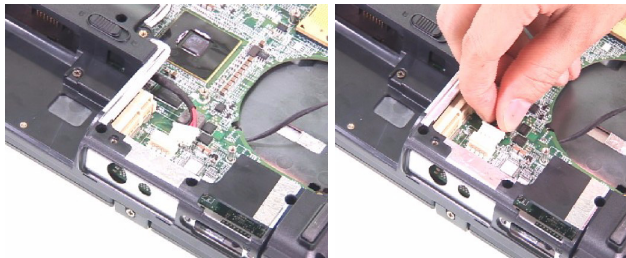


### ***Reassembling the Bluetooth Module***

- Connect the Bluetooth cable to the Bluetooth module.
- Place the Bluetooth module to the Bluetooth bracket.

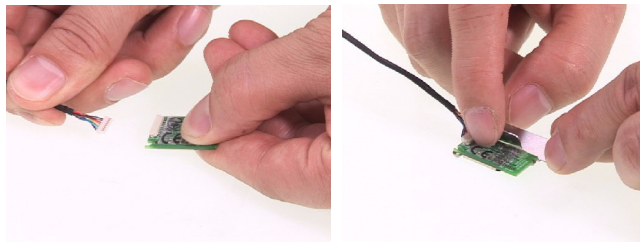


- Secure the Bluetooth bracket with the two screws.


4. Place the Bluetooth module back to the main unit.

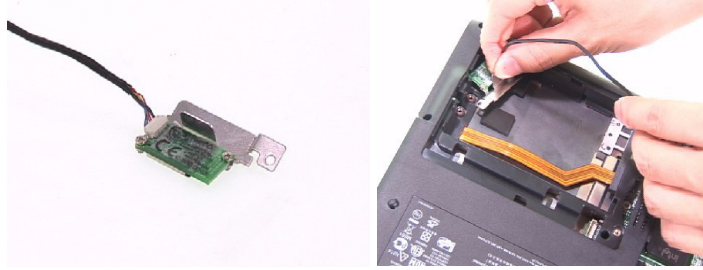

5. Secure the Bluetooth module with one screw.
6. Connect the Bluetooth cable to the mainboard.

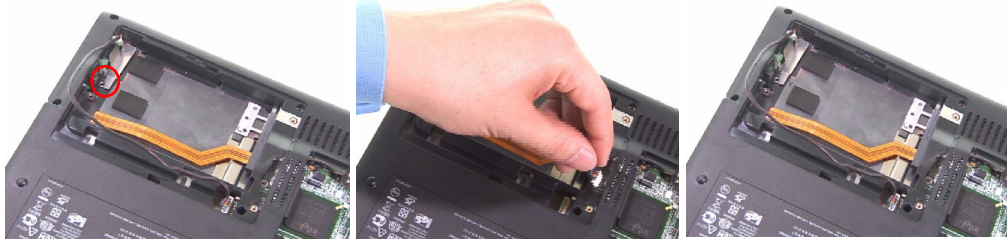


7. Place the Bluetooth cable in the wire groove.

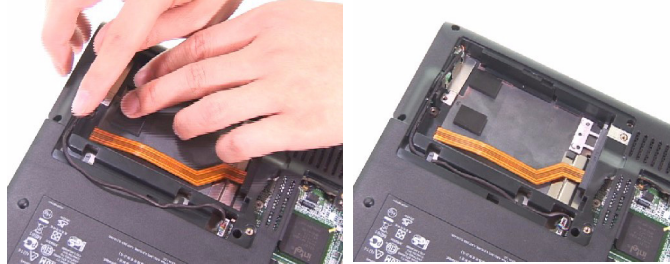

## ***Reassembling the CPU***


1. Aim the pin position on the CPU socket, then place the CPU back to the socket.
2. Use a flat screw driver and turn the screwdriver clockwise to lock the CPU.

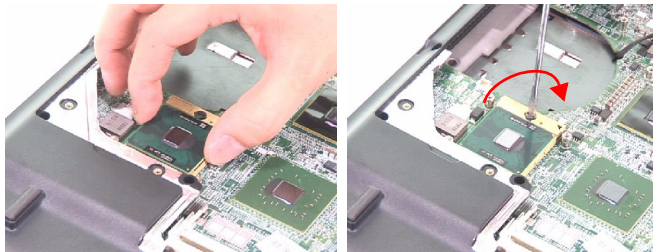

---


## ***Reassembling the Memory***

1. Place the DDR memory back to the mainboard as shown and press it down to latch it.

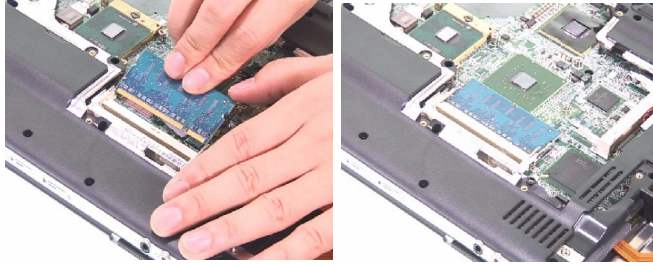


## ***Reassembling the Heatsink module***

1. Place the heatsink module back to the main unit.
2. Secure the heatsink module with the seven screws.

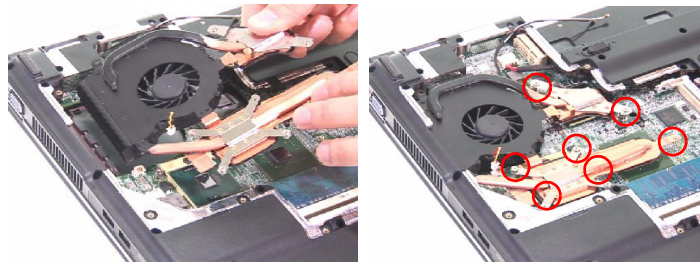


3. Connect the main fan cable to the mainboard.

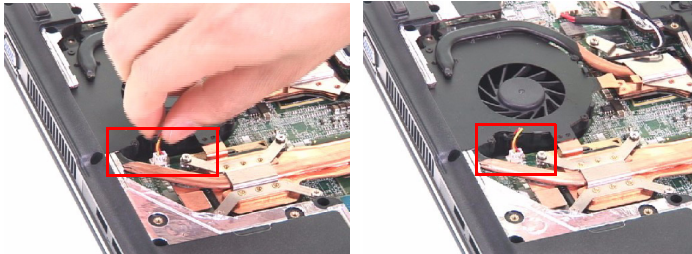


## ***Reassembling the Wireless Card***

1. Place the wireless card back to the mainboard as shown.
2. Secure the wireless card with two screws.

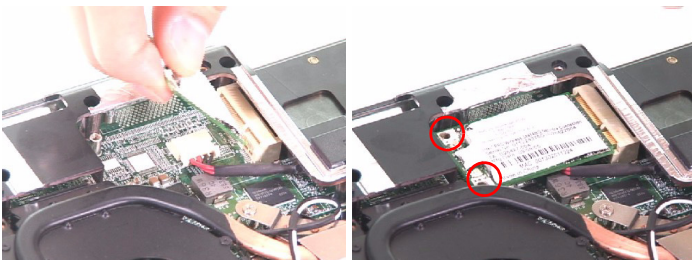




3. Connect the wireless antenna to the wireless card.

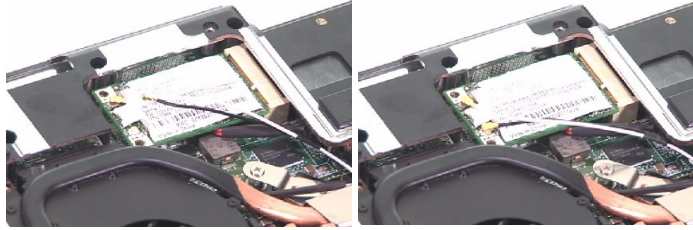

### ***Reassembling the HDD***

1. Place the HDD back to the main unit.
2. Secure the HDD with one screw.

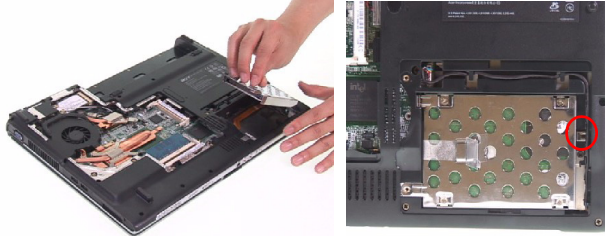

3. Place the HDD cover back to the main unit.
4. Secure the HDD cover with the two screws.




### ***Reassembling the heatsink cover & Battery***

1. Aim the three hooks to the holes on the rear panel and place the heatsink cover back to the lower case.



2. Secure the heatsink cover with six screws.

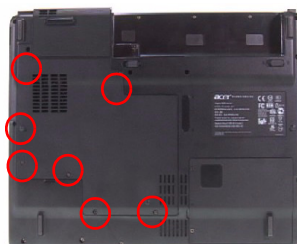

- 
3. Place the battery back.



4. This completes the main unit reassembly.





## Troubleshooting

Use the following procedure as a guide for computer problems.

**NOTE:** The diagnostic tests are intended to test this model. Non-Acer products, prototype cards, or modified options can give false errors and invalid system responses.

1. Duplicate symptom and obtain the failing symptoms in as much detail as possible.
2. Distinguish symptom. Verify the symptoms by attempting to re-create the failure by running the diagnostic test or by repeating the same operation.
3. Disassemble and assemble the unit without any power sources.
4. If any problem occurs, you can perform visual inspection before you follow this chapter's instructions. You can check the following:
  - power cords are properly connected and secured;
  - there are no obvious shorts or opens;
  - there are no obviously burned or heated components;
  - all components appear normal.
5. Use the following table with the verified symptom to determine which page to go to.

Symptoms (Verified)	Go To
Power failure. (The power indicator does not go on or stay on.)	"Power System Check" on page 87.
POST does not complete. No beep or error codes are indicated.	"Power-On Self-Test (POST) Error Message" on page 89 "Undetermined Problems" on page 101
POST detects an error and displayed messages on screen.	"Error Message List" on page 90
Other symptoms (i.e. LCD display problems or others).	"Power-On Self-Test (POST) Error Message" on page 89
Symptoms cannot be re-created (intermittent problems).	Use the customer-reported symptoms and go to "Power-On Self-Test (POST) Error Message" on page 89 "Intermittent Problems" on page 100 "Undetermined Problems" on page 101

---

## ***System Check Procedures***

### ***External Diskette Drive Check***

If an error occurs with the internal diskette drive, reconnect the diskette connector on the system board.

If the error still remains:

1. Reconnect the external diskette drive/DVD-ROM module.
2. Replace the external diskette drive/CD-ROM module.
3. Replace the main board.

### ***External CD-ROM Drive Check***

Do the following to isolate the problem to a controller, drive, or CD-ROM. Make sure that the CD-ROM does not have any label attached to it. The label can cause damage to the drive or can cause the drive to fail.

Do the following to select the test device:

1. Boot from the diagnostics diskette and start the diagnostics program.
2. See if CD-ROM Test is passed when the program runs to CD-ROM Test.
3. Follow the instructions in the message window.

If an error occurs, reconnect the connector on the System board. If the error still remains:

1. Reconnect the external diskette drive/CD-ROM module.
2. Replace the external diskette drive/CD-ROM module.
3. Replace the main board.

### ***Keyboard or Auxiliary Input Device Check***

Remove the external keyboard if the internal keyboard is to be tested.

If the internal keyboard does not work or an unexpected character appears, make sure that the flexible cable extending from the keyboard is correctly seated in the connector on the system board.

If the keyboard cable connection is correct, run the Keyboard Test.

If the tests detect a keyboard problem, do the following one at a time to correct the problem. Do not replace a non-defective FRU:

1. Reconnect the keyboard cables.
2. Replace the keyboard.
3. Replace the main board.

The following auxiliary input devices are supported by this computer:

- Numeric keypad
- External keyboard

If any of these devices do not work, reconnect the cable connector and repeat the failing operation.

### ***Memory check***

Memory errors might stop system operations, show error messages on the screen, or hang the system.

1. Boot from the diagnostics diskette and start the doagmpstotics program (please refer to main board).
2. Go to the diagnostic memory in the test items.
3. Press F2 in the test items.
4. Follow the instructions in the message window.

**NOTE:** Make sure that the DIMM is fully installed into the connector. A loose connection can cause an error.

---

## ***Power System Check***

To verify the symptom of the problem, power on the computer using each of the following power sources:

1. Remove the battery pack.
2. Connect the power adapter and check that power is supplied.
3. Disconnect the power adapter and install the charged battery pack; then check that power is supplied by the battery pack.

If you suspect a power problem, see the appropriate power supply check in the following list:

- “Check the Battery Pack” on page 88

---

## ***Check the Battery Pack***

To check the battery pack, do the following:

From Software:

1. Check out the Power Management in control Panel
2. In Power Meter, confirm that if the parameters shown in the screen for Current Power Source and Total Battery Power Remaining are correct.
3. Repeat the steps 1 and 2, for both battery and adapter.
4. This helps you identify first the problem is on recharging or discharging.

From Hardware:

1. Power off the computer.
2. Remove the battery pack and measure the voltage between battery terminals 1(+) and 6(ground). See the following figure
3. If the voltage is still less than 7.5 Vdc after recharging, replace the battery.

To check the battery charge operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

If the battery status indicator does not light up, remove the battery pack and let it return to room temperature. Re-install the battery pack.

If the charge indicator still does not light up, replace the battery pack. If the charge indicator still does not light up, replace the DC/DC charger board.

## ***Touchpad check***

If the touchpad doesn't work, do the following actions one at a time to correct the problem. Do not replace a non-defective FRU:

1. After rebooting, run Tracking Pad PS2 Mode Driver. For example, run Syn touch driver.
2. Run utility with the PS/2 mouse function and check if the mouse is working.
3. If the PS/2 mouse does not work, then check if the main board to switch board FPC is connected O.K.
4. If the main board to switch board FPC is connected well, then check if the FCC on touch pad PCB connects properly.
5. If the FCC on touch pad PCB connects properly, then check if LS851 JP1 Pin6=5V are pulse. If yes, then replace switch board. If no, then go to next step.
6. Replace touch pad PCB.
7. If the touch pad still does not work, then replace FPC on Track Pad PCB.

After you use the touchpad, the pointer drifts on the screen for a short time. This self-acting pointer movement can occur when a slight, steady pressure is applied to the touchpad pointer. This symptom is not a hardware problem. No service actions are necessary if the pointer movement stops in a short period of time.

---

## ***Power-On Self-Test (POST) Error Message***

The POST error message index lists the error message and their possible causes. The most likely cause is listed first.

**NOTE:** Perform the FRU replacement or actions in the sequence shown in FRU/Action column, if the FRU replacement does not solve the problem, put the original part back in the computer. Do not replace a non-defective FRU.

This index can also help you determine the next possible FRU to be replaced when servicing a computer.

If the symptom is not listed, see “Undetermined Problems” on page 101.

The following lists the error messages that the BIOS displays on the screen and the error symptoms classified by function.

**NOTE:** Most of the error messages occur during POST. Some of them display information about a hardware device, e.g., the amount of memory installed. Others may indicate a problem with a device, such as the way it has been configured.

**NOTE:** If the system fails after you make changes in the BIOS Setup Utility menus, reset the computer, enter Setup and install Setup defaults or correct the error.

---

# ***Index of Error Messages***

## **Error Message List**

<b>Error Messages</b>	<b>FRU/Action in Sequence</b>
Struck Key	See "Keyboard or Auxiliary Input Device Check" on page 86
System CMOS checksum bad - Default configuration used	RTC battery Run BIOS Setup Utility to reconfigure system, then reboot system.
Real time clock error	RTC battery Run BIOS Setup Utility to reconfigure system time, then reboot system. Main board
Previous boot incomplete - Default configuration used	"Load Default Settings" in BIOS Setup Utility. RTC battery Main board
Invalid System Configuration Data	"Load Default Settings" in BIOS Setup Utility. Main board
Operating system not found	Enter Setup and see if fixed disk and drive A are properly identified. Dikette drive Hard disk drive Main board

## Error Message List

No beep Error Messages	FRU/Action in Sequence
Power-on indicator turns off and LCD is blank.	Power source (battery pack and power adapter.) See "Power System Check" on page 87 Ensure every connector is connected tightly and correctly. Reconnect the DIMM. Main board.
Power-on indicator turns on and LCD is blank.	Power source (battery pack and power adapter.) See "Power System Check" on page 87 Reconnect the LCD connector Hard disk drive LCD cable LCD inverter LCD Main board
Power-on indicator turns on and LCD is blank. But you can see POST on an external CRT.	Reconnect the LCD connectors. LCD cable LCD inverter LCD Main board
Power-on indicator turns on and a blinking cursor shown on LCD during POST.	Ensure every connector is connected tightly and correctly. Main board



## Phoenix BIOS Beep Codes

Code	Beeps	POST Routine Description
02h		Verify Real Mode
03h		Disable Non-Maskable Interrupt (NMI)
04h		Get CPU type
06h		Initialize system hardware
07h		Disable shadow and execute code from the ROM.
08h		Initialize chipset with initial POST values
09h		Set IN POST flag
0Ah		Initialize CPU registers
0Bh		Enable CPU cache
0Ch		Initialize caches to initial POST values
0Eh		Initialize I/O component
0Fh		Initialize the local bus IDE
10h		Initialize Power Management
11h		Load alternate registers with initial POST values
12h		Restore CPU control word during warm boot
13h		Initialize PCI Bus Mastering devices
14h		Initialize keyboard controller
16h	1-2-2-3	BIOS ROM checksum
17h		Initialize cache before memory autosize
18h		8254 timer initialization
1Ah		8237 DMA controller initialization
1Ch		Reset Programmable Interrupt Controller
20h	1-3-1-1	Test DRAM refresh
22h	1-3-1-3	Test 8742 Keyboard Controller
24h		Set ES segment register to 4 GB
28h		Autosize DRAM
29h		Initialize POST Memory Manager
2Ah		Clear 215 KB base RAM
2Ch	1-3-4-1	RAM failure on address line xxxx
2Eh	1-3-4-3	RAM failure on data bits xxxx of low byte of memory bus
2Fh		Enable cache before system BIOS shadow
32h		Test CPU bus-clock frequency
33h		Initialize Phoenix Dispatch Manager
36h		Warm start shut down
38h		Shadow system BIOS ROM
3Ah		Autosize cache
3Ch		Advanced configuration of chipset registers
3Dh		Load alternate registers with CMOS values
41h		Initialize extended memory for RomPilot.
42h		Initialize interrupt vectors
45h		POST device initialization
46h	2-1-2-3	Check ROM copyright notice

Code	Beeps	POST Routine Description
47h		Initialize I20 support
48h		Check video configuration against CMOS
49h		Initialize PCI bus and devices
4Ah		Initialize all video adapters in system
4Bh		QuietBoot start (optional)
4Ch		Shadow video BIOS ROM
4Eh		Display BIOS copyright notice
50h		Display CPU type and speed
51h		Initialize EISA board
52h		Test keyboard
54h		Set key click if enabled
55h		Enable USB devices
58h	2-2-3-1	Test for unexpected interrupts
59h		Initialize POST display service
5Ah		Display prompt "Press F2 to enter SETUP"
5Bh		Disable CPU cache
5Ch		Test RAM between 512 and 640 KB
60h		Test extended memory
62h		Test extended memory address lines
64h		Jump to User Patch1
66h		Configure advanced cache registers
67h		Initialize Multi Processor APIC
68h		Enable external and CPU caches
69h		Setup System Management Mode (SMM) area
6Ah		Display external L2 cache size
6Bh		Load custom defaults (optional)
6Ch		Display shadow-area message
6Eh		Display possible high address for UMB recovery
70h		Display error messages
72h		Check for configuration errors
76h		Check for keyboard errors
7Ch		Set up hardware interrupt vectors
7Eh		Initialize coprocessor if present
80h		Disable onboard Super I/O ports and IRQs
81h		Late POST device initialization
82h		Detect and install external RS232 ports
83h		Configure non-MCD IDE controllers
84h		Detect and install external parallel ports
85h		Initialize PC-compatible PnP ISA devices
86h		Re-initialize onboard I/O ports
87h		Configure Motherboard Configurable Devices (optional)
88h		Initialize BIOS Data Area
89h		Enable Non-Maskable Interrupts (NMIs)
8Ah		Initialize Extended BIOS Data Area

Code	Beeps	POST Routine Description
8Bh		Test and initialize PS/2 mouse
8Ch		Initialize floppy controller
8Fh		Determine number of ATA drives (optional)
90h		Initialize hard-disk controllers
91h		Initialize local-bus hard-disk controllers
92h		Jump to UserPatch2
93h		Build MPTABLE for multi-processor boards
95h		Install CD ROM for boot
96h		Clear huge ES segment register
97h		Fixup Multi Processor table
98h	1-2	Search for option ROMs. One long, two short beeps on checksum failure.
99h		Check for SMART drive (optional)
9Ah		Shadow option ROMs
9Ch		Set up Power Management
9Dh		Initialize security engine (optional)
9Eh		Enable hardware interrupts
9Fh		Determine number of ATA and SCSI drives
A0h		Set time of day
A2h		Check key lock
A4h		Initialize Typematic rate
A8h		Erase F2 prompt
AAh		Scan for F2 key stroke
ACh		Enter SETUP
A Eh		Clear Boot flag
B0h		Check for errors
B1h		Inform RomPilot about the end of POST.
B2h		POST done- prepare to boot operating system
B4h	1	One short beep before boot
B5h		Terminate QuietBoot (optional)
B6h		Check password (optional)
B7h		Initialize ACPI BIOS
B9h		Prepare Boot
BAh		Initialize SMBIOS
BBh		Initialize PnP Option ROMs
BCh		Clear parity checkers
BDh		Display MultiBoot menu
BEh		Clear screen (optional)
BFh		Check virus and backup reminders
C0h		Try to boot with INT 19
C1h		Initialize POST Error Manager (PEM)
C2h		Initialize error logging
C3h		Initialize error display function
C4h		Initialize system error handler
C5h		PnPnd dual CMOS (optional)
C6h		Initialize notebook docking (optional)

Code	Beeps	POST Routine Description
C7h		Initialize notebook docking late
C8h		Force check (optional)
C9h		Extended checksum (optional)
CAh		Redirect Int 15h to enable remote keyboard
CBh		Redirect Int 13h to Memory Technologies Devices such as ROM, RAM, PCMCIA, and serial disk.
CCh		Redirect Int 10h to enable remote serial video
CDh		Re-map I/O and memory for PCMCIA
CEh		Initialize digitizer and display message.
D2h		Unknown interrupt
<b>The following are for boot block in Flash ROM</b>		
E0h		Initialize the chipset
E1h		Initialize the bridge
E2h		Initialize the CPU
E3h		Initialize the system timer
E4h		Initialize system I/O
E5h		Check force recovery boot
E6h		Checksum BIOS ROM
E7h		Go to BIOS
E8h		Set Huge Segment
E9h		Initialize Multi Processor
EAh		Initialize OEM special code
EBh		Initialize PIC and DMA
ECh		Initialize Memory type
EDh		Initialize Memory size
EEh		Shadow Boot Block
EFh		System memory test
F0h		Initialize interrupt vectors
F1h		Initialize Run Time Clock
F2h		Initialize video
F3h		Initialize System Management Mode
F4h	1	Output one beep
F5h		Clear Huge Segment
F6h		Boot to Mini DOS
F7h		Boot to Full DOS

# Index of Symptom-to-FRU Error Message

## LCD-Related Symptoms

Symptom / Error	Action in Sequence
LCD backlight doesn't work	First, plug a monitor to CRT port. Next, enter BIOS utility to running "Load Default Settings" then reboot the system. Reconnect the LCD connectors. Keyboard (if the brightness function key doesn't work). LCD cable LCD inverter LCD Main board
LCD is too dark LCD brightness cannot be adjusted	Enter BIOS Utility to execute "Load Setup Default Settings", then reboot system. Reconnect the LCD connectors. Keyboard (if the brightness function key doesn't work). LCD cable LCD inverter LCD Main board
Unreadable LCD screen Missing pels in characters Abnormal screen Wrong color displayed LCD has extra horizontal or vertical lines displayed.	Reconnect the LCD cable LCD cable LCD Main board

## Indicator-Related Symptoms

Symptom / Error	Action in Sequence
Indicator incorrectly remains off or on, but system runs correctly	Main board
HDD/CD-ROM active indicators cannot work	HDD/CD-ROM drive Device driver Main board

## Power-Related Symptoms

Symptom / Error	Action in Sequence
Power shuts down during operation	Power source (battery pack and power adapter). See "Power System Check" on page 87. Battery pack AC adapter See if the thermal module is overheat (Heat sink or fan). Main board
The system cannot power-on.	Power source (battery pack and power adapter). See "Power System Check" on page 87. Battery pack Power adapter CPU Main board
The system cannot power-off.	In Windows XP operating system, hold and press the power switch for more than 4 seconds. If the system can power off, then the main board is OK. Verify OS in the HDD. Main board

### Power-Related Symptoms

Symptom / Error	Action in Sequence
Battery can't be charged or discharged	See "Check the Battery Pack" on page 88. Battery pack Main board
System hang during POST	ODD/HDD/FDD/RAM module Main board

### PCMCIA-Related Symptoms

Symptom / Error	Action in Sequence
System cannot detect the PC Card (PCMCIA)	PCMCIA slot assembly Main board
PCMCIA slot pin is damaged.	PCMCIA slot assembly
PC Card cannot be inserted or ejected	Check if the PCMCIA slot is blocked Main board

### Memory-Related Symptoms

Symptom / Error	Action in Sequence
Memory count (size) appears different from actual size.	Enter BIOS Setup Utility to execute "Load Default Settings" then reboot system. RAM module Main board Check BIOS revision
System can power on, but you hear two long beeps: "B--, B--" and the LCD is blank.	Reinsert DIMM DIMM Main board

### Speaker-Related Symptoms

Symptom / Error	Action in Sequence
In Windows, multimedia programs, no sound comes from the computer.	OS volume control Audio driver Speaker Main board
Internal speakers make noise or emit no sound.	Speaker Main board
Microphone cannot work	Audio driver Volume control in Windows XP Main board

### Power Management-Related Symptoms

Symptom / Error	Action in Sequence
The system will not enter hibernation mode	Power option in Windows XP Hard disk drive Main board
The system doesn't enter standby mode after closing the lid of the portable computer.	Driver of Power Option Properties Lid close switch in upper case Main board

## Power Management-Related Symptoms

Symptom / Error	Action in Sequence
The system doesn't resume from hibernation/standby mode.	Connect AC adapter then check if the system resumes from Standby/Hibernation mode. Check if the battery is low. Hard disk drive Main board
The system doesn't resume from standby mode after opening the lid of the portable computer.	LCD cover switch Main board
Battery fuel gauge in Windows doesn't go higher than 90%.	Refresh battery (continue use battery until power off, then charge battery). Battery pack Main board
System hangs intermittently.	Reconnect hard disk/CD-ROM drives. Main board

## Peripheral-Related Symptoms

Symptom / Error	Action in Sequence
System configuration does not match the installed devices.	Enter BIOS Setup Utility to execute "Load Setup defaults", then reboot system. Reconnect hard disk/CD-ROM drives/FDD or other peripherals. Main board
External display does not work correctly.	Press Fn+F5, LCD/CRT/Both display switching Keyboard Main board
USB does not work correctly	Main board
Print problems.	Enter BIOS Setup Utility to execute "Load Default Settings" then reboot the system. Run printer self-test. Printer driver Printer cable Printer Main board
Parallel port device problems	Enter BIOS Setup Utility to execute "Load Default Settings" then reboot the system. Device driver Device cable Device Main board

## Keyboard/Touchpad-Related Symptoms

Symptom / Error	Action in Sequence
Keyboard (one or more keys) does not work.	Reconnect the keyboard cable. Keyboard Main board
Touchpad does not work.	Reconnect touchpad cable. Touchpad board Main board

---

### Modem/LAN-Related Symptoms

Symptom / Error	Action in Sequence
Internal modem does not work correctly.	Phone cable Driver Reconnect the Internal modem cable to the main board tightly. Main board
Internal LAN does not work correctly	Lan cable Driver Main board

**NOTE:** If you cannot find a symptom or an error in this list and the problem remains, see “Undetermined Problems” on page 101.



---

## ***Intermittent Problems***

Intermittent system hang problems can be caused by a variety of reasons that have nothing to do with a hardware defect, such as: cosmic radiation, electrostatic discharge, or software errors. FRU replacement should be considered only when a recurring problem exists.

When analyzing an intermittent problem, do the following:

1. Run the diagnostic test for the system board in loop mode at least 10 times.
2. If no error is detected, do not replace any FRU.
3. If any error is detected, replace the FRU. Rerun the test to verify that there are no more errors.

---

## ***Undetermined Problems***

The diagnostic problems does not identify which adapter or device failed, which installed devices are incorrect, whether a short circuit is suspected, or whether the system is inoperative.

Follow these procedures to isolate the failing FRU (do not isolate non-defective FRU).

**NOTE:** Verify that all attached devices are supported by the computer.


**NOTE:** Verify that the power supply being used at the time of the failure is operating correctly. (See "Power System Check" on page 87):

1. Power-off the computer.
2. Visually check them for damage. If any problems are found, replace the FRU.
3. Remove or disconnect all of the following devices:
  - Non-Acer devices
  - Printer, mouse, and other external devices
  - Battery pack
  - Hard disk drive
  - DIMM
  - PC Cards
4. Power-on the computer.
5. Determine if the problem has changed.
6. If the problem does not recur, reconnect the removed devices one at a time until you find the failing FRU.
7. If the problem remains, replace the following FRU one at a time. Do not replace a non-defective FRU:
  - System board
  - LCD assembly




# Jumper and Connector Locations

## Top View

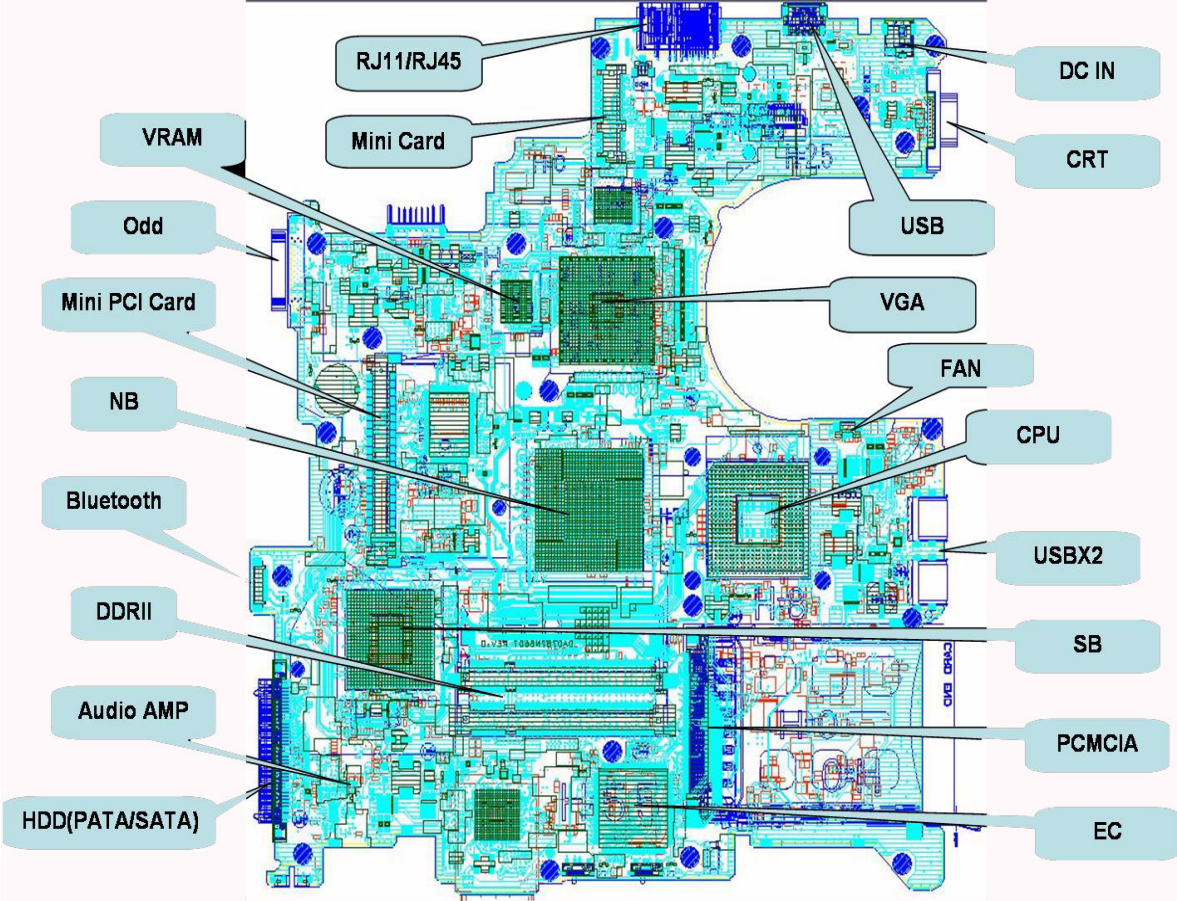

**Bottom View**

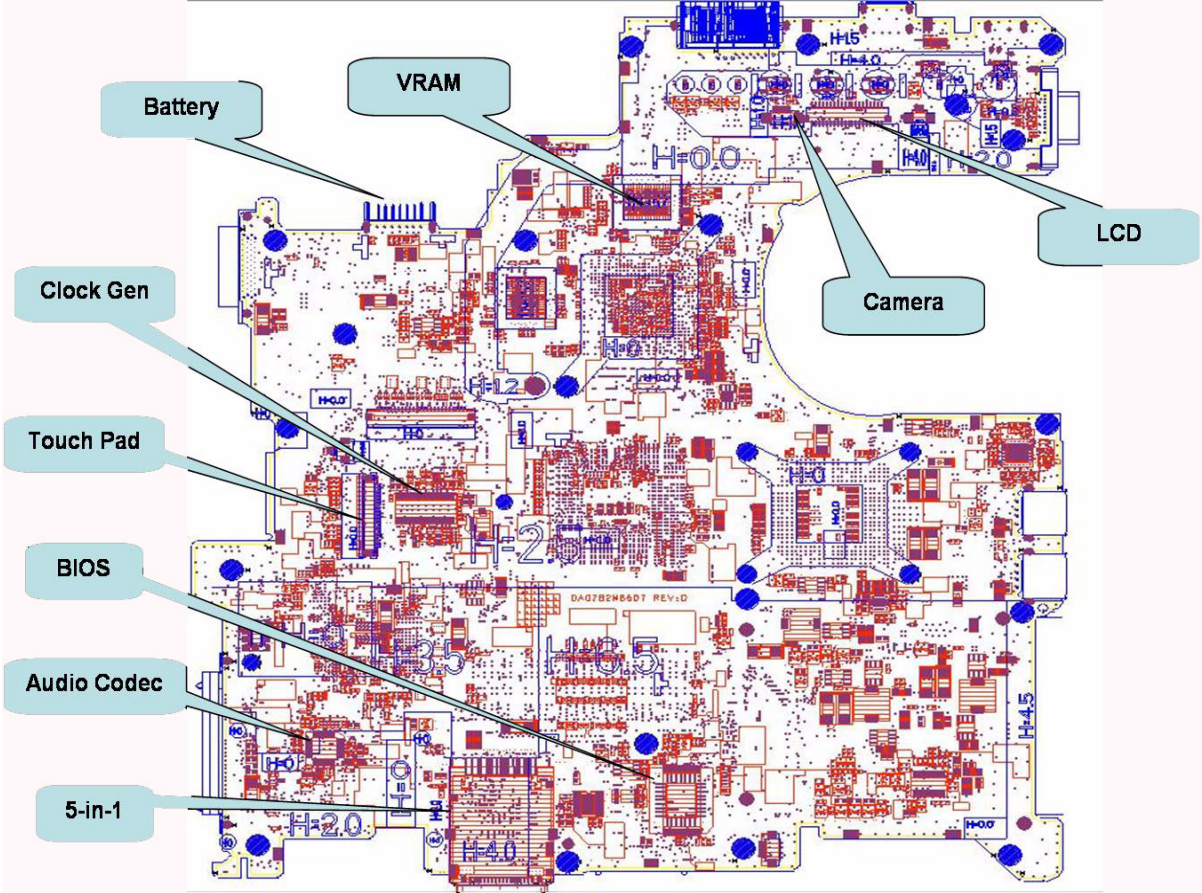

# ***FRU (Field Replaceable Unit) List***

---

This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of Aspire 5600 & TravelMate 4220 Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).


Please also note that there are some common parts for Aspire 3680, TravelMate 2480

Please note that WHEN ORDERING FRU PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reasons a part number change is made, it will not be noted on the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code from those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

**NOTE:** To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.


**NOTE:** Please visit website <http://aicsl.acer.com.tw/spl/> for the up to date SPL

# Exploded Diagram

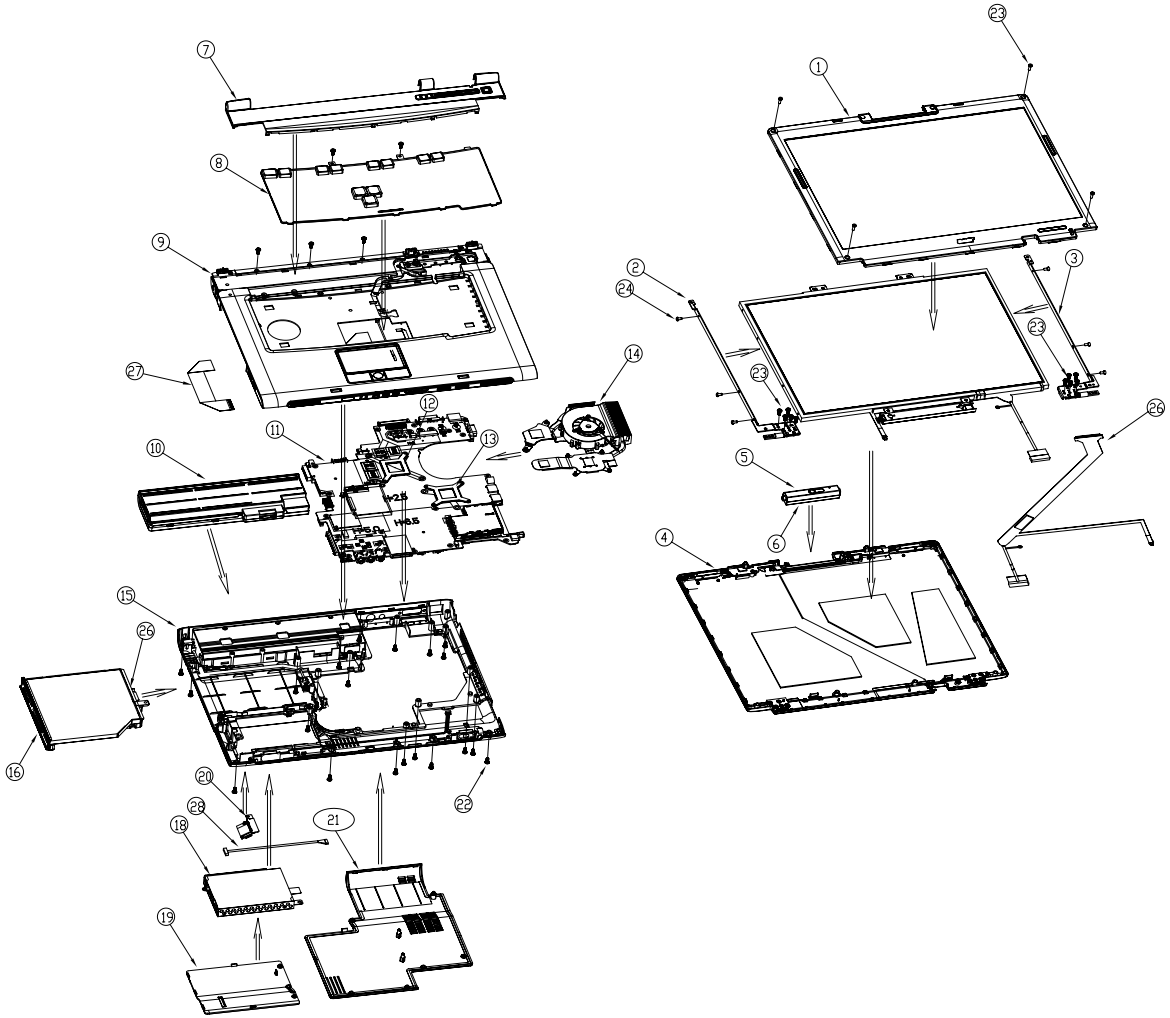

Item	Description	Item	Description
1	LCD bezel	22	Screw M2.5*6-I(BNI)(NYLOK)
2	LCD hinge-left	23	Screw M2.5*5.0-I(NI)(NYLOK)
3	LCD hinge-right	24	Screw M2.0*3.0-I-NI-NYLOK
4	LCD cover	25	ODD holder
5	CCD module(optional)	26	LCD cable
6	CCD cover(optional)	27	Touchpad board to mainboard cable
7	Middle cover	28	Bluetooth cable
8	Keyboard		
9	Upper case		
10	Battery		

Item	Description	Item	Description
11	Mainboard		
12	VGA support		
13	CPU support		
14	Heatsink module		
15	Lower case		
16	ODD module		
18	HDD module		
19	HDD cover		
20	Bluetooth bracket		
21	Heatsink cover		

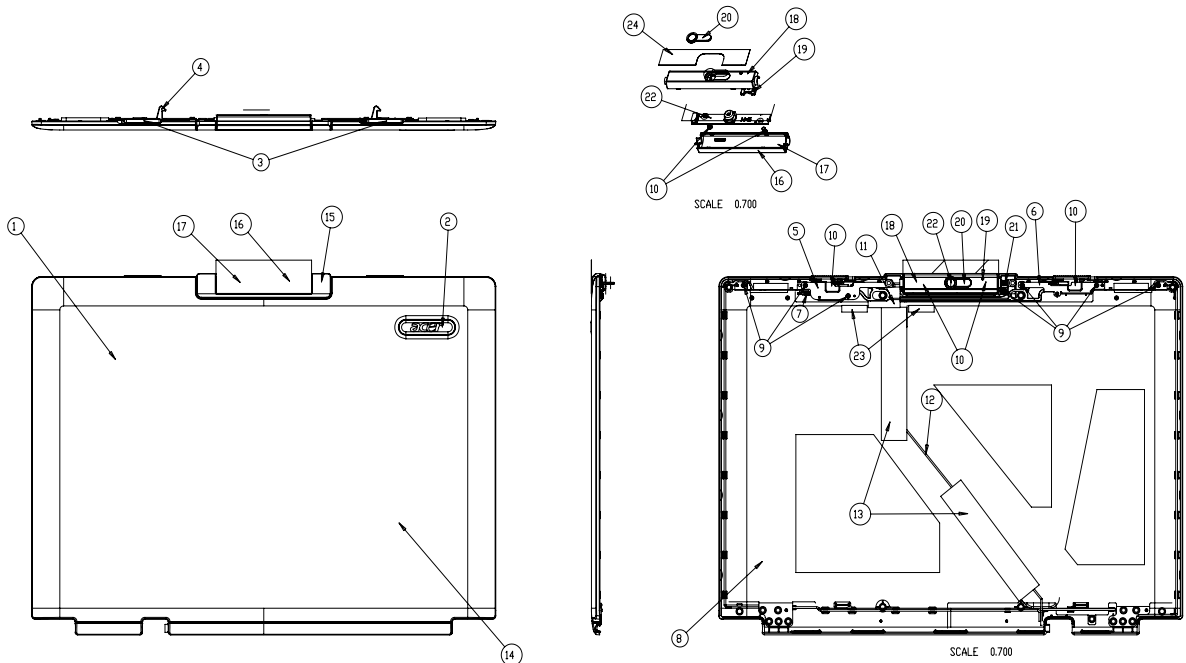

Item	Part Name	Item	Part Name
1	15.4" w/ CCD LCD cover(Aspire)	13	Conductive tape EP
2	ACER logo(Aspire)	14	LCD cover protect sheet
3	15.4" wide w/ CCD LCD knob	15	LCD CCD cover mylar
4	15.4" wide w/ CCD LCD latch	16	CCD cover protect
5	CCD latch BK-L	17	CCD cover
6	CCD latch BK-R	18	CCD bezel
7	LCD spring	19	CCD LED lens
8	15.4 w/ CCD cover shield	20	CCD name plate assy
9	screw M2.5*3.0-I(BNIXNYLOK)EP	21	CCD hinge



---

Item	Part Name	Item	Part Name
10	screw M2.0*3.0-I(NIXNYLOK)	22	camera V-UBDOEM1(CMOS module, 1.3M)
11	CCD cable maylar	23	LCD rubber-1
12	cable assy CCD (5P/4P/R2A) L-F	24	CCD bezel rotect

# Part List

CATEGORY	PART NAME	DESCRIPTION	PART NO.
<b>ADAPTER</b>			
ADAPTER	ADAPTER 90W 3 PIN DELTA ADP-90SB BBAHF ROHS	ZB1 ADP 19V Delta S/P	AP.09001.005
ADAPTER	ADAPTER 90W 3 PIN LITEON PA-1900-04QB ROHS	ZB1 ADP 19V Lite-on S/P	AP.09003.009
ADAPTER	ADAPTER LSE-90W SLS0202C19A157 LF BLUE 1.7X5.5X11 LF	ZB2 ADAPTER LSE-90W S/P	AP.09006.006
<b>BATTERY</b>			
BATTERY	BATTERY SANYO PACK LI-ION 4S1P 2.0A	ZL6 BATTERY (SANYO 4 CELL 2.0A) S/P	BT.00403.004
BATTERY	BATTER SONY 4 CELL LI LIP4084QUPC SY6 4S1P 2.0A LF	ZB1 BAT(Lite-on 4 cell w/Sony pack) S/P	BT.00404.004
BATTERY	BATTERY SIMPLO PACK 4 CELL LI-MN 916C4820F 4S1P 2.0A	ZB1 BATT LI 916C4820FS/P	BT.00407.007
BATTERY	BATTERY SANYO LI-MN 6 3UR18650Y-2-QC236 3S2P 11.1V 4A	ZB1 BATT LI 3UR18650Y-2-QC236 S/P	BT.00603.016
BATTERY	BATTERY SONY LI-ION 6 CELL LIP6198QUPC SY6 3S2P 11.1V 4A	ZB1 BATT LI LIP6198QUPC S/P	BT.00604.007
BATTERY	BATTERY SIMPLO PACK LI-MN 6 CELL 916C4890F 3S2P 10.8V 4.0A	ZB1 BATT LI 916C4890F 3S2P S/P	BT.00607.001
BATTERY	"BATTERY PACK SANYO LI 8CELLI2.4 4.8Ah (4UR18650F-2-QC218,4S2P) ROHS"	ZB1 sanyo 8CELL 4.4A S/P	BT.00803.014
BATTERY	BATTERY PACK SONY LI-ION 8CELL2.4 4.8AH	ZB1 SONY 8CELL 4.4A S/P	BT.00804.011
<b>BOARD</b>			
BOARD	MODEM BOARDT60M893.03 LF (Foxconn Agere solution)	ZF1 MODEM 56K(MDC) T60M893.T00 S.P.	54.T72V7.001
BOARD	"Bluetooth T60H928 LF (Foxconn BRCM1018 , FOX_BRM_2.0-01)"	ZC1 FOX BLUETOOTH(T60H928.01)S/P	54.TAXV7.001
BOARD	MINI PCI WIRELESS BOARD 802.11 A/B/G MOW1 INTEL MM872612	ZC1 W/L 3945ABG MOW1 S/P	KI.GLN01.001
BOARD	MINI PCI WIRELESS BOARD 802.11 A/B/G MOW2 INTEL MM872659	ZC1 W/L 3945ABG MOW2 S/P	KI.GLN01.002
BOARD	MINI PCI WIRELESS BOARD 802.11 A/B/G ROW INTEL MM874511	ZC1 W/L 3945ABG ROW S/P	KI.GLN01.003
BOARD	MINI PCI WIRELESS BOARD 802.11 A/B/G JP INTEL MM874740	ZC1 W/L INT3945ABG_JAPAN S/P	KI.GLN01.004
BOARD	WIRELESS LAN BOARD 802.11BG INTEL WM3945AGBGGEN	ZC1 W/L 3945BG S/P	KI.GLN01.005
BOARD	TOUCHPAD BOARD W/AUDIO PORT	ZB2 TP&AUDIO BOARD ASSY S/P	55.TCFV7.001
DIGITAL LIGHT DEVICE	CCD MODULE W/CABLE 1.3M	ZC1 CCD MOUDLE W/CABLE S/P	57.AA7V7.001
DIGITAL LIGHT DEVICE	CCD MODULE W/CABLE 0.3M	ZB2 CCD MOUDLE0.3M W/ CABLE S/P	57.AB1V7.001
<b>CABLE</b>			

CATEGORY	PART NAME	DESCRIPTION	PART NO.
CABLE	MODEM CABLE	"ZB2 CABLE ASSY MODEM (2P/2P,1A) S/P"	50.TCFV7.001
CABLE	BLUETOOTH CABLE	ZB1 BLUETOOTH CABLE S/P	50.AA7V7.002
CABLE	FFC CABLE - TP TO MB	ZB1 CABLE TP/MB FFC S/P	50.AA7V7.003
CABLE	FFC CABLE - TP TO TP BOARD	ZB1 CABLE TP/B FFC S/P	50.AA7V7.004
CABLE	POWER CORD EU 3 PIN ROHS	ZB1 PWR CORD (CEE) S/P	27.TAXV7.002
CABLE	POWER CORD PRC (3 PIN)	ET2S POWER CORD S/P-PRC	27.A03V7.003
CABLE	POWER CORD (UK)	ET2S POWER CORD SPARE PART-UK	27.A03V7.004
CABLE	POWER CORD DANISH (3 PIN)	ET2S POWER CORD S/P-DANISH	27.A03V7.006
CABLE	POWER CORD AF-S (INDIA)	ZL6A POWER CORD S/P INDIA S.P.	27.A50V7.001
CABLE	POWER CORD ISRAEL (3 PIN)	ZL6A POWER CORD S/P-ISR S.P.	27.A50V7.002
CABLE	POWER CORD AU W/LABEL (3 PIN)	ZL6A POWER CORD S/P-AU S.P.	27.A50V7.003
CABLE	POWER CORD US-110V (BSMI)	ZL3E POWER CORD S/P-TWN	27.A99V7.002
CABLE	POWER CORD AF (3 PIN)	ZI5 POWER CORD S/P-AF	27.T48V7.001
CABLE	POWER CORD THAI	ZL3E POWER CORD S/P-THAI	27.A99V7.003
CABLE	POWER CORD SWISS 3 PIN	ZE1 POWER CORD 3P SWISS S.P.	27.A99V7.004
CABLE	POWER CORD ITALIAN 3PIN	EI2 POWER CORD 3P ITALY S.P.	27.A99V7.005
CABLE	POWER CORD JAPAN	ZB1 POWER CORD (JAPANESE) ROHS S/P	27.TAXV7.003
<b>CASE/COVER/BACKET ASSEMBLY</b>			
CASE/ COVER/ BRACKET ASSEMBLY	MIDDLE COVER	ZB1 AS K/B COVER ASSY S/P	42.AA7V7.001
CASE/ COVER/ BRACKET ASSEMBLY	"UPPER CASE W/TP,TP CABLE,MIC,LID CABLE"	ZB2 AS TOP ASSY S/P	60.AB1V7.001
CASE/ COVER/ BRACKET ASSEMBLY	LOWER CASE W/SPEAKER	ZB2 BASE ASSY S/P	60.TCFV7.002
CASE/ COVER/ BRACKET ASSEMBLY	HEATSINK COVER	ZB5 HS COVER ASSY S/P	42.TCFV7.001
CASE/ COVER/ BRACKET ASSEMBLY	BLUETOOTH BRACKET	ZB1 BLUETOOTH HOLDER S/P	33.AA7V7.001
CASE/ COVER/ BRACKET ASSEMBLY	DUMMY CARD	ZB1 CARDBUS DUMMY CARD S/P	42.AA7V7.011

CATEGORY	PART NAME	DESCRIPTION	PART NO.
<b>CPU/PROCESSOR</b>			
CPU/PROCESSOR	CPU INTEL YONAH CORE DUO FSB-667 1.66G 2M L8VR	ZC1 INTEL CPU YONAH 1.66G S/P	KC.23001.DTP
CPU/PROCESSOR	CPU INTEL YONAH CORE DUO FSB-667 1.83G 2M L8VQ	ZC1 INTEL CPU YONAH 1.83G S/P	KC.24001.DTP
CPU/PROCESSOR	CPU INTEL YONAH CORE DUO FSB-667 2.0G 2M L8VP	ZC1 INTEL CPU YONAH 2.0G S/P	KC.25001.DTP
CPU/PROCESSOR	CPU INTEL YONAH CORE DUO FSB-667 2.16G 2M L8VN	ZC1 INTEL CPU YONAH 2.16G S/P	KC.26001.DTP
<b>DVD RW DRIVE</b>			
DVD RW DRIVE	DVD/CDRW COMBO MODULE 24X	ZB2 COMBO MODULE S/P	6M.TCFV7.001
DVD RW DRIVE	"DVD COMBO,PHILIPS SCB5265 ,GB,LF"	ZB2 COMBO (SCB5265)FW:TX07 S/P	KO.02403.007
DVD RW DRIVE	DVD/CDRW (COMBO) UJDA770AC-A STN B/S	ZL7 DVD COMBO UJDA770AC-A BS S/P	KO.02406.013
COMBO DRIVE	CDRW/DVD COMBO DRIVE 24X HLDS GCC-4244N LF 1.00AB	ZB1 COMBO HLDS (GCC-4244N) F/W:1.00 LF S/P	KO.0240A.005
CASE/COVER/BRACKET ASSEMBLY	"ODD HOLDER FIX ZB1(EBZB1037,R3A)"	ZB1 ODD HOLDER FIX S/P	42.AA7V7.002
CASE/COVER/BRACKET ASSEMBLY	ZB1 ODD BEZEL ASSY G/B COMBO	ZB1 ODD BEZEL ASSY G/B S/P	42.AA7V7.005
DVD RW DRIVE	DVD SUPER MULTI MODULE	ZB2 SUPER MODULE MODULE	6M.TCFV7.002
DVD RW DRIVE	DVD SUPER MULTI HLDS GMA-4082N	ZB2 DVD SUPER MULTI DL GMA-4082N S/P	KU.0080D.021
DVD RW DRIVE	DVD SUPER MULTI HLDS GSA-4082N	ZB1 DVD SUPER MULTI DL4X GSA-4082N S/P	KU.0080D.017
DVD RW DRIVE	DVD SUPER MULTI PANASONIC UJ-850BAA-A FW1.5	ZC1 DVD SUPERMUTI PAN UJ850 S/P	KU.00807.025
DVD RW DRIVE	DVD SUPER MULTI PHILIPS SDVD-8821 F/W:EX02 LF	ZB2 DVD SUPER (SDVD8821)F/W:EX02 S/P	KU.00809.005
DVD RW DRIVE	DVD SUPER MULTI PIONEER DVR-K16RS LF	ZB2 DVD SUPERDRIVE(DL) DVR-K16RS STNS/P	KU.00805.029
DVD RW DRIVE	DVD SUPER MULTI LITE-ON SSM-8515S LF	ZB2 DVD(SUPER MULTI)SSM-8515S S/P	KU.00804.022
CASE/COVER/BRACKET ASSEMBLY	ODD HOLDER FIX ZB1	ZB1 ODD HOLDER FIX S/P	42.AA7V7.002
CASE/COVER/BRACKET ASSEMBLY	ZB1 ODD BEZEL ASSY G/B SUPER MULTI	ZB1 ODD BEZEL ASSY G/B SUPER MULTI S/P	42.AA7V7.007

CATEGORY	PART NAME	DESCRIPTION	PART NO.
DVD RW DRIVE	ZB2 PIO SUPER MULTI DVR-K06S W/O MB BS	ZB2 PIO SUPER MULTI DVR-K06S S/P	
DVD RW DRIVE	DVD SUPERDRIVE DVR-K06RS FW:1.01 STN B/S	ZB2 DVD SUPERDRIVE DVR-K06RS S/P	
CASE/COVER/BRACKET ASSEMBLY	ODD HOLDER FIX ZB1	ZB1 ODD HOLDER FIX S/P	42.AA7V7.002
CASE/COVER/BRACKET ASSEMBLY	ZB1 ODD BEZEL ASSY S/IN SM PIONEER	ZB2 ODD BEZEL ASSY S/IN SM PIONEER S/P	42.AA7V7.004
<b>HDD/HARD DISK DRIVE</b>			
HDD/HARD DISK DRIVE	60G HGST 2.5 4200RPM HAKONE-A F/W :A70G	ZL6C HDD 60G HGST S/P	KH.06007.009
HDD/HARD DISK DRIVE	80G HGST 2.5 4200RPM HAKONE-A F/W:A70G	ZL6C HDD 80G HGST S/P	KH.08007.011
HDD/HARD DISK DRIVE	"80G SEAGATE 2.5"" 4200RPM ST980829A LF N2.2 FW:3.06"	ZL6C HDD 80G SEAG LF S/P	KH.08001.021
HDD/HARD DISK DRIVE	HDD(100G)HTS421210H9AT00 0A26329 BSEU	ZE1 HDD 100G HGST S/P	KH.1007.002
HDD/HARD DISK DRIVE	HDD(120G)MK1234GAX CZK	ZB2 HDD(120G)MK1234GAX CZK S/P	
HDD/HARD DISK DRIVE	HDD(120G) ST9120821A 9W3884-188	ZL6C HDD 120G SEAG 3.06 LF S/P	KH.12001.024
HDD/HARD DISK DRIVE	HDD(60GB)MK6034GAX-CZK FW:AC101A	ZB2 HDD(60GB)MK6034GAX-CZK S/P	KH.06004.007
HDD/HARD DISK DRIVE	HDD(60G) ST96812A 9W3882-188	ZB1 HDD 60G ST96812A SEAGATE S/P	KH.06001.007
HDD/HARD DISK DRIVE	HDD(80G) WD800UE-22HCT0	ZL6C HDD 80G WD S/P	KH.08008.027
HDD/HARD DISK DRIVE	HDD(80GB)MK8032GAX CZK	ZB2 HDD(80GB)MK8032GAX CZK S/P	KH.08004.006
HDD/HARD DISK DRIVE	HDD(80G) ST98823A 9W3883-188	ZB2 HDD(80G) ST98823A 9W3883-188 S/P	KH.08001.022
HDD/HARD DISK DRIVE	HDD(80G)HTS541080G9AT00	ZL3 80G HDD HTS541080G9AT00 (HIT) S/P	KH.08007.013
HDD/HARD DISK DRIVE	HDD(100GB)MK1032GAX CZK	ZF3 HDD 100G MK1032GAX CZK TOSHIBA S/P	KH.10004.002
HDD/HARD DISK DRIVE	HDD(100G)HTS541010G9AT00	ZF3 HDD 100G 5.4R HTS541010G9AT00HGST SP	KH.10007.004
CASE/COVER/BRACKET ASSEMBLY	HDD BRACKET	ZB1 HDD BRACKET S/P	33.AA7V7.002
CASE/COVER/BRACKET ASSEMBLY	ZB1 HDD COVER ASSY	ZB1 HDD COVER ASSY S/P	42.AA7V7.008
<b>KEYBOARD</b>			
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON US International	ZL1C K/B NON ERGO-UI S.P.	KB.A2707.001
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Chinese	ZL1C K/B NON ERGO-TAIWAN S.P.	KB.A2707.002

CATEGORY	PART NAME	DESCRIPTION	PART NO.
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Spanish	ZL1C K/B NON ERGO-SPANISH S.P.	KB.A2707.003
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Thai	ZL1C K/B NON ERGO-THAI S.P.	KB.A2707.004
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Brazilian Protugese	ZL1C K/B NON ERGO-BRAZ PROTU S.P.	KB.A2707.005
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Korea	ZL1C K/B NON ERGO-KOREA S.P.	KB.A2707.006
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON UK	ZL1C K/B NON ERGO-U.K S.P.	KB.A2707.007
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON German	ZL1C K/B NON ERGO-GERMAN S.P.	KB.A2707.008
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Italian	ZL1C K/B NON ERGO-ITALIAN S.P.	KB.A2707.009
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON French	ZL1C K/B NON ERGO-FRENCH S.P.	KB.A2707.010
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Swiss/G	ZL1C K/B NON ERGO-SWISS/G S.P.	KB.A2707.011
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Portuguese	ZL1C K/B NON ERGO-PORTUG S.P.	KB.A2707.012
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Arabic	ZL1C K/B NON ERGO-ARABIC S.P.	KB.A2707.013
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Belgium	ZL1C K/B NON ERGO-BELGIUM S.P.	KB.A2707.014
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Sweden	ZL1C K/B NON ERGO-SWEDEN S.P.	KB.A2707.015
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Czech	ZL1C K/B NON ERGO-CZECH S.P.	KB.A2707.016
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Hungaian	ZL1C K/B NON ERGO-HUNG S.P.	KB.A2707.017
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Norway	ZL1C K/B NON ERGO-NORWAY S.P.	KB.A2707.018
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Danish	ZL1C K/B NON ERGO-DANISH S.P.	KB.A2707.019
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Turkish	ZL1C K/B NON ERGO-TURKISH S.P.	KB.A2707.020
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Canadian French	ZL1C K/B NON ERGO-CANA FREN S.P.	KB.A2707.021
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Japanese	ZL1C K/B NON ERGO-JAPAN S.P.	KB.A2707.022
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Greek	ZL1C K/B NON ERGO-GREEK S.P.	KB.A2707.023
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Hebrew	ZL1C K/B NON ERGO-HEBREW S.P.	KB.A2707.024
KEYBOARD	AS1680/AS1410 KEYBOARD DARFON Russian	ZL1C K/B NON ERGO-RUSS S.P.	KB.A2707.025
<b>LCD</b>			
LCD	LCD MODULE ASSY 15 IN. XGA W/ ANTENNA	ZB2 LCD (15 XGA) NGL TM W/O CCD S/P	6M.AB1V7.001
LCD	LCD 15.0 IN. XGA AUO B150XG02V.4 LF	ZL5 LCD AUO B150XGA02 V.4 S/P	LK.15005.010
LCD	LCD 15 IN. XGA SAMSUNG LTN150XB-L03-V LF	ZL8 LCD 15" LTN150XB-L03-V L/F S/P	LK.15006.008

CATEGORY	PART NAME	DESCRIPTION	PART NO.
LCD	LCD 15IN. XGA LPL LP150X08-TLA2 LF	ZL8 LCD 15" LP150X08-TLA2 LF S/P	LK.15008.019
LCD	LCD 15IN. XGA QDI QD15XL06 REV.03 LF	ZL5 LCD 15"QD15XL06 QDI S/P	LK.15009.008
LCD	LCD 15IN. XGA CMO N150X3-L09 VEV.C1	ZL6C LCD CMO N150X3-L09 S/P	LK.1500D.013
BOARD	LCD INVERTER BOARD	ZB1 INV MODULE S/P	19.AA7V7.001
CABLE	LCD CABLE - 15.0 IN.	ZB1 CABLE 15 ASSY S/P	50.TAJV7.001
CASE/ COVER/ BRACKET ASSEMBLY	LCD COVER - 15 IN. W/ANTENNA	"ZB1 AS 15"" LCD COVER ASSY BODENSEE S/P"	60.AB1V7.002
CASE/ COVER/ BRACKET ASSEMBLY	LCD BEZEL - 15 IN.	ZB1 LCD BEZEL 15 S/P	60.TAJV7.004
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15 IN. W/HINGE - L	ZB1 15 HINGE-L ASSY S/P	33.TAJV7.001
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15 IN. W/HINGE - R	ZB1 15 HINGE-R ASSY S/P	33.TAJV7.002
LCD	LCD MODULE ASSY 15.4 IN. WXGA NON-GLARE LF W/ANTENNA	ZB2 LCD (15.4WXGA) NGL TM W/O CCD S/P	6M.AB1V7.002
LCD	LCD 15.4 WXGA SAMSUNG LTN154X3-L01-100 LF	ZB1 LCD 15.4WXGA LTN15X3-L01-V1A4 SAM SP	LK.15406.014
LCD	LCD 15.4 IN. WXGA LPL LP154W01-TLA1 NON-G	ZL5 LCD LP154W01-TLA1 S/P	LK.15408.013
LCD	LCD 15.4 IN. WXGA AU B154EW02 V0 NON-GLARE	"ZB2 LCD(TFT)15.4""B154EW02 V0(WXGA) S/P"	LK.15405.013
LCD	LCD 15.4 IN. WXGA QDI QD15TL07-01 NON-GLARE 16MS	ZL6C LCD QDI QD15TL07-01 S/P	LK.15409.008
LCD	LCD 15.4 IN. WXGA CMO N154I2-L01 NON-GLARE	"ZB2 LCD(TFT)15.4""N154I2-L01(WXGA) S/P"	LK.1540D.011
BOARD	LCD INVERTER BOARD	ZB1 INV MODULE S/P	19.AA7V7.001
CABLE	LCD CABLE - 15.4 IN.	ZB1 CABLE ASSY S/P	50.AA7V7.011
CASE/ COVER/ BRACKET ASSEMBLY	LCD COVER - 15.4 IN. W/ANTENNA	"ZB1 AS 15.4"" LCD COVER ASSY S/P"	60.AA7V7.005
CASE/ COVER/ BRACKET ASSEMBLY	"ZL1 15.4""-WIDE LCD BEZEL ASSY"	ZB1 LCD BEZEL 15.4 S/P	60.TAJV7.006
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - L	"ZB1 15.4"" HINGE-L ASSY S/P"	33.AA7V7.003

CATEGORY	PART NAME	DESCRIPTION	PART NO.
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - R	"ZB1 15.4"" HINGE-R ASSY S/ P"	33.AA7V7.004
LCD	LCD MODULE ASSY 15.4 IN. WXGA GLARE LF W/ANTENNA	ZB2 LCD (15.4WXGA) GL TM W/O CCD S/P	6M.AB1V7.003
LCD	LCD 15.4 IN. WXGAG AU B154EW02 V1 GLARE 16MS	"ZB2 LCD(TFT)15.4""B154EW02 V1(WXGA) S/P"	LK.15405.014
LCD	LCD 15.4 IN. WXGA NB LCD QDI QDLCD TL07-02 GLARE 16MS	ZL6C LCD QDI QD15TL07-02 GLARE S/P	LK.15409.009
LCD	LCD 15.4 IN. WXGAG CMO N154I2-L02 GLARE 16MS	"ZB2 LCD(TFT)15.4""N154I2- L02(WXGA) S/P"	LK.1540D.012
BOARD	LCD INVERTER BOARD	ZB1 INV MODULE S/P	19.AA7V7.001
CABLE	LCD CABLE - 15.4 IN.	ZB1 CABLE ASSY S/P	50.AA7V7.011
CASE/ COVER/ BRACKET ASSEMBLY	LCD COVER - 15.4 IN. W/ANTENNA	"ZB1 AS 15.4"" LCD COVER ASSY S/P"	60.AA7V7.005
CASE/ COVER/ BRACKET ASSEMBLY	"ZL1 15.4""-WIDE LCD BEZEL ASSY"	ZB1 LCD BEZEL 15.4 S/P	60.TAJV7.006
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - L	"ZB1 15.4"" HINGE-L ASSY S/ P"	33.AA7V7.003
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - R	"ZB1 15.4"" HINGE-R ASSY S/ P"	33.AA7V7.004
LCD	LCD MODULE ASSY 15.4 IN. WXGA NON- GLARE LF W/CCD 1.3M	ZB2 LCD (15.4WXGA) NGL TM W/CCD1.3 S/P	6M.AB1V7.004
LCD	LCD 15.4 WXGA SAMSUNG LTN154X3- L01-100 LF	ZB1 LCD 15.4WXGA LTN15X3-L01-V1A4 SAM SP	LK.15406.014
LCD	LCD 15.4 IN. WXGA LPL LP154W01-TLA1 NON-G	ZL5 LCD LP154W01-TLA1 S/P	LK.15408.013
LCD	LCD 15.4 IN. WXGA AU B154EW02 V0 NON-GLARE	"ZB2 LCD(TFT)15.4""B154EW02 V0(WXGA) S/P"	LK.15405.013
LCD	LCD 15.4 IN. WXGA QDI QD15TL07-01 NON-GLARE 16MS	ZL6C LCD QDI QD15TL07-01 S/P	LK.15409.008
LCD	LCD 15.4 IN. WXGA CMO N154I2-L01 NON-GLARE	"ZB2 LCD(TFT)15.4""N154I2- L01(WXGA) S/P"	LK.1540D.011
BOARD	LCD INVERTER BOARD	ZB1 INV MODULE S/P	19.AA7V7.001
CABLE	LCD CABLE - 15.4 IN.	ZB1 CABLE ASSY S/P	50.AA7V7.011
CASE/ COVER/ BRACKET ASSEMBLY	LCD COVER - 15.4 IN. W/ANTENNA CCD MODULE	"ZB1 AS 15.4"" LCD COVER ASSY W-CCD S/P"	60.AA7V7.003



CATEGORY	PART NAME	DESCRIPTION	PART NO.
CASE/ COVER/ BRACKET ASSEMBLY	LCD BEZEL - 15.4 IN. FOR CCD N-UV	"ZB2 15.4"" LCD BEZEL ASSY W-CCD N-UV S/P"	60.TCFV7.005
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - L	"ZB1 15.4"" HINGE-L ASSY S/ P"	33.AA7V7.003
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - R	"ZB1 15.4"" HINGE-R ASSY S/ P"	33.AA7V7.004
LCD	LCD MODULE ASSY 15.4 IN. WXGAG GLARE LF W/CCD 1.3M	ZB2 LCD (15.4WXGA) TM W/ CCD1.3 GL S/P	6M.AB1V7.005
LCD	LCD 15.4 IN. WXGAG AU B154EW02 V1 GLARE 16MS	"ZB2 LCD(TFT)15.4""B154EW02 V1(WXGA) S/P"	LK.15405.014
LCD	LCD 15.4 IN. WXGA NB LCD QDI QDLCD TL07-02 GLARE 16MS	ZL6C LCD QDI QD15TL07-02 GLARE S/P	LK.15409.009
LCD	LCD 15.4 IN. WXGAG CMO N154I2-L02 GLARE 16MS	"ZB2 LCD(TFT)15.4""N154I2- L02(WXGA) S/P"	LK.1540D.012
BOARD	LCD INVERTER BOARD	ZB1 INV MODULE S/P	19.AA7V7.001
CABLE	LCD CABLE - 15.4 IN.	ZB1 CABLE ASSY S/P	50.AA7V7.011
CASE/ COVER/ BRACKET ASSEMBLY	LCD COVER - 15.4 IN. W/ANTENNA CCD MODULE	"ZB1 AS 15.4"" LCD COVER ASSY W-CCD S/P"	60.AA7V7.003
CASE/ COVER/ BRACKET ASSEMBLY	LCD BEZEL - 15.4 IN. FOR CCD N-UV	"ZB2 15.4"" LCD BEZEL ASSY W-CCD N-UV S/P"	60.TCFV7.005
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - L	"ZB1 15.4"" HINGE-L ASSY S/ P"	33.AA7V7.003
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - R	"ZB1 15.4"" HINGE-R ASSY S/ P"	33.AA7V7.004
LCD	LCD MODULE ASSY 15.4 IN. WXGA NON- GLARE LF W/CCD 0.3M	ZB2 LCD (15.4WXGA) NGL TM W/CCD0.3 S/P	6M.AB1V7.006
LCD	LCD 15.4 WXGA SAMSUNG LTN154X3- L01-100 LF	ZB1 LCD 15.4WXGA LTN15X3-L01-V1A4 SAM SP	LK.15406.014
LCD	LCD 15.4 IN. WXGA LPL LP154W01-TLA1 NON-G	ZL5 LCD LP154W01-TLA1 S/P	LK.15408.013
LCD	LCD 15.4 IN. WXGA AU B154EW02 V0 NON-GLARE	"ZB2 LCD(TFT)15.4""B154EW02 V0(WXGA) S/P"	LK.15405.013
LCD	LCD 15.4 IN. WXGA QDI QD15TL07-01 NON-GLARE 16MS	ZL6C LCD QDI QD15TL07-01 S/P	LK.15409.008
LCD	LCD 15.4 IN. WXGA CMO N154I2-L01 NON-GLARE	"ZB2 LCD(TFT)15.4""N154I2- L01(WXGA) S/P"	LK.1540D.011
BOARD	LCD INVERTER BOARD	ZB1 INV MODULE S/P	19.AA7V7.001

CATEGORY	PART NAME	DESCRIPTION	PART NO.
CABLE	LCD CABLE - 15.4 IN.	ZB1 CABLE ASSY S/P	50.AA7V7.011
CASE/ COVER/ BRACKET ASSEMBLY	"LCD COVER - 15.4 IN. W/ANTENNA ,CCD 0.3M"	"ZB2 AS 15.4"" LCD COVER ASSY W-CCD(0.3M) S/P"	60.AB1V7.003
CASE/ COVER/ BRACKET ASSEMBLY	LCD BEZEL - 15.4 IN. FOR CCD N-UV	"ZB2 15.4"" LCD BEZEL ASSY W-CCD N-UV S/P"	60.TCFV7.007
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - L	"ZB1 15.4"" HINGE-L ASSY S/ P"	33.AA7V7.003
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - R	"ZB1 15.4"" HINGE-R ASSY S/ P"	33.AA7V7.004
LCD	LCD MODULE ASSY 15.4 IN. WXGAG GLARE LF W/CCD 0.3M	ZB2 LCD (15.4WXGA)TM W/ CCD0.3 GL S/P	6M.AB1V7.007
LCD	LCD 15.4 IN. WXGAG AU B154EW02 V1 GLARE 16MS	"ZB2 LCD(TFT)15.4""B154EW02 V1(WXGA) S/P"	LK.15405.014
LCD	LCD 15.4 IN. WXGA NB LCD QDI QDLCD TL07-02 GLARE 16MS	ZL6C LCD QDI QD15TL07-02 GLARE S/P	LK.15409.009
LCD	LCD 15.4 IN. WXGAG CMO N154I2-L02 GLARE 16MS	"ZB2 LCD(TFT)15.4""N154I2- L02(WXGA) S/P"	LK.1540D.012
BOARD	LCD INVERTER BOARD	ZB1 INV MODULE S/P	19.AA7V7.001
CABLE	LCD CABLE - 15.4 IN.	ZB1 CABLE ASSY S/P	50.AA7V7.011
CASE/ COVER/ BRACKET ASSEMBLY	"LCD COVER - 15.4 IN. W/ANTENNA ,CCD 0.3M"	"ZB2 AS 15.4"" LCD COVER ASSY W-CCD(0.3M) S/P"	60.AB1V7.004
CASE/ COVER/ BRACKET ASSEMBLY	LCD BEZEL - 15.4 IN. FOR CCD N-UV	"ZB2 15.4"" LCD BEZEL ASSY W-CCD N-UV S/P"	60.TCFV7.007
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - L	"ZB1 15.4"" HINGE-L ASSY S/ P"	33.AA7V7.003
CASE/ COVER/ BRACKET ASSEMBLY	LCD BRACKET 15.4 IN. W/HINGE - R	"ZB1 15.4"" HINGE-R ASSY S/ P"	33.AA7V7.004
<b>MAINBOARD</b>			
MAINBOAR D	MAINBOARD 945PM M54P256 GLAN PATA NO-TV W/READER W/O CPU MEMORY	ZB2 MB ASSY (945PM/M54P/ 256M_32) S/P	
MAINBOAR D	MAINBOARD 945PM M52P256 GLAN PATA NO-TV W/READER W/O CPU MEMORY	ZB2 MB ASSY (945PM/M52P/ 256M_32) S/P	
MAINBOAR D	MAINBOARD 945PM M54P128 GLAN PATA NO-TV W/READER W/O CPU MEMORY	ZB2 MB ASSY (945PM/M54P/ 128M_16) S/P	

CATEGORY	PART NAME	DESCRIPTION	PART NO.
MAINBOARD	MAINBOARD 945PM M52P128 GLAN PATA NO-TV W/READER W/O CPU MEMORY	ZB2 MB ASSY (945PM/M52P/128M_16) S/P	MB.ACT06.002
MAINBOARD	MAINBOARD 940GM UMA PATA NO-TV W/READER W/O CPU MEMORY	ZB2 MB ASSY (945GM/UMA) S/P	MB.AB106.002
MAINBOARD	MAINBOARD 940GML UMA PATA NO-TV W/READER W/O CPU MEMORY	ZB2 MB ASSY (940GML/UMA) S/P	
MAINBOARD		ZB2 MB ASSY (945GML/UMA/W CARD/W CCD) S/P	
MAINBOARD		ZB2 MB ASSY (945PM/M52P/256M/CAED/CCD) S/P	
MAINBOARD		ZB2 MB ASSY (945PM/M52P/128M/CAED/CCD) S/P	
MAINBOARD		ZB2 MB ASSY (945PM/M54P/256M/CAED/CCD) S/P	
MAINBOARD		ZB2 MB ASSY (945PM/M54P/128M/CAED/CCD) S/P	
MAINBOARD		ZB2 MB ASSY (945GM/UMA/W CARD/W CCD) S/P	
<b>MEMORY</b>			
MEMORY	SO-DIMM DDRII533 256MB NT256T64UH4A1FN-37B LF	ZB1 RAM DDRII5 256M NANYA S/P	KN.25603.029
MEMORY	SO-DIMM DDRII533 256MB M470T3354CZ3-CD5 LF (Pb-free)	ZB1 RAM DDRII533 256MB SAMSUNG S/P	KN.2560B.017
MEMORY	SDIMM 256M MICRON MT4HTF3264HY-53EB4	ZB2 RAM(256M)DDR2 S/P	KN.25604.030
MEMORY	SO-DIMM DDRII533 512MB NT512T64UH8A1FN-37B LF	ZB1 RAM(512M)DDR2 NANYA S/P	KN.51203.023
MEMORY	SDIMM 512M SAMSUNG M470T6554CZ3-CD5	ZB1 RAM DDRII533 512MB SAMSUNG S/P	KN.5120B.015
MEMORY	SDIMM 512M ELPIDA GU33512AGEPN612C	ZB2 RAM(512M)DDR2 S/P	KN.51209.005
MEMORY	SDIMM 512M HYNIX HYMP564S64BP6-C4	ZB2 RAM(512M)DDR2 S/P	KN.5120G.013
<b>HEATSINK</b>			
HEATSINK	THERMAL MODULE - DISCRETE	ZB2 THERMAL MODULE ASSY(ATI) S/P	60TCFV7.008
HEATSINK	THERMAL MODULE - UMA	ZB2 THERMAL MODULE ASSY(UMA) S/P	60TCJV7.001
<b>MISCELLANEOUS</b>			
MISCELLANEOUS	NAMEPLATE - AS5600	ZB2 NAMEPLATE AS5600 S/P	40.AB1V7.001
MISCELLANEOUS	RUBBER FOOT - LOWER CASE	ZL1A RUBBER FOOT S.P.	47.T50V7.002
MISCELLANEOUS	RUBBER FOOT - HEATSINK COVER	ZB1 BASE RUBBER FOOT S/P	47.AA7V7.001
MISCELLANEOUS	LCD RUBBER PAD-UP	ZL1A RUBBER PAD-UP S.P.	47.AA7V7.002
<b>SPEAKER</b>			
SPEAKER	SPEAKER SET	ZB1 SPEAKER ASSY S/P	23.AA7V7.001
<b>SCREW</b>			
SCREW	SCREW M3*0.5+3.5I	HW1 SCREW KIT ASSY S.P	86.TCFV7.001

CATEGORY	PART NAME	DESCRIPTION	PART NO.
SCREW	SCWER M2.5*3.0-I(BNI)(NYLOK)EP	ZB1 SCWER M2.5*3.0-I(BNI)(NYLOK)EP S/P	86.T25V7.012
SCREW	SCREW M2.0*3.0-I-NI-NYLOK	EF6 SCREW KIT S/P	86.TCFV7.002
SCREW	SCREW M2.0*3.0-I(NI)(NYLOK)	CT8B LCD SCREWS S/P	86.TCFV7.003
SCREW	SCREW M2.5*6-I(BNI)(NYLOK)	ZB1 SCREW M2.5*6-I(BNI)(NYLOK)S/P	86.A08V7.004
SCREW	SCREW M2.5*6.0-P(NI)(NYLOK)	ZB1 SCREW M2.5*6.0-P(NI)(NYLOK)S/P	86.AA7V7.003
SCREW	SCREW M2.5*5.0-I(NI)(NYLOK)	ZB1 SCREW M2.5*5.0-I(NI)(NYLOK) S/P	86.T23V7.010
SCREW	SCREW M2.0*5-I(NI)(NYLOK)	ZB1 SCREW M2.0*5-I(NI)(NYLOK) S/P	86.T23V7.006

